J07L_8Q42-EA-01F.book Page 1 Tuesday, March 5, 2002 3:14 PM

A Word to Mazda Owners

Thank you for choosing a Mazda. We at Mazda design and build vehicles with complete customer satisfaction in mind.

To help ensure enjoyable and trouble-free operation of your Mazda, read this manual carefully and follow its recommendations.

An Authorized Mazda Dealer knows your vehicle best. So when maintenance or service is necessary, that's the place to go.

Our nationwide network of Mazda professionals is dedicated to providing you with the best possible service.

We assure you that all of us at Mazda have an ongoing interest in your motoring pleasure and in your full satisfaction with your Mazda product.

Mazda Motor Corporation HIROSHIMA, JAPAN

Important Notes About This Manual

Keep this manual in the glove box as a handy reference for the safe and enjoyable use of your Mazda. Should you resell the vehicle, leave this manual with it for the next owner.

All specifications and descriptions are accurate at the time of printing. Because improvement is a constant goal at Mazda, we reserve the right to make changes in specifications at any time without notice and without obligation.

Air Conditioning and the Environment

Your Mazda's genuine air conditioner is filled with R134a, a refrigerant that has been found not to damage the earth's ozone layer. If the air conditioner does not operate properly, consult an Authorized Mazda Dealer.

Please be aware that this manual applies to all models, equipment and options. As a result, you may find some explanations for equipment not installed on your vehicle.

©2001 Mazda Motor Corporation Printed in Japan Apr. 2002(Print5)

J07L_8Q42-EA-01F.book Page 2 Tuesday, March 5, 2002 3:14 PM

How to Use This Manual

We want to help you get the most driving pleasure from your vehicle. Your owner's manual, when read from cover to cover, can do that in many ways.

Illustrations complement the words of the manual to best explain how to enjoy your Mazda. By reading your manual, you can find out about the features, important safety information, and driving under various road conditions.



The above symbol in this manual means "Do not do this " or "Do not let this happen".

Form No. 8Q42-EA-01F

Index: A good place to start is the Index, an alphabetical listing of all information in your manual.

You'll find several WARNINGs, CAUTIONs, and NOTEs in the manual.

∆ WARNING

A WARNING indicates a situation in which serious injury or death could result if the warning is ignored.

CAUTION

A CAUTION indicates a situation in which bodily injury or damage to your vehicle, or both, could result if the caution is ignored.

NOTE

A NOTE provides information and sometimes suggests how to make better use of your vehicle.



The above symbol, located on some parts of the vehicle, indicates that this manual contains information related to the part. Please refer to the manual for a detailed explanation. J07L_8Q42-EA-01F.book Page 3 Tuesday, March 5, 2002 3:14 PM

۲

Table of Contents

Your Vehicle at a Glance Interior, exterior views and part identification of your Mazda.	1
Essential Safety Equipment Use of safety equipment, including seats, seat belt system, SRS air bags and child-restraint systems.	2
Knowing Your Mazda Explanation of basic operations and controls; opening/closing and adjustment of various parts.	3
Before Driving Your Mazda Important information about driving your Mazda.	4
Driving Your Mazda Explanation of instruments and controls.	5
Interior Comfort Use of various features for drive comfort, including air-conditioning and audio system.	6
In Case of an Emergency Helpful information on what to do in an emergency.	7
Maintenance and Care How to keep your Mazda in top condition.	8
Customer Information Important consumer information including warranties and add-on equipment.	9
Specifications Technical information about your Mazda.	10
Index	11

Form No. 8Q42-EA-01F

-•

J07L_8Q42-EA-01F.book Page 4 Tuesday, March 5, 2002 3:14 PM

 $\overline{\bullet}$

 
•



J07L_8Q42-EA-01F.book Page 1 Tuesday, March 5, 2002 3:14 PM

Í


۲



Your Vehicle at a Glance


Interior, exterior views and part identification of your Mazda.


Dashboard Overview		2
Interior Overview	1- 3	3
Exterior Overview		4

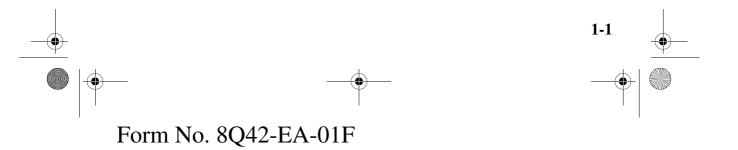



J07L_8Q42-EA-01F.book Page 2 Tuesday, March 5, 2002 3:14 PM

 Your Vehicle at a Glance Dashboard Overview

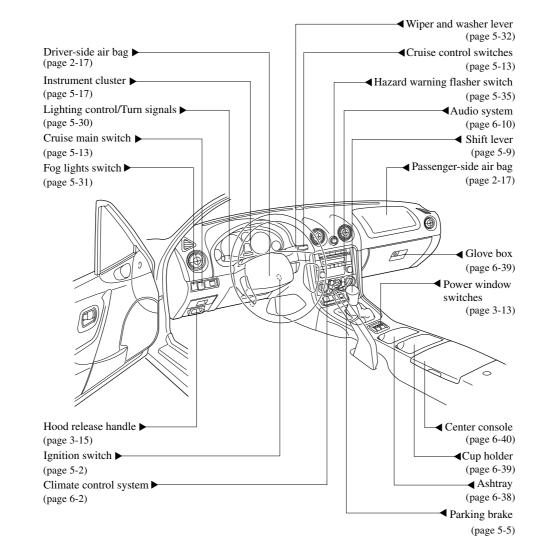



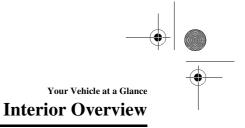

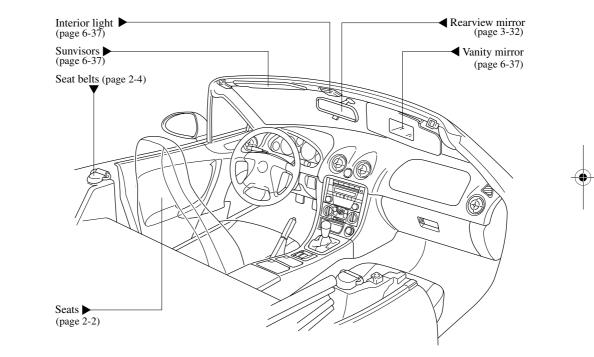




J07L_8Q42-EA-01F.book Page 4 Tuesday, March 5, 2002 3:14 PM

Your Vehicle at a Glance Exterior Overview


•

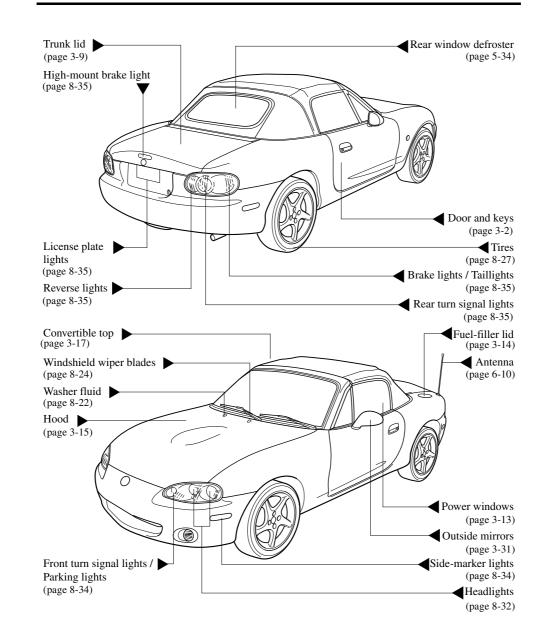



Form No. 8Q42-EA-01F

 J07L_8Q42-EA-01F.book Page 1 Tuesday, March 5, 2002 3:14 PM






۲

Essential Safety Equipment

Use of safety equipment, including seats, seat belt system, SRS air bags and child-restraint systems.

Seats	
Seats	
Seat Belt Systems	
Seat Belt Precautions	
3-Point Type Seat Belt	
Seat Belt Pretensioner and Load Limiting Systems	
Seat Belt Extender	
Seat Belt Warning Light	
Seat Belt Warning Beep	
Child Restraint	
Child Restraint Precautions	
Installing a Child-Restraint System	2-16
SRS Air Bags	2-17
Supplemental Restraint Systems (SRS) Precautions	2-17
Passenger-Side Air Bag Deactivation Switch	
Air Bag System Description	



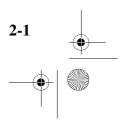

J07L_8Q42-EA-01F.book Page 2 Tuesday, March 5, 2002 3:14 PM

Essential Safety Equipment Seats

Seats

A WARNING

Securing the Seats:


Adjustable seats and seatbacks that are not securely locked are dangerous. In a sudden stop or collision, the seat or seatback could move, causing injury. Make sure the adjustable components of the seat are locked in place by attempting to slide the seat forward and backward and rocking the seatback.

▼ Seat Slide


A WARNING

Driver's Seat Adjustment:

Adjusting the driver's seat while the vehicle is moving is dangerous. The driver could lose control of the vehicle and have an accident. Adjust the driver's seat only when the vehicle is stopped. To move a seat forward or backward, raise the lever and slide the seat to the desired position and release the lever.

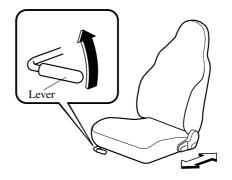

Make sure the lever returns to its original position and the seat is locked in place by attempting to push it forward and backward.

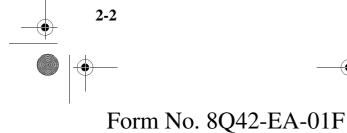

J07L_8Q42-EA-01F.book Page 3 Tuesday, March 5, 2002 3:14 PM



▼ Seat Recline


\land WARNING

<u>Reclining:</u>

Sitting in a reclined position while the vehicle is moving is dangerous because you don't get the full protection from seat belts. During sudden braking or a collision, you can slide under the lap belt and suffer serious internal injuries. For maximum protection, sit well back and upright.

Unlocked Seatback:


A seatback plays an important role in your protection in a vehicle. Leaving the seatback unlocked is dangerous as it can allow passengers to be ejected or thrown around and baggage to strike occupants in a sudden stop or collision, resulting in severe injury. After adjusting the seatback at any time, even when there are no other passengers, rock the seatback to make sure it is locked in place. To change the seatback angle, lean forward slightly while raising the lever. Then lean back to the desired position and release the lever.

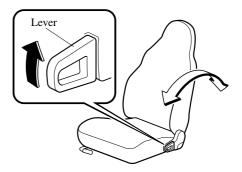

Make sure the lever returns to its original position and the seatback is locked in place by attempting to push it forward and backward.

CAUTION

 When returning a rear-reclined seatback to its upright position, make sure you support the seatback while operating the seatback lever. If the seatback is not supported, it will flip forward suddenly and could cause injury.



Form No. 8Q42-EA-01F

J07L_8Q42-EA-01F.book Page 4 Tuesday, March 5, 2002 3:14 PM

Essential Safety Equipment Seat Belt Systems

Seat Belt Precautions

Seat belts help to decrease the possibility of severe injury during accidents and sudden stops. Mazda recommends that the driver and all passengers always wear seat belts.

All of the seat belt retractors are designed to keep the lap/shoulder belts out of the way when not in use.

The driver's seat belt has no provisions for child-restraint systems and has only an emergency locking mode. The driver may wear it comfortably, and it will lock during a collision.

However, the passenger's seat lap/shoulder belt retractors operate in two modes: emergency locking mode, and for child-restraint systems, automatic locking mode.



J07L_8Q42-EA-01F.book Page 5 Tuesday, March 5, 2002 3:14 PM

Essential Safety Equipment Seat Belt Systems

☆ WARNING

Not Wearing Seat Belts:

Not wearing a seat belt is extremely dangerous. During a collision, occupants not wearing seat belts could hit someone or things inside the vehicle or even be thrown out of the vehicle. They could be seriously injured or even killed. In the same collision, occupants wearing seat belts would be much safer. Always wear your seat belt and make sure all occupants are properly restrained.

Seat Belt Damaged During an Accident:

Using a damaged seat belt is dangerous. An accident could damage the belt webbing of the seat belt in use. A damaged seat belt cannot provide adequate protection in a collision. Have an Authorized Mazda Dealer inspect all seat belt systems in use during an accident before they are used again.

Twisted Seat Belts:

 
Twisted seat belts are dangerous. In a collision, the full width of the belt isn't available to absorb the impact. This puts more force on the bones beneath the belt, which could break them or cause other serious injury or death. Don't wear twisted seat belts.

One Belt, One Passenger:

Using one seat belt for more than one person at a time is dangerous. A seat belt used in this way can't spread the impact forces properly and the two passengers could be crushed together and seriously injured or even killed. Never use one belt for more than one person at a time.

CAUTION

Belt retraction may become difficult if the belts and rings are soiled, so try to keep them clean.





Form No. 8Q42-EA-01F

J07L_8Q42-EA-01F.book Page 6 Tuesday, March 5, 2002 3:14 PM

Essential Safety Equipment Seat Belt Systems

▼ Pregnant Women and Persons with Serious Medical Conditions

Pregnant women should wear seat belts. Ask your doctor for specific recommendations. The lap belt should be worn SNUGLY AND AS LOW AS POSSIBLE OVER THE HIPS. Persons with serious medical conditions also should wear seat belts. Check with your doctor for any special instructions regarding specific medical conditions.

VEmergency Locking Mode

If the belt has fully retracted, it will always be in the emergency locking mode until you move it into automatic locking mode by pulling the belt all the way out to its full length. In the emergency locking mode, the belt remains comfortable on the occupant and the retractor will lock in position during a collision.

If the belt feels tight and hinders comfortable movement while the vehicle is stopped or in motion, you may be in the automatic locking mode because you have pulled the belt too far out. To return to the more comfortable emergency locking mode, wait until you can stop the vehicle in a safe area, retract the belt fully to convert it back to emergency locking mode and then again extend it around you.

▼ Automatic Locking Mode

Always use the automatic locking mode to keep the child-restraint system from shifting to an unsafe position in the event of an accident. To get the seat belt into the automatic locking mode, pull it all the way out and connect it as instructed on the child-restraint system. It will retract down to the child-restraint system and stay locked on it. See the section on child restraint (page 2-13).




J07L_8Q42-EA-01F.book Page 7 Tuesday, March 5, 2002 3:14 PM


3-Point Type Seat Belt

▼ Fastening the Seat Belts

- 1. Grasp the buckle and tongue.
- 2. Slowly pull out the lap/shoulder belt.

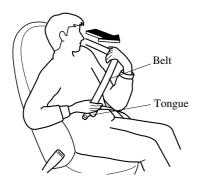

3. Insert the tongue into the buckle until you hear a click.

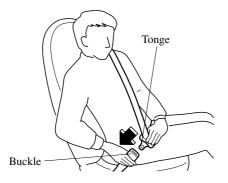


Essential Safety Equipment Seat Belt Systems

WARNING

<u>Positioning the Shoulder Portion of</u> <u>the Seat Belt:</u>

Improper positioning of the shoulder portion of the seat belt is dangerous. An improperly positioned belt will provide little or no protection in a collision. Always make sure the shoulder portion of the seat belt is positioned across your shoulder and near your neck, but never under your arm, on your neck, or on your upper arm.

4. Make sure the shoulder belt is snugly fitted against your body.

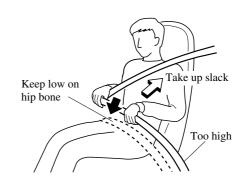

WARNING

Positioning the Lap Portion of the Seat Belt:

The lap portion of the seat belt worn too high is dangerous. In a collision, this would concentrate the impact force directly on the abdominal area, causing serious injury. Wear the lap portion of the belt snugly and as low as possible.




J07L_8Q42-EA-01F.book Page 8 Tuesday, March 5, 2002 3:14 PM

Essential Safety Equipment Seat Belt Systems

▼ Unfastening the Seat Belts

Depress the button on the buckle.

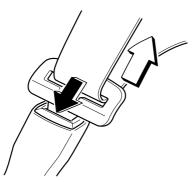


NOTE

2-8

If a belt does not fully retract, inspect it for kinks and twists.

To secure the passenger's seat belt when not in use, insert the belt tongue into the slot.

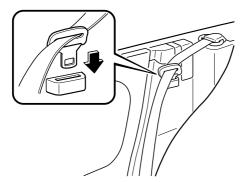

Seat Belt Pretensioner and Load Limiting Systems

For optimum protection, the driver and passenger seat belts are equipped with pretensioner and load limiting systems. In moderate or greater frontal or nearfrontal accidents, the air bag and pretensioner systems deploy simultaneously. The pretensioners take up slack in the seat belts as the air bags are expanding. The load limiting system releases belt webbing in a controlled manner to reduce belt force on the occupant's chest.

Form No. 8Q42-EA-01F

J07L_8Q42-EA-01F.book Page 9 Tuesday, March 5, 2002 3:14 PM

∆ WARNING

Incorrect Positioning of the Driver and Passenger Seat Belts: Incorrect positioning of the driver and passenger seat belts is dangerous. Without proper positioning, the pretensioner and load limiting systems cannot provide adequate protection in an accident and this could result in serious injury. Wear seat belts only as recommended in this owner's manual.

Expended Seat Belt Pretensioners: Use of front seat belts with the pretensioner system expended is dangerous.

The seat belt pretensioners will only function once. After they are expended, they will not work again and must be replaced immediately, even if there was no front seat occupant seated at the time. If the seat belt pretensioners are not replaced, the risk of injury in a collision will increase. Always have an Authorized Mazda Dealer inspect and replace the seat belt pretensioners after a collision.

<u>Modification or Testing of the</u> <u>Pretensioner System:</u>

Modifying the components or wiring of the pretensioner system, including the use of electronic testing devices is dangerous. You could accidentally activate it or make it inoperable which would prevent it from activating in an accident. The occupants could be seriously injured. Never modify the components or wiring, or use electronic testing devices on the pretensioner system.

Essential Safety Equipment Seat Belt Systems

A WARNING

<u>Pretensioner System Disposal:</u> Improper disposal of the pretensioner system or a vehicle with nondeactivated pretensioners is dangerous. Unless all safety procedures are followed, injury could result. Ask an Authorized Mazda Dealer how to safely dispose of the pretensioner system or how to scrap a pretensioner-equipped vehicle.

NOTE

- The pretensioner system will only activate in a moderate or greater frontal or near-frontal collision. It will not activate in side or rear impacts.
- Some smoke (non-toxic gas) will be released when the air bags and pretensioners deploy. This does not indicate a fire. This gas normally has no effect on occupants, however, those with sensitive skin may experience light skin irritation. If residue from the deployment of the air bags or the pretensioner system gets on the skin or in the eyes, wash it off as soon as possible.

2-9

J07L_8Q42-EA-01F.book Page 10 Tuesday, March 5, 2002 3:14 PM

Essential Safety Equipment Seat Belt Systems

▼ Air Bag/Seat Belt Pretensioner Systems Warning Light



If the air bag/seat belt pretensioner system is OK, the warning light comes on when the ignition switch is turned to the ON position or after the engine is cranked. After about 6 seconds it goes out.

A system malfunction is indicated when the warning light constantly flashes, stays on or doesn't come on at all. If any of these occur, consult an Authorized Mazda Dealer as soon as possible. The system may not work in an accident.

A WARNING

Self-Servicing the Air Bag/

<u>Pretensioner Systems:</u> Self-servicing or tampering with the systems is dangerous. An air bag/ pretensioner could accidentally activate or become disabled. This could cause serious injuries. Never tamper with the systems and always have an Authorized Mazda Dealer perform all servicing and repairs.

Form No. 8Q42-EA-01F

Seat Belt Extender

If your seat belt is not long enough, even when fully extended, a seat belt extender may be available to you at no charge from your Authorized Mazda Dealer. This extender will be only for you and for the particular vehicle and seat. Even if it plugs into other seat belts, it may not hold in the critical moment of a crash. When ordering an extender, only order one that provides the necessary additional length to fasten the seat belt properly. Please contact your Authorized Mazda Dealer for more information.

2-10

J07L_8Q42-EA-01F.book Page 11 Tuesday, March 5, 2002 3:14 PM

WARNING

<u>Unnecessary Use of an Extender:</u> Using a seat belt extender when not necessary is dangerous. The seat belt will be too long and not fit properly. In an accident, the seat belt will not provide adequate protection and you could be seriously injured. Only use the extender when it is required to fasten the seat belt properly.

 
<u>Using an Improper Extender:</u> Using a seat belt extender that is for another person or a different vehicle or seat is dangerous. The seat belt will not provide adequate protection and the user could be seriously injured in an accident. Only use the extender provided for you and for the particular vehicle and seat. NEVER use the extender in a different vehicle or seat.

Using an Extender That is Too Long: Using an extender that is too long is dangerous. The seat belt will not fit properly. In an accident, the seat belt will not provide adequate protection and you could be seriously injured. Don't use the extender or choose one shorter in length if the distance between the extender's buckle and the center of the user's body is less than 15cm (6 in). Essential Safety Equipment Seat Belt Systems

Seat Belt Warning Light



If the driver's seat belt is not fastened when the ignition switch is turned to the ON position, the seat belt warning light will remain on until the belt is fastened. If the system does not operate correctly, consult an Authorized Mazda Dealer.




✓ J07L_8Q42-EA-01F.book Page 12 Tuesday, March 5, 2002 3:14 PM

Essential Safety Equipment Seat Belt Systems

(\$)

Seat Belt Warning Beep

If the driver's seat belt is not fastened when the ignition switch is turned to the ON position, a beep will sound for about 6 seconds.

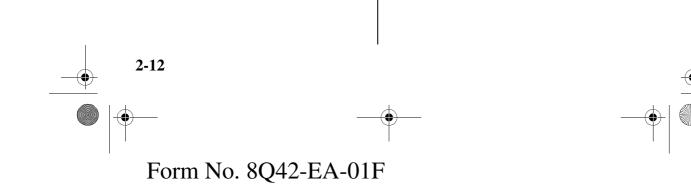

J07L_8Q42-EA-01F.book Page 13 Tuesday, March 5, 2002 3:14 PM

Essential Safety Equipment Child Restraint

Child Restraint Precautions

Mazda strongly urges the use of child-restraint systems for children small enough to use them.

You are required by law to use a child-restraint system for children in the U.S. and Canada. Small children, generally those who are four years old or younger and who weigh under 18 kg (40 lb), riding in your vehicle, must be protected by child-restraint systems made especially for children.

Check your local and state or provincial laws for specific requirements regarding the safety of children riding in your vehicle.

Whatever child-restraint system you consider, please pick the appropriate one for the age and size of the child, obey the law and follow the instructions that come with the individual child-restraint system.

A child who has outgrown child-restraint systems should use seat belts, both lap and shoulder. If the shoulder belt crosses the neck or face, move the child closer to the center.

A rear-facing child-restraint system should **NEVER** be used in the front seat because it would be too close to the air bag. The passenger's seat is also the least preferred seat for other child-restraint systems.

We have provided a deactivation switch that will disable passenger-side air bag inflation. Do not switch off the passenger-side air bag without reading the "Passenger-Side Air Bag Deactivation Switch" (page 2-20).

WARNING

Proper Size of Child-Restraint System:

For effective protection in vehicle accidents and sudden stops, a child must be properly restrained using a seat belt or child-restraint system depending on age and size. If not, the child could be seriously injured or even killed in an accident.

2 - 13

J07L_8Q42-EA-01F.book Page 14 Tuesday, March 5, 2002 3:14 PM

Essential Safety Equipment Child Restraint

Follow the Manufacturer's Instructions and Always Keep the Child-Restraint System Buckled Down:

 
An unsecured child-restraint system is dangerous. In a sudden stop or a collision it could move causing serious injury or death to the child or other occupants. Make sure the child-restraint system is properly secured in place according to the child-restraint system manufacturer's instructions. When not in use, remove it from the vehicle or fasten it with a seat belt.

Holding a Child While the Vehicle is Moving:

Holding a child in your arms while the vehicle is moving is extremely dangerous. No matter how strong the person may be, he or she cannot hold onto a child in a sudden stop or collision and it could result in serious injury or death to the child or other occupants. Even in a moderate accident, the child may be exposed to air bag forces that could result in serious injury or death to the child may be slammed into the adult, injuring the adult. Always secure a child in a proper child-restraint system.

<u>Rear-Facing Child-Restraint System:</u>

When a rear-facing child-restraint system is installed on the passenger's seat and the passenger-side air bag deactivation switch is not in the OFF position, it is extremely dangerous. In an accident, the air bag could inflate and cause serious injuries or even death to the child in the rear-facing child-restraint system. When using a rear-facing child-restraint system, always set the passenger-side air bag deactivation switch to OFF position.





One Belt, One Passenger:

Using one seat belt for more than one person at a time is dangerous. A seat belt used in this way can't spread the impact forces properly and the two passengers could be crushed together and seriously injured or even killed. Never use one belt for more than one person at a time.



J07L_8Q42-EA-01F.book Page 15 Tuesday, March 5, 2002 3:14 PM

Essential Safety Equipment

WARNING

Child-Restraint Tether:

Using a child-restraint system that requires a tether is dangerous. Your Mazda doesn't have a child-restraint tether. The child-restraint system cannot be properly secured. In a collision, it could move and cause serious injury or even death to the child or someone else. Always use a child-restraint system designed for use without a tether.

A seat belt or child-restraint system can become very hot in a closed vehicle during warm weather. To avoid burning yourself or a child, check them before you or your child touches them.



J07L_8Q42-EA-01F.book Page 16 Tuesday, March 5, 2002 3:14 PM

Essential Safety Equipment Child Restraint

Installing a Child-Restraint System

The passenger lap/shoulder belt can easily be converted into the automatic locking mode, which must be done to hold the child-restraint system.

Follow these instructions when installing a child-restraint system on the passenger's seat.

Before installing a rear-facing childrestraint system, the passenger-side air bag must be deactivated (page 2-20).

NOTE

2-16

Before installing a child-restraint system, refer to "Passenger-Side Air Bag Deactivation Switch" (page 2-20).

1. Slide the seat as far back as possible.



- 2. Secure the child-restraint system with the lap portion of the lap/shoulder belt. See the instructions on the childrestraint system for belt routing instructions.
- 3. To get the retractor into the automatic locking mode, pull the shoulder belt portion of the seat belt until the entire length of the belt is out of the retractor.

4. Push the child-restraint system firmly into the vehicle seat. Be sure the belt retracts as snugly as possible. Clicking from the retractor will be heard during retraction if the system is in automatic locking mode. If the belt does not lock the seat down tight, repeat this step.

NOTE

- Inspect this function before each use of the child-restraint system. You should not be able to pull the shoulder belt out of the retractor while the system is in the automatic locking mode. When you remove the child-restraint system, be sure the belt fully retracts to return the system to emergency locking mode before occupants use the seat belts.
- Follow the child-restraint system manufacturer's instruction carefully. Depending on the type of child-restraint system, it may not employ seat belts which are in automatic locking mode.

J07L_8Q42-EA-01F.book Page 17 Tuesday, March 5, 2002 3:14 PM



Supplemental Restraint Systems (SRS) Precautions

Read this owner's manual carefully to verify what air bags (driver-side air bag, passengerside air bag) are equipped in your vehicle.

The supplemental restraint systems (SRS) include 2 air bags. They are located in:

- The steering wheel
- The passenger side dashboard

In a front-end or near-front end impact, the air bag supplemental restraint systems are designed to provide only supplemental protection for the driver and passenger. Seat belts must still be worn.

Without seat belt usage, the air bags cannot provide adequate protection during an accident. Seat belt usage is necessary to:

- Keep the passenger away from an inflating air bag.
- Reduce the possibility of injuries during an accident that is not designed for air bag inflation, such as roll-over or rear impact.
- Reduce the possibility of injuries in frontal collisions that are not severe enough to activate the air bags.
- Reduce the possibility of being thrown from your vehicle.
- Reduce the possibility of injuries to lower body and legs during an accident because the air bags provide no protection to these parts.
- Hold the driver in a position which allows better control of the vehicle.

Small children, those under 18 kg (40 lb), should be protected by a child-restraint system (page 2-13).

We have provided a deactivation switch that will disable passenger-side air bag inflation. Do not switch off the passenger-side air bag without reading the "Passenger-Side Air Bag Deactivation Switch" (page 2-20).

J07L_8Q42-EA-01F.book Page 18 Tuesday, March 5, 2002 3:14 PM

Essential Safety Equipment SRS Air Bags

A WARNING

 
<u>Air Bags without Seat Belts:</u>

Depending only on the air bags for protection during an accident is dangerous. Alone, air bags may not prevent serious injuries. The appropriate air bags can be expected to inflate only during a frontal, near-frontal collision of at least moderate force. Vehicle occupants should always wear seat belts.

Rear-Facing Child-Restraint System:

When a rear-facing child-restraint system is installed on the passenger's seat and the passenger-side air bag deactivation switch is not in the OFF position, it is extremely dangerous. In an accident, the air bag could inflate and cause serious injuries or even death to the child in the rear-facing child-restraint system. When using a rear-facing child-restraint system, always set the passenger-side air bag deactivation switch to OFF position.

Deploying air bag



Seating Position with Air Bags:

Sitting too close to the air bag storage compartments or placing hands or feet on them is extremely dangerous. Air bags inflate with great force and speed. Serious injuries could occur if someone is too close. The driver should always hold onto only the rim of the steering wheel. The passenger should keep both feet on the floor. Seat occupants should adjust their seats as far back as possible and always sit upright against the seatbacks with seat belts worn properly.

<u>Air Bag Storage Areas:</u>

Attaching an object to an air bag storage area or placing something in front of it is dangerous. In an accident, the object could interfere with air bag inflation and injure the occupants.

Always keep the air bag storage areas free of objects.

Hot Air Bag Inflators:

Hot air bag inflators are dangerous. Immediately after inflation, the inflators in the steering wheel or the dashboard are very hot. You could get burned. Don't touch the internal components of the air bag storage areas after the bags have inflated.

2 - 18

J07L_8Q42-EA-01F.book Page 19 Tuesday, March 5, 2002 3:14 PM



WARNING

Installation of Front-End Equipment:

Installation of front-end equipment, such as frontal protection bar (kangaroo bar, bull bar, push bar, etc.), snowplow, or winches, is dangerous. The air bag crash sensor system could be affected. This could cause air bags to inflate unexpectedly, or it could prevent the air bags from inflating during an accident. Occupants could be seriously injured. Never install any front-end equipment to your vehicle.

Suspension Adjustment:

 
Adjusting the vehicle suspension is dangerous. If the vehicle's height or the suspension is changed, the vehicle will be unable to accurately detect a collision resulting in incorrect or unexpected air bag deployment and the possibility of serious injuries.

Modification of the Supplemental Restraint System:

Modifying the components or wiring of the supplemental restraint system is dangerous. You could accidentally activate it or make it inoperable. Don't make any modifications to the supplemental restraint system. This includes installing trim, badges, or anything else over the air bag storage areas. It also includes installing extra electric equipment on or near system components or wiring.

NOTE

- When an air bag deploys, a loud inflation noise can be heard and some smoke will be released. Neither is likely to cause injury, however, the texture of the air bags may cause light skin injuries on body parts not covered with clothing through friction.
- Should you sell your Mazda, we urge you to tell the new owner of its air bag systems and that familiarization with all instructions about them, from the Owner's Manual, is important.



J07L_8Q42-EA-01F.book Page 20 Tuesday, March 5, 2002 3:14 PM

Essential Safety Equipment SRS Air Bags

Passenger-Side Air Bag Deactivation Switch

A WARNING


Unnecessary Deactivation of Passenger-side Air Bag: Unnecessary deactivation of the passenger-side air bag is dangerous. If turned off unnecessarily, the passenger will not receive the added protection of the air bag. Serious injuries or even death could occur. With the exception of passengers fitting the categories described below, do not turn the air bag deactivation switch to the OFF position.

Your vehicle is equipped with a passenger-side air bag deactivation switch. The switch is located in the center console. The switch must be used to deactivate the passenger-side air bag when the occupant of the passenger seat fits into one of the following categories (as described in the request form for the air bag on-off switch, the appendix B to part 595 of National Highway Traffic Safety Administration [NHTSA]):

- Infants (less than one year old; for all • types of restraint, but particularly the rear-facing child restraint.)
- Children aged 1 to 12
- People with certain medical conditions • which, according to his/her physician, could be adversely affected by air-bag activation

For more government release information on air bag deactivation, contact your Authorized Mazda Dealer for the occupant categories as described in the request form for the air bag deactivation switch in the NHTSA rules. The factory installed air bag deactivation switch in your car only works for the passenger-side air bag.

The air bag deactivation switch turns off the passenger-side air bag. Make sure the passenger-side air bag deactivation switch is in the ON position except when a passenger fitting the previous categories occupies the front passenger seat.

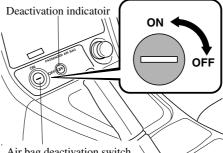

Air bag deactivation switch

Passenger- Side Air Bag Deactivation Switch	Passenger-side Air Bag Operation	Air Bag Deactivation Indicator Light
OFF position	Deactivate	ON
ON position	Activate	OFF



Form No. 8Q42-EA-01F

J07L_8Q42-EA-01F.book Page 21 Tuesday, March 5, 2002 3:14 PM

When the ignition switch is turned to the ON position, the passenger-side air bag deactivation indicator light comes on for about 6 seconds.

If the passenger-side air bag deactivation switch is in the OFF position, the indicator light remains on to warn that the passenger-side air bag has been deactivated.

NOTE

Have the passenger-side air bag deactivation switch inspected by an Authorized Mazda Dealer if any of these conditions occur:

- The indicator doesn't come on when the ignition switch is turned to the ON position.
- The indicator doesn't remain on when the ignition switch is in the ON position and the passenger-side air bag deactivation switch is in the OFF position.
- The indicator remains on when the ignition switch is in the ON position and the passenger-side air bag deactivation switch is in the ON position.

▼ To Deactivate The Passenger-Side Air Bag

 
Essential Safety Equipment SRS Air Bags

A WARNING

Leaving the Key in the Passenger-Side Air Bag Deactivation Switch: Unintentional deactivation of the passenger-side air bag is dangerous. In an accident, the passenger will not be properly protected. Serious injuries or even death could occur. To avoid unintentional deactivation, always use the same key to operate the passenger-side air bag deactivation switch and the ignition switch, that way you won't leave the key in the passenger-side air bag deactivation switch.

- 1. Insert the key into the switch.
- 2. Turn the key clockwise until the key points to OFF.
- 3. Remove the key.
- 4. Make sure the air bag deactivation indicator light remains on when the ignition is in the ON position.

The passenger-side air bag will remain deactivated until the passenger-side air bag deactivation switch is turned to the ON position.




J07L_8Q42-EA-01F.book Page 22 Tuesday, March 5, 2002 3:14 PM

Essential Safety Equipment SRS Air Bags

▼ To Activate The Passenger-Side Air Bag

- 1. Insert the key into the switch.
- 2. Turn the key counterclockwise until the key points to ON.
- 3. Remove the key.
- 4. Make sure the air bag deactivation indicator light goes off after 6 seconds when the ignition switch is turned to the ON position.

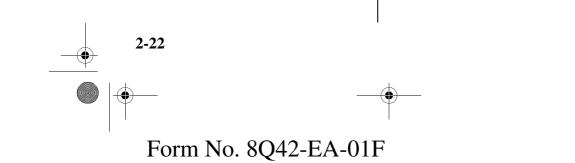

J07L_8Q42-EA-01F.book Page 23 Tuesday, March 5, 2002 3:14 PM




Air Bag System Description

The supplemental restraint systems (SRS) have two basic subsystems:

- The air bag system with inflators and air bags.
- The electric system with crash sensors and diagnostic module.

The air bags are mounted in the following locations: the center of the steering wheel, the passenger-side of the dashboard. They are out of sight until activated. The passenger side air bag has a deactivation switch located on the center console (page 2-20).

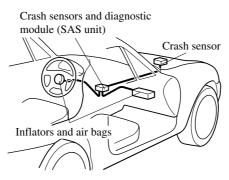

▼ How the Air Bags Work

When air bag crash sensors detect a frontal impact of greater than moderate force, an electrical current is sent to the inflators.

Gases are produced to inflate the air bags and after the inflation, the air bags quickly deflate.

The air bags will function only once. After that, the air bags will not work again and must be replaced.

Only an Authorized Mazda Dealer can replace the systems.





J07L_8Q42-EA-01F.book Page 24 Tuesday, March 5, 2002 3:14 PM

 
Essential Safety Equipment SRS Air Bags

▼Air Bag Activation/Deactivation


Air bag activation

A greater than moderate impact will cause the air bags to inflate in the following cases:


Hitting a solid wall straight on at greater than about 22 km/h (14 mph).



 
Hitting a curb, pavement edge or hard object.



Landing hard or the vehicle falling.

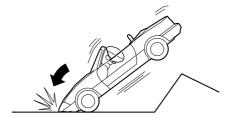

 Frontal impact within about a 30 degree range from head-on to the vehicle.



Driving into a big hole or hitting the far side of a hole.



 


J07L_8Q42-EA-01F.book Page 25 Tuesday, March 5, 2002 3:14 PM




Depending on the severity of impact, the air bags may not inflate in the following cases:

Impacts involving trees or poles cause severe cosmetic damage but may not have enough impact to activate the air bag.




 Frontal offset impact to the vehicle may not provide the stopping force necessary for air bag deployment.



Rear-ending or running under a truck's tail gate may not provide the stopping force necessary for air bag deployment.

 Essential Safety Equipment SRS Air Bags




Non-activation of air bags

Air bags will not normally inflate in the following cases:

Collision from the rear.




Impact to the side, but it may deploy a side air bag.

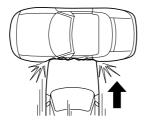

 Vehicle roll-over, may deploy the side air bag(s) but not the front air bags.





J07L_8Q42-EA-01F.book Page 26 Tuesday, March 5, 2002 3:14 PM

Essential Safety Equipment SRS Air Bags

V Constant Monitoring

The following components of the air bag systems are monitored by a diagnostic system:

- SAS unit
- Crash sensor
- Air bag modules
- Seat belt pretensioners
- Related wiring
- Passenger-side air bag deactivation switch

A diagnostic module continuously monitors the systems' readiness. This begins when the ignition switch is turned to the ON position and continues while the vehicle is being driven.

▼ Air Bag/Seat Belt Pretensioner Systems Warning Light



If the air bag/seat belt pretensioner system is OK, the warning light comes on when the ignition switch is turned to the ON position or after the engine is cranked. After about 6 seconds it goes out. A system malfunction is indicated when the warning light constantly flashes, stays on or doesn't come on at all. If any of these occur, consult an Authorized Mazda Dealer as soon as possible. The system may not work in an accident.

A WARNING

Self-Servicing the Air Bag/

<u>Pretensioner Systems:</u> Self-servicing or tampering with the systems is dangerous. An air bag/ pretensioner could accidentally activate or become disabled. This could cause serious injuries. Never tamper with the systems and always have an Authorized Mazda Dealer perform all servicing and repairs.

Maintenance

The air bag systems do not require regular maintenance. But if any of the following occurs, take your vehicle to an Authorized Mazda Dealer as soon as possible:

- The air bag system warning light flashes.
- The air bag system warning light stays on.
- The air bag system warning light stays off when the ignition switch is turned to the ON position.
- The air bags inflate.

2-26

J07L_8Q42-EA-01F.book Page 27 Tuesday, March 5, 2002 3:14 PM



WARNING

 
Damaged Air Bag Sensors: Driving with damaged air bag sensors is dangerous. A collision, even one not strong enough to inflate the air bags, could damage the sensors. If there was a subsequent collision, a damaged sensor would not inflate the air bags. Always have an Authorized Mazda Dealer inspect the air bag systems after a collision.

Removing Interior Parts:

Removing any components such as the front dashboard, the steering wheel or parts containing air bag parts or sensors is dangerous. These parts contain essential air bag parts. The air bag could accidentally activate and cause serious injuries. Always have an Authorized Mazda Dealer remove these parts.

Air Bag Disposal:


Improper disposal of an air bag or a vehicle with live air bags in it can be extremely dangerous. Unless all safety procedures are followed, injury can result. Ask an Authorized Mazda Dealer how to safely dispose of an air bag or how to scrap an air bag equipped vehicle.




J07L_8Q42-EA-01F.book Page 28 Tuesday, March 5, 2002 3:14 PM

  
-•







 J07L_8Q42-EA-01F.book Page 1 Tuesday, March 5, 2002 3:14 PM







۲

Knowing Your Mazda

Explanation of basic operations and controls; opening/closing and adjustment of various parts.

Doors and Locks	
Keys	
Keyless Entry System 3- 3	
Door Locks	
Trunk Lid	
Trunk Release Handle	
Power Windows	
Fuel-Filler Lid and Cap	
Hood	
Convertible Top	
Detachable Hardtop	
Security System	
Immobilizer System	-(-
Mirrors	
Mirrors	

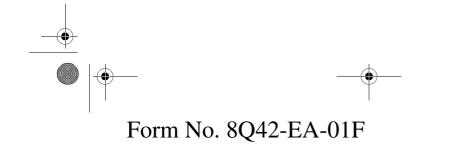

 

J07L_8Q42-EA-01F.book Page 2 Tuesday, March 5, 2002 3:14 PM

Knowing Your Mazda **Doors and Locks**

Keys

A WARNING

Keys and Children:

Leaving children in a vehicle with the ignition key is dangerous. This could result in someone being badly injured or even killed. They could play with power windows or other controls, or even make the vehicle move. Don't leave the keys in your vehicle with children.

- To avoid damage to the key, do not:
 - Drop the key.
 - Get the key wet.
 - Expose the key to any kind of magnetic field.
 - Expose the key to high temperatures on places such as the dashboard or hood, under direct sunlight.

 
• When starting the engine, do not let the following materials touch the key grip. The engine may not start:

Spare keys.

3-2

- Keys for other vehicles equipped with an immobilizer system.
- Metal objects that touch or pass through the hole in the key.
- Devices for electronic purchases, and security passage.

The keys operate all locks.



□ → Key code number plate

A code number is stamped on the plate attached to the key set; detach this plate and store it in a safe place (not in the vehicle) for use if you need to make a replacement key.

Also write down the code number and keep it in another safe and handy place, but not in the vehicle.

If your key is lost, consult your Authorized Mazda Dealer with the code number ready.

J07L_8Q42-EA-01F.book Page 3 Tuesday, March 5, 2002 3:14 PM

Keyless Entry System

This system locks and unlocks the doors and opens the trunk.

It can also help you signal for attention in an emergency.

Press the button slowly and accurately.

CAUTION


To avoid damage to the transmitter, do not:

- Drop it.
- Get it wet.
- Disassemble it.
- Expose it to heat or sunlight.

Knowing Your Mazda **Doors and Locks**

NOTE


- The keyless entry system is designed to operate up to about 2.5 m (8 ft) from the center of the vehicle, but this may vary because of local conditions.
- The system doesn't operate when the ignition switch is in the ON position.
- If the transmitter does not operate when pressing a button or the operation range becomes too small, the battery may be dead. To install a new battery, refer to Maintenance (page 3-5).
- Additional transmitters can be obtained at an Authorized Mazda Dealer. Up to 3 transmitters can be used with the keyless entry system per vehicle. Bring all transmitters to an Authorized Mazda Dealer when the electronic codes need to be reset.

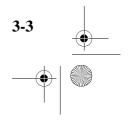

J07L_8Q42-EA-01F.book Page 4 Tuesday, March 5, 2002 3:14 PM

Knowing Your Mazda **Doors and Locks**

▼ Transmitter

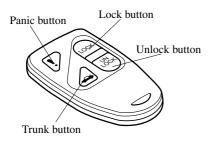

NOTE

This device complies with part 15 of the FCC Rules and with RSS-210 of Industry Canada. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation. (Outside transmissions may momentarily interfere with the device's operation.)

Lock button

3-4

To lock the doors, press the LOCK button and the hazard warning lights will flash once.

To confirm that all the doors have been locked, press the LOCK button again within 5 seconds. If they are closed and locked, the horn will sound and the hazard warning lights will flash once.

NOTE

Confirm that all the doors are locked visually or aurally by use of the double click.

Unlock button

To unlock the driver's door, press the UNLOCK button and the hazard warning lights will flash twice.

To unlock all the doors, press the UNLOCK button again within 5 seconds and the hazard warning lights will flash twice.

NOTE

After unlocking with the transmitter, all doors will automatically lock if one of the doors is not opened within about 30 seconds.

← Trunk button

To open the trunk, press the \nleftrightarrow button.

Panic button

You can use the ! button to turn on the alarm, which allows you to signal for attention in an emergency.

NOTE

The alarm will work whether any door is open or closed.

Form No. 8Q42-EA-01F

J07L_8Q42-EA-01F.book Page 5 Tuesday, March 5, 2002 3:14 PM

Knowing Your Mazda

Turning on the alarm

Pressing the ! button once will trigger the alarm for about 2 minutes and 30 seconds, and do the following:

- The horn sounds intermittently.
- The headlights flash. (except Canada)
- The hazard warning lights flash.

Turning off the alarm

Press any button on the transmitter.

NOTE

If the LOCK and UNLOCK button are pressed sequentially, the hazard warning flasher may not flash correctly.

▼ Maintenance

CAUTION

- Make sure the battery is installed with the correct pole facing upward. Battery leakage could occur if it is not installed correctly.
- When replacing the battery, be careful not to bend the electrical terminals or get oil on them. Also be careful not to get dirt in the transmitter as it could damage it.
- Danger of explosion if battery is incorrectly replaced.
- Replace only with the same type battery (CR2025 or the equivalent).
- Dispose of used batteries according to the following instructions.
 - Insulate the plus and minus terminals of the battery using cellophane or equivalent tape.
 - Never disassemble.
 - Never throw the battery into fire and/or water.
 - Never deform or crush.


Form No. 8Q42-EA-01F

J07L_8Q42-EA-01F.book Page 6 Tuesday, March 5, 2002 3:14 PM


Knowing Your Mazda **Doors and Locks**

Replacing the transmitter battery


1. Insert a small screwdriver into the slot and gently pry open the transmitter.

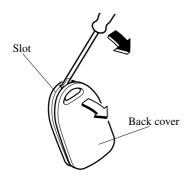

 2. Press the portion of the battery indicated by A and remove the battery.



Install a new battery (CR2025 or the equivalent) into the front portion of the holder with the positive pole (+) facing up. Press on the B portion of the battery to set the battery.

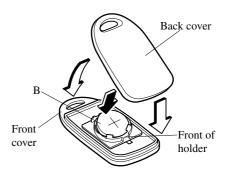

CAUTION

Do not press any buttons when replacing the battery. The electronic code could be altered and cause the keyless entry system to malfunction. If the keyless entry system fails to operate, contact an Authorized Mazda Dealer.

4. Align the front and back covers and snap the transmitter shut.



3-6

J07L_8Q42-EA-01F.book Page 7 Tuesday, March 5, 2002 3:14 PM

Knowing Your Mazda Doors and Locks

▼ Service

If you have a problem with the keyless entry system, consult an Authorized Mazda Dealer.

If your transmitter is lost or stolen, bring all remaining transmitters to an Authorized Mazda Dealer as soon as possible for a replacement and to make the lost or stolen transmitter inoperative.

CAUTION

- Changes or modifications could void your right to operate the keyless entry system.
- Damage to your keyless entry system will affect the vehicle warranty coverage.

Door Locks

WARNING

<u>Unattended Children and Pets:</u> Leaving a child or an animal unattended in a parked vehicle is dangerous. In hot weather, temperatures inside a vehicle can become high enough to cause brain damage or even death. Always take all children and animals with you or leave a responsible person with them.

Keys and Children:

Leaving children in a vehicle with the ignition key is dangerous. This could result in someone being badly injured or even killed. They could play with power windows or other controls, or even make the vehicle move. Don't leave the keys in your vehicle with children.

Unlocked Doors:

Unlocked doors in a moving vehicle are dangerous. Passengers can fall out if a door is accidentally opened and can more easily be thrown out in an accident. So keep all doors locked when driving.

NOTE

Always remove the key from the ignition switch, close all windows, and lock all doors when leaving your vehicle unattended. This discourages intruders and thieves.




J07L_8Q42-EA-01F.book Page 8 Tuesday, March 5, 2002 3:14 PM

Knowing Your Mazda Doors and Locks

▼ Locking, Unlocking with Key


Either door can be locked or unlocked with a key.

Turn the key toward the front to unlock, toward the back to lock.

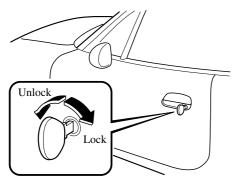


▼ Locking, Unlocking with Door-Lock Button

To lock any door from the inside, push its door-lock button. To unlock, pull it out.

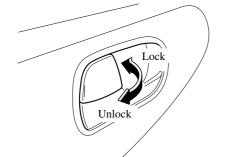

To lock any door with the door-lock button from the outside, push its doorlock button and close the door.

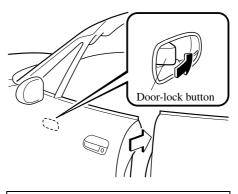


NOTE

When locking the doors this way, be careful not to leave the key inside the vehicle.

V Power Door Locks

Locking, unlocking with key

All doors lock automatically when any door is locked with a key. All doors unlock when the driver's door is unlocked and the key is held in the unlock position a second longer. Also, all doors unlock when the passenger's door is unlocked.

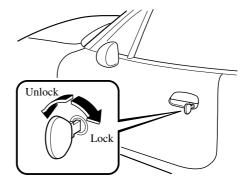



J07L_8Q42-EA-01F.book Page 9 Tuesday, March 5, 2002 3:14 PM


Knowing Your Mazda Doors and Locks

NOTE

Holding the key in the unlocked position in the driver's door lock for about a second unlocks all doors. To unlock only the driver's door, insert a key into the driver's door lock and turn the key briefly to the unlock position and then immediately return it to the center position.

Locking, unlocking with door-lock switch

All doors lock automatically when LOCK is pushed. They all unlock when the unmarked part of the door-lock switch is pushed.

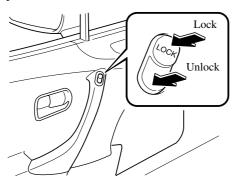


Trunk Lid

WARNING

Open Trunk and Exhaust Gas: Exhaust gas in the cabin of a vehicle is dangerous. This gas contains CO (carbon monoxide), which is colorless, odorless, and highly poisonous. If inhaled, it can cause loss of consciousness and death. Because exhaust gas can get into the cabin through an open trunk, keep the trunk closed when driving.

▼ Key-Operated Trunk

To open the trunk lid, insert the key into the slot and turn it clockwise.

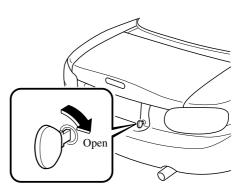

To close, use both hands to push the lid down until the lock snaps shut. Don't slam it.


Then pull up on it to make sure it's secure.

J07L_8Q42-EA-01F.book Page 10 Tuesday, March 5, 2002 3:14 PM


Knowing Your Mazda Doors and Locks

▼ Remote Trunk Lid Release

The remote trunk lid release is mounted in the center console. To open the console, pull the release

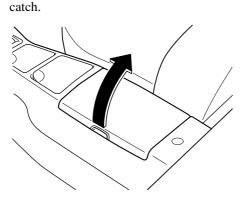


To release the trunk lid, pull up on the trunk lid release lever.

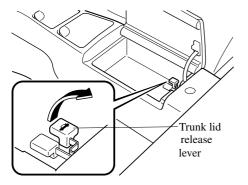

▼ Remote Trunk Lid Release Lock-Out

The remote release may be canceled to prevent anyone in the vehicle from opening the trunk.


Close the trunk, insert the key, and turn it counterclockwise, then return the key to the center position and remove it.

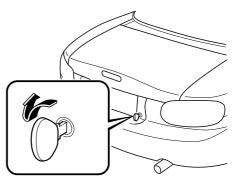

To activate the remote release, insert the key, turn it clockwise and open the trunk lid at the same time.

NOTE


If the remote trunk lid release does not work, insert the key and turn it clockwise.

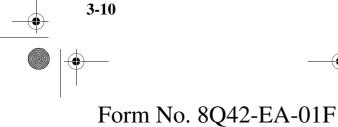

J07L_8Q42-EA-01F.book Page 11 Tuesday, March 5, 2002 3:14 PM

▼Trunk Light

The trunk light is on when the lid is open and off when it's closed.

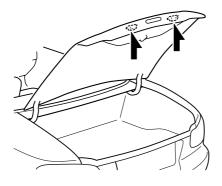

NOTE


To prevent the battery from being discharged, do not leave the trunk open for a long period when the engine is not running. Knowing Your Mazda **Doors and Locks**

Trunk Release Handle

Your vehicle is equipped with a trunk release handle that provides a means of escape for children and adults in the event they become locked inside the trunk.

No matter how careful adults might be with keys and locking their cars, parents should be aware that children may be tempted to play around vehicles and use the trunk as a hiding place.

Adults are advised to familiarize themselves with the operation and location of the release handle so that all children can be told about it in an appropriate way, keeping in mind that most vehicles don't have such handles.

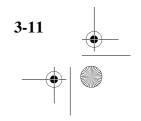

J07L_8Q42-EA-01F.book Page 12 Tuesday, March 5, 2002 3:14 PM

Knowing Your Mazda Doors and Locks

A WARNING


<u>Open Trunk Lid and Children:</u> Leaving the trunk lid open or leaving children in the vehicle with the keys is dangerous. Children could open the trunk lid and climb inside resulting in possible injury or death from heat exposure. Close the trunk lid and do not allow children to play inside the vehicle.

<u>Unattended Children and Pets:</u> Leaving children or animals unattended in a parked vehicle is dangerous. Babies left sleeping and kids who lock themselves in cars or trunks can die very quickly from heat prostration. Don't leave your children or pets alone in a car at any time. Don't leave the car, the trunk unlocked. Always keep the car from being a tempting place to play by locking doors and the trunk, and keeping the keys where children won't play with them.

▼ Opening the Trunk Lid from the Inside


Pull the illuminated "T" shaped handle. The handle is made of material that will glow for hours in the darkness of the trunk following a brief exposure to ambient light.


The "T" shaped handle is located on the inside of the trunk end trim.

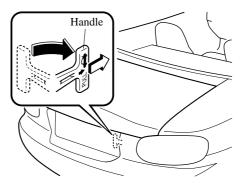

CAUTION

Always keep the handle firmly attached to the holder and in the recessed position. Not securing the handle this way could allow it to snag luggage in the trunk and open the trunk lid.

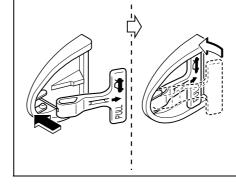

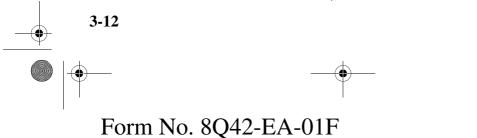

J07L_8Q42-EA-01F.book Page 13 Tuesday, March 5, 2002 3:14 PM

Power Windows

The ignition switch must be in the ON position for the power windows to operate.

WARNING

<u>Closing Power Windows:</u> Closing power windows are dangerous. A person's hands, head, or even neck could be caught by the window and result in serious injury or even death.

This warning applies especially to children. Make sure the opening is clear before closing a window.


CAUTION

To prevent burning out the fuse and damaging the power window system, don't open or close more than two windows at once. Knowing Your Mazda **Doors and Locks**

▼ Operating the Driver's Side Power Window

To open the window, push down the switch.

To close the window, pull up the switch.

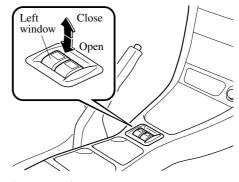

Auto-opening


To fully open the window automatically, push the switch completely down.

To stop the window partway, pull up the switch and then release it.

▼ Operating the Passenger Power Window

To open the window, push down the switch.

To close the window, pull up the switch.

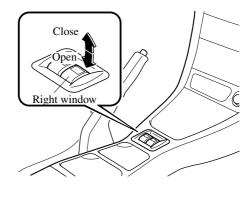



J07L_8Q42-EA-01F.book Page 14 Tuesday, March 5, 2002 3:14 PM

Knowing Your Mazda Doors and Locks

Fuel-Filler Lid and Cap

WARNING

Fuel Spray:

Fuel spray is dangerous. Fuel can burn skin and eyes and cause illness when ingested. Fuel spray is released when there is pressure in the fuel tank and the fuel cap is removed too quickly. When removing the fuel cap, loosen the cap slightly and wait for any hissing to stop. Then remove it.


Fuel Vapor:

Fuel vapor is dangerous. It could be ignited by sparks or flames causing serious burns and injuries. Before refueling, stop the engine, and always keep sparks and flames away from the filler neck.


Always use only a genuine Mazda fuel cap or an approved equivalent, available at Authorized Mazda Dealers. The wrong cap can result in a serious malfunction of the fuel and emission control systems. It may also cause the check engine light in the instrument cluster to illuminate.

▼ Fuel-Filler Lid

The remote fuel-filler lid release is mounted in the center console. To open the console, pull the release catch.

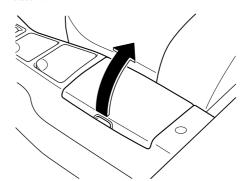

To open the fuel-filler lid, pull up on the remote fuel-filler lid release.

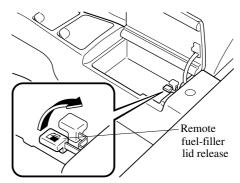

3-14

Form No. 8Q42-EA-01F


J07L_8Q42-EA-01F.book Page 15 Tuesday, March 5, 2002 3:14 PM

Doors and Locks

▼ Fuel-Filler Cap

To remove the filler cap, turn it counterclockwise.

To replace the filler cap, turn it clockwise until it clicks.

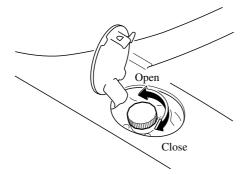

CAUTION


Make sure the fuel-filler cap is tightened securely. The check engine light comes on when the cap isn't tightened securely. If the light remains on (even after you have tightened the cap securely, driven, and restarted the engine several times), it may indicate a different problem. Contact an Authorized Mazda Dealer as soon as possible.

Hood


Knowing Your Mazda


VOpening the Hood

1. With the vehicle parked, pull the release handle to unlock the hood.

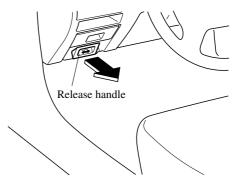

 2. Pull the safety catch up and lift the hood.

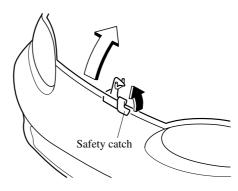




Form No. 8Q42-EA-01F

J07L_8Q42-EA-01F.book Page 16 Tuesday, March 5, 2002 3:14 PM

Knowing Your Mazda **Doors and Locks**


¢

3. Use the support rod to hold the hood open.

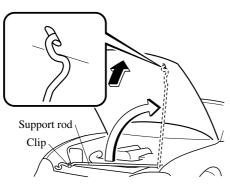

VClosing the Hood

- 1. Check under the hood area to make certain all filler caps are in place and all loose items (e.g. tools, oil containers, etc.) have been removed.
- 2. Secure the rod in its clip.
- 3. Close the hood so that it locks securely.

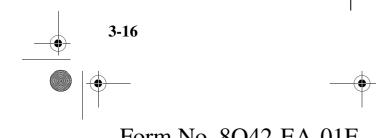

Form No. 8Q42-EA-01F

J07L_8Q42-EA-01F.book Page 17 Tuesday, March 5, 2002 3:14 PM

Knowing Your Mazda

Windshiled header Top stroage area Top frame Top frame Unlock Top latch assembly Unlock Top latch assembly Unlock Unlock Top latch assemble Top covering

WARNING

Standing in a Moving Vehicle: Standing in the vehicle when it's moving is a dangerous way to ride. During a sudden maneuver or collision you could be seriously injured or even killed. Don't stand in the vehicle when its moving.

CAUTION

Remove leaves that accumulate on and around the convertible top. If the leaves are not removed, they may block the water drainage outlets.

- Before lowering or raising the top, stop in a safe place off the right-of-way and park on a level surface.
- Make sure nothing is on the top or near the back window when raising or lowering the top. Even small objects may interfere and cause damage.
- When lowering the top, make sure objects inside the vehicle aren't blown away by the wind.

3-17


J07L_8Q42-EA-01F.book Page 18 Tuesday, March 5, 2002 3:14 PM

Knowing Your Mazda Doors and Locks

- Secure all loose objects inside when driving with the top down.
- To help prevent burglary or vandalism and to ensure that the passenger compartment stays dry, close the top securely and lock all doors when leaving the vehicle.
- Don't drive through an automatic car wash; it may damage the top.
- Don't raise or lower the top when the temperature is below 5 °C (41 °F); this will damage the top material.
- Don't lower the top when it's wet. If the top dries while folded, it will deteriorate and shrink.
- Lowering the top while it's wet can also cause water to drip into the passenger compartment.
- Don't raise or lower the top when the wind is strong; the wind could damage the top.

▼ Lowering the Convertible Top

- 1. Park the vehicle on a level surface and firmly set the parking brake.
- 2. Lower the side windows, then turn off the ignition.
- 3. Pull down the sunvisors.

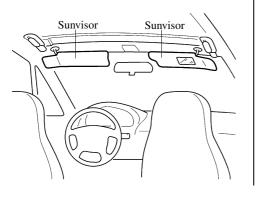


3-18

4. Remove all objects in the top storage area.


∆ WARNING

Objects in the Storage Area: Putting heavy or sharp objects in the top storage area is dangerous. During a sudden stop or collision, they can become projectiles that might hit and injure passengers. Don't place heavy or sharp objects in the top storage area.

5. Push the unlock buttons and fully release the top latches.

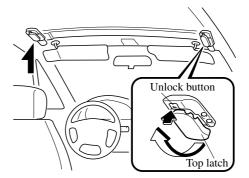


6. Lift up on the front section of the top to release it from the windshield header.

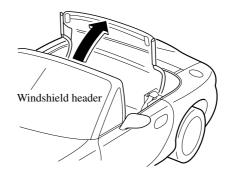



J07L_8Q42-EA-01F.book Page 19 Tuesday, March 5, 2002 3:14 PM

7. Fold back the front and carefully lower it to the storage area, then put the latches in the locked position.

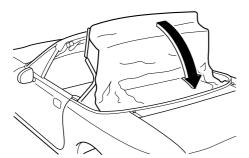


A WARNING

Fastening Mechanisms:


It is dangerous to place your hands or fingers near the fastening mechanism. Your hands or fingers could be caught and injured by the mechanism. Always keep your hands and fingers away from the fastening mechanisms when moving the top. Knowing Your Mazda **Doors and Locks**

▼ Covering the Convertible Top

- 1. Cover the convertible top with the top covering, stored in the trunk.
- 2. Feed the straps on the bottom of the covering through the lower links and snap them into position.

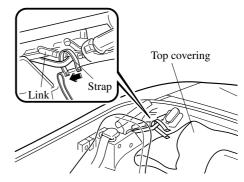

- 3. Secure the top covering with the straps.
- 4. Affix the top covering fasteners.
- 5. Insert the top covering's rear edge into the groove in the body molding.

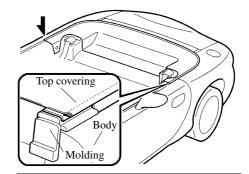

CAUTION

Never drive with the top partially folded or uncovered. Otherwise the top and/or the top covering could be damaged.




J07L_8Q42-EA-01F.book Page 20 Tuesday, March 5, 2002 3:14 PM


Knowing Your Mazda Doors and Locks

▼ Raising the Convertible Top

- 1. Park the vehicle on a level surface and firmly set the parking brake.
- 2. Lower the side windows, then turn off the ignition.
- 3. Pull down the sunvisors.

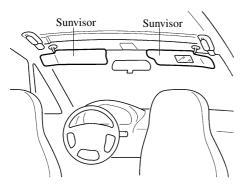


- 4. Undo the fasteners and straps.
- 5. Remove the top covering and store it properly in the trunk.
- 6. Unlock the top latches and open them fully.
- 7. Hold the top lift handle and pull the top up and forward until it's against the windshield header.

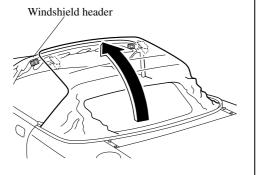

WARNING

<u>Fastening Mechanisms:</u> It is dangerous to place your hands or fingers near the fastening mechanism. Your hands or fingers could be caught and injured by the mechanism. Always keep your hands and fingers away from the fastening mechanisms when moving the top.

8. After securely hooking the top latches onto the windshield header, push each latch up with the palm of your hand until the lock buttons click and the latches are locked.

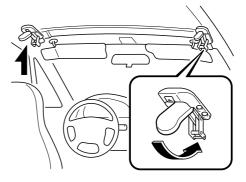


A WARNING

<u>Fastening Mechanisms:</u> It is dangerous to place your hands or

fingers near the fastening mechanism. Your hands or fingers could be caught and injured by the mechanism. Always keep your hands and fingers away from the fastening mechanisms when moving the top.

3-20

J07L_8Q42-EA-01F.book Page 21 Tuesday, March 5, 2002 3:14 PM

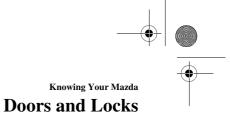


CAUTION

Make sure the top is securely locked by pushing up on it. Driving with the top unlocked could damage the top.

NOTE


Make sure the top is securely locked by pushing up on it. If it still sounds loose (rattles) after being locked by the top latches, have it inspected at an Authorized Mazda Dealer.

9. If the rear window defroster coupler is disconnected, connect the coupler.

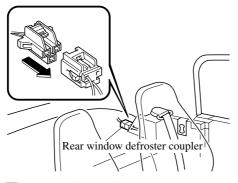

▼ Taking Care of the Top

 Refer to convertible top maintenance (page 8-46) for information on taking care of the top.




Form No. 8Q42-EA-01F

J07L_8Q42-EA-01F.book Page 22 Tuesday, March 5, 2002 3:14 PM

Knowing Your Mazda Doors and Locks

Detachable Hardtop

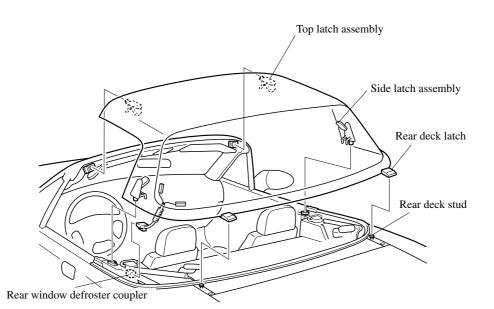

▼ Detachable Hardtop Precautions

WARNING

Standing in a Moving Vehicle: Standing in the vehicle when it's moving is a dangerous way to ride. During a sudden maneuver or collision you could be seriously injured or even killed. Don't stand in the vehicle when its moving.

WARNING

Hardtop and Rollover Accidents: Rollover accidents on a hardtop vehicle are dangerous. The hardtop is not as strong as a regular steel roof. Rollover accidents could dislodge or crush the hardtop and cause serious injuries or even death. Always drive safely and observe the speed limit.

• Before removing or installing the hardtop, stop in a safe place off the right-of-way and park on a level surface.


3-22

J07L_8Q42-EA-01F.book Page 23 Tuesday, March 5, 2002 3:14 PM

- When removing the hardtop, make sure objects inside the vehicle aren't blown away by the wind.
- Secure all loose objects inside when driving with the hardtop removed.
- Don't drive through an automatic car wash; it may damage the hardtop.
- Don't remove or install the hardtop when the wind is strong; the wind could damage the hardtop.
- When removing the hardtop, make sure the operation is performed by 2 persons.
- Before removing the hardtop, lower the antenna.
- Removing the hardtop while it's wet can cause water to drip into the passenger compartment.


▼ Removing the Detachable Hardtop

- 1. Park the vehicle on a level surface and firmly set the parking brake.
- 2. Lower the side windows, then turn off the ignition.
- 3. Pull down the sunvisors.

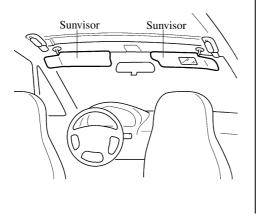


Knowing Your Mazda **Doors and Locks**


4. Push the unlock buttons and fully release the top latches.

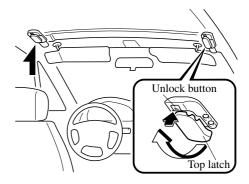

5. Push the unlock buttons and fully release the side latches.

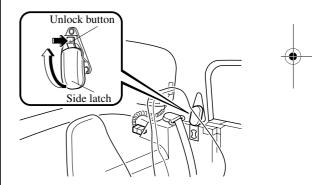

6. Disconnect the rear window defroster coupler.

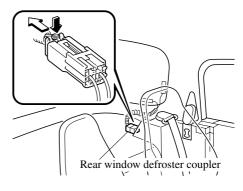




J07L_8Q42-EA-01F.book Page 24 Tuesday, March 5, 2002 3:14 PM

Knowing Your Mazda **Doors and Locks**

7. Slide the hardtop rearward while pressing down on the rear deck latches to unlock the latches.

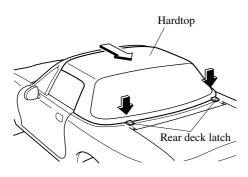

8. Lift the hardtop straight off the body to prevent damage to the rear deck latches and studs.

Rear deck stud

WARNING

Fastening Mechanisms:

It is dangerous to place your hands or fingers near the fastening mechanism. Your hands or fingers could be caught and injured by the mechanism. Always keep your hands and fingers away from the fastening mechanisms when moving the top.


Windshield's Edges:

Not being careful of the windshield's edges when getting into or out of the vehicle is dangerous. The windshield's edges could scratch and cause injuries.

Be careful of the windshield's edges when getting into or out of the vehicle.

CAUTION

- Be careful not to strike the body with any of the protruding hardtop latches.
- Use extreme care when carrying the hardtop to prevent scratching or other damage to it.

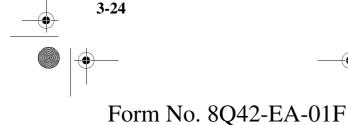

J07L_8Q42-EA-01F.book Page 25 Tuesday, March 5, 2002 3:14 PM

NOTE

Points to remember when storing the detachable hardtop.

- Do not place the hardtop on a hard surface, such as concrete or asphalt. Place it on a cushioning material, such as an old blanket.
- Be sure the top and side latches are locked.
- Do not lean the hardtop against a wall or stand it in an unstable way.
- Store the hardtop in a dry clean area, and cover it with a soft material, such as an old blanket.

▼ Installing the Detachable Hardtop


CAUTION

Do not attempt to install the hardtop with the top covering also installed. Remove the top covering before installing the hardtop, otherwise damage will occur to the top covering.


NOTE


- Be sure to place the top latches in the locked position.
- Make sure the convertible top is completely lowered before installing the hardtop. Also confirm that the rear window defroster coupler is disconnected.

- Knowing Your Mazda Doors and Locks
- 1. Park the vehicle on a level surface and firmly set the parking brake.
- 2. Lower the side windows, then turn off the ignition.
- 3. Pull down the sunvisors.

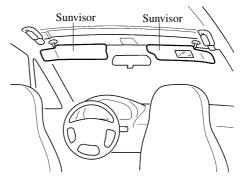

 4. Unlock the top latches and the side latches on the hardtop.

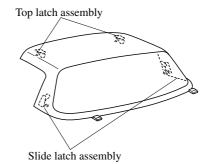





J07L_8Q42-EA-01F.book Page 26 Tuesday, March 5, 2002 3:14 PM

Knowing Your Mazda **Doors and Locks**

5. Align the rear deck latches with the rear deck studs and set the hardtop squarely onto the body.

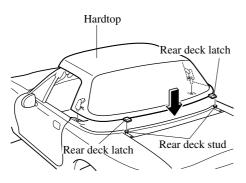



6. Slide the hardtop forward while pressing down on the rear deck latches to lock the latches, and then verify that they are secure by attempting to lift the rear of the hardtop.

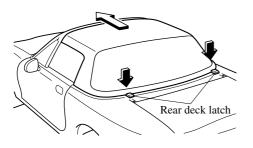

CAUTION


- Be careful not to strike the body with any of the protruding hardtop latches.
- The rear defogger grid and the defogger cord could be damaged when removing or installing the top. Make sure the rear defogger grid isn't folded and the defogger cord isn't caught between the vehicle's body and the top.
- 7. Push each top latch up with the palm of your hand until the lock buttons click and the latches are locked.

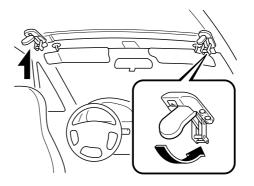

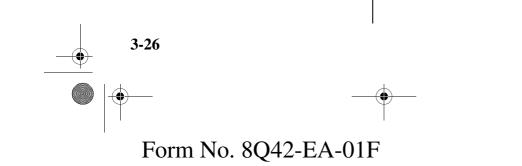

J07L_8Q42-EA-01F.book Page 27 Tuesday, March 5, 2002 3:14 PM


8. Push each side latch down with the palm of your hand until the lock buttons click and the latches are locked.

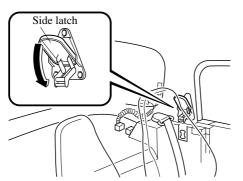

ACAUTION

After installation, verify that all latches are secure. Operating the vehicle with unlocked latches may cause hardtop damage or loss.

9. Reconnect the rear window defroster coupler.

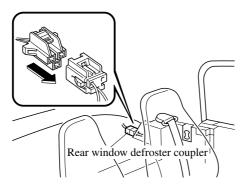


Knowing Your Mazda Doors and Locks

NOTE

If the top rattles even when all latches are secure, contact your Authorized Mazda Dealer for inspection.

▼ Detachable Hardtop Appearance Care

 Refer to detachable hardtop maintenance (page 8-47) for information on detachable hardtop appearance care.



Form No. 8Q42-EA-01F

J07L_8Q42-EA-01F.book Page 28 Tuesday, March 5, 2002 3:14 PM

Knowing Your Mazda Security System

Immobilizer System

The immobilizer system allows the engine to start only with a key the system recognizes.

If someone attempts to start the engine with an unrecognized key, the engine will not start, thereby helping to prevent the theft of your vehicle.

CAUTION

Changes or modifications not expressly approved by Mazda could void the user's authority to operate the equipment.

NOTE

This device complies with part 15 of the FCC Rules and with RSS-210 of Industry Canada. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation. (Outside transmissions may momentarily interfere with the device's operation.)

▼ Immobilizer System Warning Light



If the immobilizer system is working properly, the light will come on when the ignition switch is turned to the ON or START position. The light will go out when confirmation by the immobilizer system is completed.

If the light flashes rapidly, fails to come on, or comes on and stays on, it indicates a system malfunction. If any of these occur, contact an Authorized Mazda Dealer as soon as possible.

3-28

J07L_8Q42-EA-01F.book Page 29 Tuesday, March 5, 2002 3:14 PM

Knowing Your Mazda Security System

NOTE

 
- If the warning light comes on and stays on when the ignition switch is turned to the ON position, the engine will not start.
- Signals from a TV or radio station, or from a transceiver or a mobile telephone, could interfere with your immobilizer system. If you are using the proper key and your engine fails to start, check the warning light. If it is flashing, remove the ignition key and wait 2 seconds or more, then reinsert it and try starting the engine again. If it doesn't start after 3 or more tries, contact an Authorized Mazda Dealer.
- If the warning light flashes continuously while you are driving, don't shut off the engine. Go to an Authorized Mazda Dealer and have it checked. If you shut off the engine while the light is flashing you won't be able to restart it.

▼Maintenance

If you have a problem with the immobilizer system or the key, consult an Authorized Mazda Dealer.

CAUTION

- To avoid damage to the key, do not:
 - Drop the key.
 - Get the key wet.
 - Expose the key to any kind of magnetic field.
 - Expose the key to high temperatures on places such as the dashboard or hood, under direct sunlight.
- When starting the engine, do not let the following materials touch the key grip. The engine may not start:
 - Spare keys.
 - Keys for other vehicles equipped with an immobilizer system.
 - Metal objects that touch or pass through the hole in the key.
 - Devices for electronic purchases, and security passage.



Form No. 8Q42-EA-01F

J07L_8Q42-EA-01F.book Page 30 Tuesday, March 5, 2002 3:14 PM

Knowing Your Mazda Security System

NOTE

- The keys carry a unique electronic code. For this reason, and to assure your safety, replacement keys require some waiting time to obtain. They are only available through an Authorized Mazda Dealer.
- Always keep a replacement key, in case one is lost. If a key is lost, contact an Authorized Mazda Dealer as soon as possible.
- If you lose a key, an Authorized Mazda Dealer will reset the electronic codes of your remaining keys and immobilizer system. Starting the vehicle with a key that has not been reset is not possible.

▼ Modification and Add-On Equipment

Mazda cannot guarantee the system's operation if the system has been modified or if any add-on equipment has been installed to it.

CAUTION

To avoid damage to your vehicle, do not modify the system or install any add-on equipment to it.

3-30



J07L_8Q42-EA-01F.book Page 31 Tuesday, March 5, 2002 3:14 PM



Mirrors

▼ Outside Mirrors

Check the mirrors' angles before driving.

WARNING

<u>Convex Mirror (Passenger Side):</u> Changing lanes without taking into account the actual distance of the vehicle in the convex mirror is dangerous. You could have a serious accident. What you see in the convex mirror is closer than it appears. Be sure to look over your shoulder or to check your inside mirror before changing lanes.

Power control mirror

The ignition switch must be in the ACC or ON position.


To adjust:

- 1. Move the selector switch to the left or right to choose the mirror.
- 2. Depress the perimeter switch in the appropriate direction.

Outside mirror


Folding the mirror

Fold the outside mirror rearward until it is flush with the vehicle.

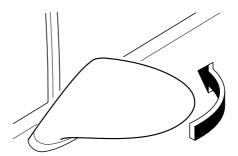

A WARNING

Driving with Mirrors Folded In: Driving with the outside mirrors folded in is dangerous. Your rear view will be restricted, and you could have an accident. Always return the outside mirrors to the driving position before you start driving.

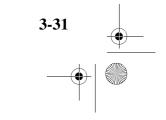

Form No. 8Q42-EA-01F

J07L_8Q42-EA-01F.book Page 32 Tuesday, March 5, 2002 3:14 PM

Knowing Your Mazda Mirrors


-0

▼ Rearview Mirror (With Day/ Night Function)

Before driving, adjust the rearview mirror to center on the scene through the rear window.

Do this with the day/night lever in the day position.

Push the lever forward for day driving. Pull it back to reduce glare from headlights.

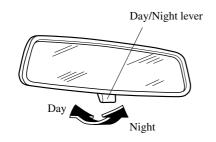


A WARNING

Blocked View:

Cargo stacked higher than the seatbacks is dangerous. It can block your view in the rearview mirror, which might cause you to hit another car when changing lanes. Don't stack things higher than the seatbacks.

3-32

 D07L_8Q42-EA-01F.book Page 1 Tuesday, March 5, 2002 3:14 PM




4


 (\bullet)

Before Driving Your Mazda

Important information about driving your Mazda.

Fuel and Engine Exhaust Precautions	
Fuel Requirements	
Emission Control System	
Engine Exhaust (Carbon Monoxide)	
Before Starting the Engine	
Before Getting In	
After Getting In	
Driving Tips	
Driving Tips Break-In Period	
Break-In Period	
Break-In Period Money-Saving Suggestions	
Break-In Period	4- 6 4- 6 4- 7
Break-In Period Money-Saving Suggestions Hazardous Driving Rocking the Vehicle	4-6 4-6 4-7 4-7
Break-In Period Money-Saving Suggestions Hazardous Driving	4-6 4-6 4-7 4-7 4-8
Break-In Period Money-Saving Suggestions Hazardous Driving Rocking the Vehicle Winter Driving	4-6 4-6 4-7 4-7 4-8 4-9

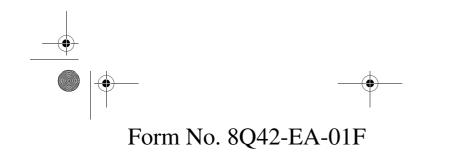

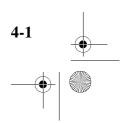

J07L_8Q42-EA-01F.book Page 2 Tuesday, March 5, 2002 3:14 PM

Before Driving Your Mazda Fuel and Engine Exhaust Precautions

Fuel Requirements

Vehicles with catalytic converters must use ONLY UNLEADED FUEL, which will reduce exhaust emissions and keep spark plug fouling to a minimum.

Fuel with a lower rating could cause the emission control system to lose effectiveness. It could also cause engine knocking and serious engine damage.

Your Mazda will perform best with fuel listed in the table.

Fuel	Octane Rating* (Anti-knock index)	
Premium unleaded fuel	91 [(R+M)/2 method] or above (96 RON or above)	
*U.S. federal law requires that octane ratings be posted on gasoline station pumps.		

You may use a regular unleaded fuel with Octane Rating from 87 to 90 (91 to 95 RON) but this will slightly reduce performance.

- USE ONLY UNLEADED FUEL.
- Leaded fuel is harmful to the catalytic converter. The lead will accumulate on the oxygen sensor and the catalyst inside the converter. This will result in a malfunction of the emission control system, causing poor performance.
- Your vehicle can only use oxygenated fuels containing no more than 10% ethanol by volume. Damage to your vehicle may occur when ethanol exceeds this recommendation, or if the gasoline contains any methanol. Stop using gasohol of any kind if your vehicle engine is performing poorly.
- Never add fuel system additives. Never add cleaning agents other than those specified by Mazda. Other cleaning agents and additives may damage the system. Consult an Authorized Mazda Dealer.

Gasoline blended with oxygenates such as alcohol or ether compounds are generally referred to as oxygenated fuels. The common gasoline blend that can be used with your vehicle is ethanol blended at no more than 10%. Gasoline containing alcohol, such as ethanol or methanol, may be marketed under the name "Gasohol".

Vehicle damage and drivability problems resulting from the use of the following may not be covered by the Mazda warranty.

- Gasohol containing more than 10% ethanol.
- Gasoline or gasohol containing methanol.
- Leaded fuel or leaded gasohol.



J07L_8Q42-EA-01F.book Page 3 Tuesday, March 5, 2002 3:14 PM

Before Driving Your Mazda Fuel and Engine Exhaust Precautions

Emission Control System

Your vehicle is equipped with an emission control system (the catalytic converter is part of this system) that enables your vehicle to comply with existing exhaust emissions requirements.

\land WARNING

Parking Over Things That Burn:

Parking over or near anything inflammable, such as dry grass, is dangerous. Even with the engine turned off, the exhaust system could ignite it because the exhaust system gets very hot during normal use. A resulting fire could cause serious injury or death. Never park over or near anything inflammable.

CAUTION

Ignoring the following precautions could cause lead to accumulate on the catalyst inside the converter or cause the converter to get very hot. Either condition will damage the converter and cause poor performance.

- USE ONLY UNLEADED FUEL.
- Don't drive your Mazda with any sign of engine malfunction.
- Don't coast with the ignition switch turned off.
- Don't descend steep grades in gear with the ignition switch turned off.
- Don't operate the engine at high idle for more than 5 minutes.
- Don't tamper with the emission control system. All inspections and adjustments must be made by a qualified technician.
- Don't try to push-start or pull-start your vehicle.

NOTE

Under U.S. federal law, any modification to the original-equipment emission control system before the first sale and registration of a vehicle is subject to penalties. In some states, such modification made on a used vehicle is also subject to penalties.



J07L_8Q42-EA-01F.book Page 4 Tuesday, March 5, 2002 3:14 PM

Before Driving Your Mazda

Fuel and Engine Exhaust Precautions

Engine Exhaust (Carbon Monoxide)

WARNING

Carbon Monoxide:

Engine exhaust is dangerous. This gas contains carbon monoxide (CO), which is colorless, odorless, and poisonous. When inhaled, it can cause loss of consciousness and death. If you smell exhaust gas inside your vehicle, keep all windows fully open and contact an Authorized Mazda Dealer immediately.

Exhaust Gas in Enclosed Area:


Running the engine inside an enclosed area, such as a garage, is dangerous. Exhaust gas, which contains poisonous carbon monoxide, could easily enter the cabin. Loss of consciousness or even death could occur. Don't run the engine when inside an enclosed area.

Idling with the Windows Closed:

Exhaust gas is dangerous. When your vehicle is stopped with the windows closed and the engine running for a long time in an open area, exhaust gas, which contains poisonous carbon monoxide, could enter the cabin. Loss of consciousness or even death could occur. Open the windows or adjust the heating or cooling system to draw fresh air.

Snow Blocking the Exhaust Gas:

Running the engine when a vehicle is stopped in deep snow is dangerous. The exhaust pipe could be blocked by the snow, allowing exhaust gas to enter the cabin. Because exhaust gas contains poisonous carbon monoxide, anyone in the cabin could be injured or killed. Clear the snow from underneath and around your vehicle before starting the engine.

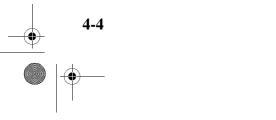

Form No. 8Q42-EA-01F

J07L_8Q42-EA-01F.book Page 5 Tuesday, March 5, 2002 3:14 PM

Before Driving Your Mazda Before Starting the Engine

Before Getting In

- Be sure the windows, outside mirror(s), and outside lights are clean.
- Inspect inflation pressures and condition of tires.
- Look under the vehicle for any sign of a leak.
- If you plan to back up, make sure nothing will be in your way.


NOTE

Engine oil, engine coolant, brake/ clutch fluid, washer fluid, and other fluid levels should be inspected daily, weekly, or at refueling, depending on the fluid. See Maintenance, Section 8.

After Getting In

- Are all doors closed and locked?
- Are the inside and outside mirrors adjusted?
- Is everyone's seat belt fastened?
- Do all the lights work?
- Check all gauges.
- Check all warning lights when the ignition switch is turned to the ON position.
- Release the parking brake and make sure the parking brake warning light goes off.

Always be thoroughly familiar with your Mazda.

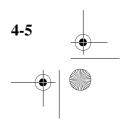

Form No. 8Q42-EA-01F

J07L_8Q42-EA-01F.book Page 6 Tuesday, March 5, 2002 3:14 PM

Before Driving Your Mazda **Driving Tips**

Break-In Period

No special break-in is necessary, but a few precautions in the first 1,000 km (600 miles) may add to the performance, economy, and life of your Mazda.

- Don't race the engine.
- Don't maintain one constant speed for long.
- Don't drive constantly at full-throttle or high engine rpm for extended periods of time.

Form No. 8Q42-EA-01F

- Avoid unnecessary hard stops.
- Avoid full-throttle starts.

4-6

Money-Saving Suggestions

How you operate your Mazda determines how far it will travel on a tank of fuel. Use these suggestions to help save money on fuel and repairs.

- Avoid long warm-ups. Once the engine runs smoothly, begin driving.
- Avoid fast starts.
- Keep the engine tuned. Follow the maintenance schedule (page 8-3) and have an Authorized Mazda Dealer perform inspections and servicing.
- Use the air conditioner only when necessary.
- Slow down on rough roads.
- Keep the tires properly inflated.
- Don't carry unnecessary weight.
- Don't rest your foot on the brake pedal while driving.
- Keep the wheels in correct alignment.
- Keep windows closed at high speeds.
- Slow down when driving in crosswinds and headwinds.

A WARNING

<u>Coasting:</u>

Turning off the engine to coast down a hill is dangerous. This causes the loss of power steering and power brake control. Any loss of steering or braking control could cause an accident. Never turn off the engine and coast down a hill. J07L_8Q42-EA-01F.book Page 7 Tuesday, March 5, 2002 3:14 PM

Before Driving Your Mazda
Driving Tips

Hazardous Driving

WARNING

Downshifting on Slippery Surfaces: Downshifting into lower gear while driving on slippery surfaces is dangerous. The sudden change in tire speed could cause the tires to skid. This could lead to loss of vehicle control and an accident. If it is necessary to downshift on slippery surfaces, be very careful.

When driving on ice or in water, snow, mud, sand, or similar hazard:

- Be cautious and allow extra distance for braking.
- Avoid sudden braking and quick steering.
- If your vehicle is not equipped with ABS, brake with the pedal by using a light up-down motion. Don't hold the pedal down constantly. If your vehicle is equipped with ABS, don't pump the brakes. Continue to

press down on the brake pedal.If you get stuck, shift to 1 or 2 and accelerate slowly. Don't spin the rear

wheels.
For more traction in starting, use sand, rock salt, chains, carpeting, or other nonslip material under the rear wheels.

NOTE

Use snow chains only on the rear wheels.

Rocking the Vehicle

\land WARNING


<u>Spinning the Wheels:</u>

When the vehicle is stuck, spinning the wheels at high speed is dangerous. The spinning tire could overheat and explode. This could cause serious injuries. Don't spin the wheels at more than 56 km/h (35 mph), and don't allow anyone to stand behind a wheel when pushing the vehicle.

CAUTION

Too much rocking may cause engine overheating, transmission failure, and tire damage.

If you must rock the vehicle to free it from snow, sand, or mud, depress the accelerator slightly and slowly move the shift lever from 1 (D) to R.

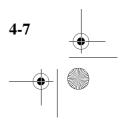

J07L_8Q42-EA-01F.book Page 8 Tuesday, March 5, 2002 3:14 PM

Before Driving Your Mazda **Driving Tips**

Winter Driving

• Carry emergency gear, including tire chains, window scraper, flares, a small shovel, jumper cables, and a small bag of sand or salt.

Ask a Mazda dealer to perform the following precautions:

- Have the proper ratio of antifreeze in the radiator.
- Inspect the battery and its cables. Cold reduces battery capacity.
- Use only cold-weather engine oil (page 8-13).
- Inspect the ignition system for damage and loose connections.
- Use washer fluid made with antifreeze—but don't use engine coolant antifreeze for washer fluid (page 8-22).
- Don't use the parking brake in freezing weather as the parking brake may freeze. Instead, shift to P with an automatic transmission and to 1 or R with a manual transmission. Block the rear wheels.

▼ Snow Tires

A WARNING

Mixing Tire Types:

Using tires different in size or type is dangerous. Your vehicle's handling could be greatly affected and result in an accident. Use only the same size and type tires (snow, radial, or nonradial) on all four wheels.

Check local regulations before using studded tires.

Your vehicle is originally equipped with summer tires designed for optimum traction on wet and dry roads. If your vehicle is to be used on snow and ice covered roads, you may find it necessary to replace the original equipment tires with snow tires, during the winter months.

Use snow tires on all four wheels

Don't go faster than 120 km/h (75 mph). Inflate snow tires 28 kPa (0.3 kgf/cm², 4 psi) more than recommended on the tire pressure label (driver's door), but never more than the maximum cold-tire pressure shown on the tires.

Form No. 8Q42-EA-01F

4-8

J07L_8Q42-EA-01F.book Page 9 Tuesday, March 5, 2002 3:14 PM

Before Driving Your Mazda Driving Tips

▼ Tire Chains

CAUTION

- Chains may scratch or chip aluminum wheels. Install tire chains on steel wheels only.
- Chains may affect handling.
- Don't go faster than 50 km/h (30 mph) or the chain manufacturer's recommended limit, whichever is lower.
- Drive carefully and avoid bumps, holes, and sharp turns.
- Avoid locked-wheel braking.
- Don't use chains on the temporary tire; it may result in damage to the vehicle and to the tire.
- Don't use chains on roads that are free of snow or ice. The tires and chains could be damaged.

Check local regulations before using tire chains.

Install the chains on the rear tires. Don't use chains on the front tires. Use only SAE Class "S" chains, and make sure they fit.

Installing the chains


- 1. Remove the wheel covers, or the chain bands will scratch them.
- 2. Secure the chains on the rear tires as tightly as possible. Always follow the chain manufacturer's instructions.
- 3. Retighten the chains after driving 1/2—1 km (1/4—1/2 mile).

Driving In Flooded Area

\land WARNING

Driving with Wet Brakes: Driving with wet brakes is dangerous. Increased stopping distance or the vehicle pulling to one side when braking could result in a serious accident. Light braking will indicate whether the brakes have been affected. Dry the brakes by driving very slowly and applying the brakes lightly until brake performance returns to normal.

Make sure water does not enter the vehicle interior or the engine area. The vehicle interior could become wet or the engine could be damaged.

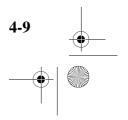

J07L_8Q42-EA-01F.book Page 10 Tuesday, March 5, 2002 3:14 PM

Before Driving Your Mazda **Driving Tips**


Overloading

WARNING

<u>Vehicle Load Weight:</u> The gross axle weight rating (GAWR) and the gross vehicle weight rating (GVWR) of your vehicle are on the Motor Vehicle Safety Standard Label on the driver's door frame. Exceeding these ratings can cause an accident or vehicle damage. You can estimate the weight of your load by weighing the items (or people) before putting them in the vehicle. Be careful not to overload your vehicle.

Trailer Towing

Never tow a trailer with your Mazda.

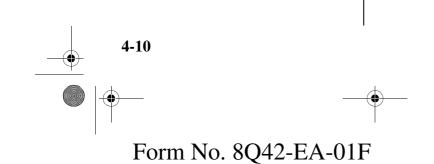

J07L_8Q42-EA-01F.book Page 1 Tuesday, March 5, 2002 3:14 PM


5

۲

Driving Your Mazda

Explanation of instruments and controls.

Starting and Driving	5- 2
Ignition Switch	
Starting the Engine	5- 3
Brake System	
Manual Transmission Operation	
Automatic Transmission Controls	5-9
Power Steering	5-13
Cruise Control	
Instrument Cluster and Indicators	5-17
Meters and Gauges	5-17
C C	
Warning/Indicator Lights and Beeps	
Warning/Indicator Lights	5-22
Beeps	
•	
Switches and Controls	5-30
Lighting Control	5-30
Turn and Lane-Change Signals	
Fog Lights	
Daytime Running Lights	
Windshield Wipers and Washer	
Rear Window Defroster	
Horn	
Hazard Warning Flasher	

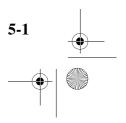

Form No. 8Q42-EA-01F


-(•

J07L_8Q42-EA-01F.book Page 2 Tuesday, March 5, 2002 3:14 PM

Driving Your Mazda Starting and Driving

Ignition Switch

▼ Ignition Switch Positions

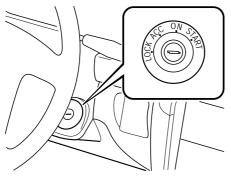


LOCK

The steering wheel locks to protect against theft. Only in this position can the key be removed.


Manual transmission

When turning the ignition switch to the LOCK position, push the key in at the ACC position.

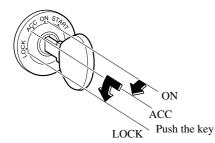

Automatic transmission

When turning the ignition switch to the LOCK position, keep the shift lever in P.

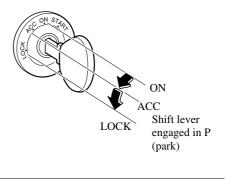

WARNING

<u>Removing the Key:</u>

It's dangerous to remove the key from the ignition switch while the vehicle is moving. Removing the key allows the steering wheel to lock. You will lose steering control and a serious accident could occur. Remove the key only when the vehicle is parked.

Not Setting the Parking Brake: Leaving the driver's seat without setting the parking brake is dangerous. Unexpected vehicle movement could occur if the parking brake is not set. This could cause an accident. Before leaving the driver's seat, always set the parking brake and make sure the shift lever is in P with

an automatic transmission or in 1 or R with a manual transmission.

5-2

Form No. 8Q42-EA-01F

J07L_8Q42-EA-01F.book Page 3 Tuesday, March 5, 2002 3:14 PM

NOTE

If turning the key is difficult, jiggle the steering wheel from side to side.

ACC (Accessory)

The steering wheel unlocks and some electrical accessories will operate.

<u>ON</u>

This is the normal running position after the engine is started. The warning lights (except brakes) should be inspected before the engine is started (page 5-22).

<u>START</u>

The engine is started in this position. It will crank until you release the key; then it returns to the ON position. The brake warning light can be checked after the engine is started (page 5-22).

▼ Ignition Key Reminder

If the ignition switch is in the LOCK or ACC position, a beep will sound when any door is opened.

Starting and Driving

Driving Your Mazda

Starting the Engine

NOTE

Engine-starting is controlled by the spark ignition system. This system meets all Canadian Interference-Causing Equipment Standard requirements regulating the impulse electrical field strength of radio noise.

- 1. Occupants should fasten their seat belts.
- 2. Make sure the parking brake is on.
- 3. Depress the brake pedal.

4. (Manual transmission) Depress the clutch pedal all the way and shift into neutral. Keep the pedal depressed while cranking the engine.

NOTE

The starter will not operate if the clutch pedal is **not** pushed down all the way.

(Automatic transmission)

Put the vehicle in park (P). If you must restart the engine while the vehicle is moving, shift into neutral (N).

NOTE

The starter will not operate if the shift lever is **not** in P or N.



J07L_8Q42-EA-01F.book Page 4 Tuesday, March 5, 2002 3:14 PM

Driving Your Mazda Starting and Driving

5. Turn the ignition switch to the START position and hold (up to 10 seconds at a time) until the engine starts.

CAUTION

Don't try the starter for more than 10 seconds at a time. If the engine stalls or fails to start, wait 10 seconds before trying again. Otherwise, you may damage the starter and drain the battery.

6. After starting the engine, let it idle for about 10 seconds.

NOTE

5-4

- In extremely cold weather, below -18°C (0°F), or after the vehicle has stood idle several days, let the engine warm up without operating the accelerator.
- Whether cold or warm, the engine should be started without use of the accelerator.

Brake System

▼ Foot Brake

Your Mazda has power-assisted brakes that adjust automatically through normal use.

Should power-assist fail, you can stop by applying greater force than normal to the brake pedal. But the distance required to stop will be greater than usual.



J07L_8Q42-EA-01F.book Page 5 Tuesday, March 5, 2002 3:14 PM

WARNING

Driving with the Engine Off: Continuing to drive when the engine is stalled or turned off is dangerous. Braking will require more effort, and the brake's power-assist could be depleted if you pump the brake. This will cause longer stopping distances or even an accident. Don't continue driving when the engine is stalled or turned off, find a safe place to stop.

<u>Riding the Brakes:</u>

Driving with your foot continuously on the brake pedal or steadily applying the brakes for long distances is dangerous. This causes overheated brakes, resulting in longer stopping distances or even total brake failure. This could cause loss of vehicle control and a serious accident. Avoid continuous application of the brakes. Shift to a lower gear when going down steep hills.

Driving with Wet Brakes:

Driving with wet brakes is dangerous. Increased stopping distance or the vehicle pulling to one side when braking could result in a serious accident. Light braking will indicate whether the brakes have been affected. Dry the brakes by driving very slowly and applying the brakes lightly until brake performance is normal. Driving Your Mazda Starting and Driving


▼ Parking Brake

CAUTION

Driving with the parking brake on will cause excessive wear of the brake linings or pads.


Setting the parking brake


Depress the brake pedal, then pull the brake handle fully upward.

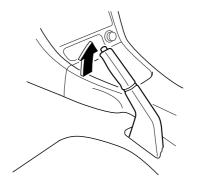


Releasing the parking brake

Depress the brake pedal, then pull the handle up and press the button. Lower the handle to the release position while holding in the button.

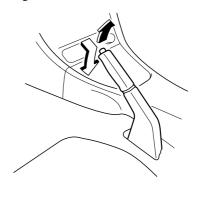

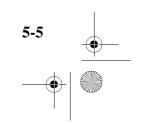

 J07L_8Q42-EA-01F.book Page 6 Tuesday, March 5, 2002 3:14 PM



Driving Your Mazda Starting and Driving

▼ Brake System Warning Light



This warning has the following functions:

Parking brake warning

The light comes on when the parking brake is applied with the ignition switch in the START or ON position. It goes off when the parking brake is fully released.

Low brake fluid level warning/ Electronic brake force distribution system warning

If the light stays on after the parking brake is fully released, you may have a brake problem.

Drive to the side of the road and park off the right-of-way.

Low brake fluid level warning

You may notice that the pedal is harder to push or that it may go closer to the floor. In either case, it will take longer to stop the vehicle.

- 1. With the engine stopped, check the brake fluid level immediately and add fluid as required (page 8-17).
- 2. After adding fluid, check the light again.

If the warning light remains on, or if the brakes do not operate properly, do not

5-6

drive the vehicle. Have it towed to an Authorized Mazda Dealer.

Even if the light goes off, have your brake system inspected as soon as possible.

Electronic brake force distribution system warning

If the electronic brake force distribution control unit determines that some components are operating incorrectly, the control unit may turn the brake system warning light on.

In this case, the ABS warning light comes on at the same time (page 5-26).

☆ WARNING

<u>Brake Warning Light:</u> Driving with the brake system warning light on is dangerous. It indicates that your brakes may not work at all or that they could completely fail at any time. If this light remains on, have the brakes inspected immediately. Don't drive with this light on, and contact an Authorized Mazda Dealer to have the brakes inspected as soon as possible.

ABS Warning Light and Brake

Warning Light on at the Same Time: Driving when the brake system warning light and ABS warning light are on at the same time is dangerous. When both lights are on, the rear wheels could lock more quickly in an emergency stop than under normal circumstances.

Don't drive with both lights on, and contact an Authorized Mazda Dealer to have the brakes inspected as soon as possible.

J07L_8Q42-EA-01F.book Page 7 Tuesday, March 5, 2002 3:14 PM

▼Anti-Lock Brake System (ABS)

The ABS control unit continuously monitors the speed of each wheel. If one is about to lock up, the ABS responds by automatically releasing and reapplying that wheel's brake.

The driver will feel a slight vibration in the brake pedal and may hear a chattering noise from the brake system. This is normal when the ABS operates. Don't pump the brakes, continue to press down on the brake pedal.

A WARNING

<u>ABS:</u>

The ABS cannot compensate for unsafe and reckless driving, excessive speed, tailgating (following another vehicle too closely), and hydroplaning (reduced tire friction and road contact because of water on the road surface). You can still have an accident. So don't rely on ABS as a substitute for safe driving.

NOTE

Braking distances may be longer on loose surfaces (snow or gravel, for example) which usually have a hard foundation. A vehicle with a normal braking system may require less distance to stop under these conditions because the tires will build up a wedge of surface layer when the wheels skid. Driving Your Mazda
Starting and Driving

▼ABS Warning Light



The warning light stays on for a few seconds when the ignition switch is turned to the ON position.

If the ABS warning light stays on while you're driving, the ABS control unit has detected a system malfunction. If this occurs, your brakes will function normally as if the vehicle had no ABS. Should this happen, consult an Authorized Mazda Dealer as soon as possible.

A WARNING

ABS Warning Light and Brake Warning Light on at the Same Time: Driving when the brake system warning light and ABS warning light are on at the same time is dangerous. When both lights are on, the rear wheels could lock more quickly in an emergency stop than under normal circumstances.

Don't drive with both lights on, and contact an Authorized Mazda Dealer to have the brakes inspected as soon as possible.

5 - 7

J07L_8Q42-EA-01F.book Page 8 Tuesday, March 5, 2002 3:14 PM


Driving Your Mazda Starting and Driving

NOTE

When the engine is jump-started to charge the battery, uneven rpm occurs and the ABS warning light comes on. This is due to a weak battery, not a malfunction. Recharge the battery.

▼ Brake Pad Wear Indicator

When the disc brake pads become worn, the built-in wear indicators contact the disc plates. This causes a screeching noise to warn that the pads should be replaced.

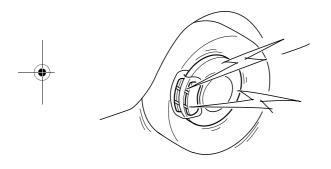


When you hear this noise, consult an Authorized Mazda Dealer as soon as possible.

A WARNING

Driving with Worn Disc Pads: Driving with worn disc pads is dangerous. The brakes could fail and cause a serious accident. As soon as you hear a screeching noise consult an Authorized Mazda Dealer.

Manual Transmission Operation

▼ Manual Transmission Shift Pattern

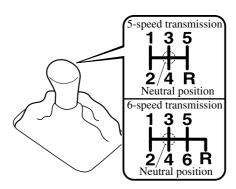

The shift pattern of the transmission is conventional, as shown.

Press the clutch pedal all the way down while shifting; then release it slowly.

(5-speed transmission)

A safety feature prevents accidental shifting from 5 to reverse. The shift lever must be put in neutral before being shifted to reverse.

(6-speed transmission)

Vehicles with 6-speed transmission have been equipped with a device to prevent shifting to reverse by mistake. Apply greater than normal force when shifting to reverse.

5-8

J07L_8Q42-EA-01F.book Page 9 Tuesday, March 5, 2002 3:14 PM

WARNING

<u>Sudden Engine-Braking:</u> Shifting down while driving on wet, snowy, or frozen roads, or driving at

high speeds causes sudden engine braking, which is dangerous. The sudden change in tire speed could cause the tires to skid. This could lead to loss of vehicle control and an accident. Do not cause sudden engine braking on slippery road surfaces or at high speeds.

CAUTION

- Keep your foot off the clutch pedal except when shifting gears. Also, don't use the clutch to hold the vehicle on an upgrade. This will avoid needless clutch wear and damage.
- Make sure the vehicle comes to a complete stop before shifting to reverse.


Shifting to reverse while the vehicle is still moving may damage the transmission.

NOTE

If shifting to reverse is difficult, shift into neutral, release the clutch pedal, and try again.


Driving Your Mazda Starting and Driving

Automatic Transmission Controls

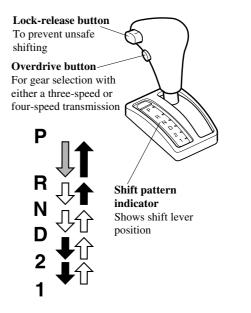

Various Lockouts:

	Indicates that you must depress the brake pedal and hold in the lock- release button to shift (The ignition switch must be in the ON position).
\rightarrow	Indicates the shift lever can be shifted freely into any position.
→	Indicates that you must hold in the lock-release button to shift.

 

J07L_8Q42-EA-01F.book Page 10 Tuesday, March 5, 2002 3:14 PM

Driving Your Mazda Starting and Driving

▼ Transmission Ranges

The shift lever must be in P or N to operate the starter.

<u>P (Park)</u>

P locks the transmission and prevents the rear wheels from rotating.

☆ WARNING

<u>Holding the Vehicle with P:</u> Setting the shift lever to the P position without using the parking brake to hold the vehicle is dangerous. If P fails to hold, the vehicle could move and cause an accident. To hold the vehicle, set the shift lever to P AND set the parking brake.

- Shifting into P, N or R while the vehicle is moving can damage your transmission.
- Shifting into a driving gear or reverse when the engine is running faster than idle can damage the transmission.

R (Reverse)

In position R, the vehicle moves only backward. You must be at a complete stop before shifting to or from R, except as explained under Rocking the Vehicle (page 4-7).

N (Neutral)

In N, the wheels and transmission are not locked. The vehicle will roll freely even on the slightest incline unless the parking brake or brakes are on.

5-10

☆ WARNING

Shifting from N or P:

It's dangerous to shift from N or P into a driving gear when the engine is running faster than idle. If this is done, the vehicle could move suddenly, causing an accident or serious injury. If the engine is running faster than idle, don't shift from N or P into a driving gear.

Shifting into N while Driving: Shifting into N while driving is dangerous. Engine braking cannot be applied when decelerating which could lead to an accident or serious injury. Do not shift into N when driving the vehicle.

D (Drive)

D is the normal driving position. From a stop, the transmission will automatically shift through a 4-gear sequence.

<u>2 (Second)</u>

The 2 position is helpful when driving in heavy, slow-moving traffic and climbing hills, for engine braking assist when going down hills, or for starting on slick surfaces and other situations where gentle acceleration may be necessary. Do not exceed 104 km/h (64 mph) in the 2 position.

<u>1 (Low)</u>

Use the 1 position for maximum power in hard-pulling situations, or for climbing and descending very steep grades. Do not exceed 59 km/h (36 mph) in the 1 position.

J07L_8Q42-EA-01F.book Page 11 Tuesday, March 5, 2002 3:14 PM

WARNING

Sudden Engine-Braking:

Shifting down while driving on wet, snowy, or frozen roads, or driving at high speeds causes sudden engine braking, which is dangerous. The sudden change in tire speed could cause the tires to skid. This could lead to loss of vehicle control and an accident. Do not cause sudden engine braking on slippery road surfaces or at high speeds.

▼ Shift-Lock System

For your safety, the automatic transmission has a shift-lock, which prevents shifting out of P unless the brake pedal is depressed.

To shift from P:

- 1. Depress and hold the brake pedal.
- 2. Start the engine.
- 3. Push and hold the lock-release button.
- 4. Move the shift lever.

NOTE


- When the ignition switch is in the ACC or LOCK position, the transaxle cannot be shifted from P.
- If the brake is pumped with the shift lever in P, a chattering near the shift lever may be heard. Don't worry, this is a normal sound.
- To be sure the vehicle is in park, the ignition key cannot be removed unless the shift lever is in P.

Driving Your Mazda Starting and Driving

▼ Shift-Lock Override

If the shift lever won't move from P with the brake pedal depressed, continue to hold down the pedal.


- 1. Remove the shift-lock override cover with a screwdriver.
- 2. Insert a screwdriver and push it down.

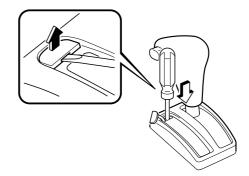

- 3. Push and hold the lock-release button.
- 4. Move the shift lever.
- 5. Take the vehicle to an Authorized Mazda Dealer to have the system checked.
- ▼ Overdrive

Overdrive operation


In D, the transmission automatically shifts to overdrive, which improves fuel economy and reduces noise.

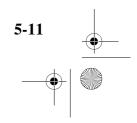

J07L_8Q42-EA-01F.book Page 12 Tuesday, March 5, 2002 3:14 PM

Driving Your Mazda Starting and Driving

To allow engine braking when going down a steep grade, make sure the overdrive button is in the off position.

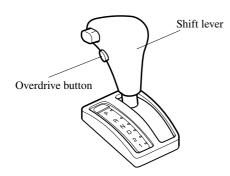

And for a smoother ride with less shifting, don't use it when:

- Going up a steep grade.
- Driving in stop-and-go traffic.
- Pulling heavy loads.

To turn off the overdrive, push the button.

The transmission will then shift through a three-gear sequence in D. Shift patterns without overdrive: D = 1st, 2nd, 3rd

- 2 = 2nd
- 1 = 1st

To turn it on, push the button again.

Shift patterns with overdrive: D = 1 st, 2nd, 3rd, 4th 2 = 2nd 1 = 1 st

O/D OFF indicator light



This light comes on when the overdrive has been turned off.

If the overdrive-off indicator light flashes, the transaxle has an electrical problem. Continuing to drive your Mazda in this condition could cause damage to your transaxle. Consult an Authorized Mazda Dealer as soon as possible.

▼ Driving Tips

Passing

For extra power when passing another vehicle or climbing steep grades, depress the accelerator fully. The transmission will shift to a lower gear, depending on vehicle speed.

Climbing steep grades from a stop

To climb a steep grade from a stopped position:

- 1. Depress the brake pedal.
- 2. Shift to D or 1, depending on the load weight and grade steepness.
- 3. Release all brakes while gradually accelerating.

Descending steep grades

When descending a steep grade, shift to 2 or 1, depending on load weight and grade steepness. Descend slowly, using the brakes only occasionally to prevent them from overheating.

5-12

J07L_8Q42-EA-01F.book Page 13 Tuesday, March 5, 2002 3:14 PM

Driving Your Mazda Starting and Driving

Power Steering

Power steering is only operable when the engine is running. If the engine is off or if the power steering system is inoperable, you can still steer, but it requires more physical effort.

If the steering feels rigid during normal driving, consult an Authorized Mazda Dealer.

CAUTION

Never hold the steering wheel to the extreme left or right for more than five seconds with the engine running. This could damage the power steering system.

Cruise Control

With cruise control, you can set and automatically maintain any speed of more than about 40 km/h (25 mph).

A WARNING

<u>Cruise Control Use:</u> Using cruise control in the following conditions could cause you to lose control of the vehicle:


- Heavy or unsteady traffic
- Slippery or winding roads
- Similar restrictions that require inconsistent speed Don't use cruise control in these

situations.

▼ Cruise Set Indicator Light

CRUISE

This light comes on when a cruising speed is set.

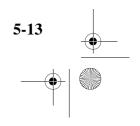


J07L_8Q42-EA-01F.book Page 14 Tuesday, March 5, 2002 3:14 PM

Driving Your Mazda Starting and Driving

▼ Activation/Deactivation


To activate the system, push the CRUISE MAIN switch.

To deactivate the system, push the switch again.

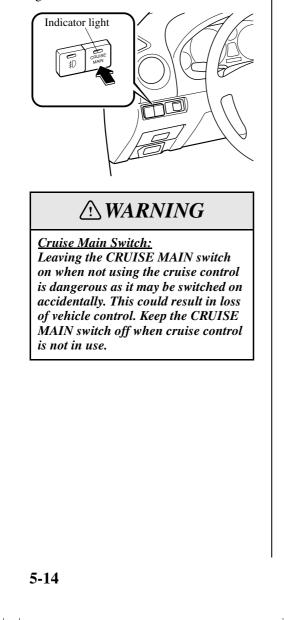

▼ To Set Speed

 - 1. Turn on the CRUISE MAIN switch.
- 2. Accelerate to the desired speed, which must be more than 40 km/h (25 mph).
- 3. Turn the control knob to SET/COAST and release it at the speed you want. Release the accelerator at the same time.



Don't continue to hold the knob. Until you release it, speed will continue to drop (unless you continue to accelerate) and you'll miss the desired speed.

NOTE

- The SET function can't be activated until about 2 seconds after the CRUISE MAIN switch has been engaged.
- On a steep grade, the vehicle may momentarily slow down going up or speed up while going down.



 
J07L_8Q42-EA-01F.book Page 15 Tuesday, March 5, 2002 3:14 PM

▼ To Increase Cruising Speed


Follow either of these procedures.

• Turn the control knob to RESUME/ ACCEL and hold it. Your vehicle will accelerate. Release the knob at the speed you

want.



 • Accelerate to the desired speed. Turn the control knob to SET/COAST and release it immediately.




NOTE

Accelerate if you want to speed up temporarily when the cruise control is on. Greater speed will not interfere with it or change the set speed. Take your foot off the accelerator to return to the set speed.

Driving Your Mazda Starting and Driving

▼ To Decrease Cruising Speed

 
Turn the control knob to SET/COAST and hold it. The vehicle will gradually slow. Release the knob at the speed you want.




▼ To Resume Cruising Speed at More Than 40 km/h (25 mph)

If some other method besides the CRUISE MAIN was used to cancel cruising speed and the system is still activated, the most recent set speed will automatically resume when the control knob is turned to RESUME/ACCEL.

 If vehicle speed is below 40 km/h (25 mph), increase the vehicle speed up to 40 km/h (25 mph) and turn the control knob to RESUME/ACCEL.



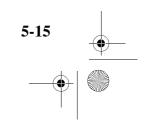

J07L_8Q42-EA-01F.book Page 16 Tuesday, March 5, 2002 3:14 PM

Driving Your Mazda Starting and Driving

NOTE

With an automatic transmission vehicle, the gear is automatically selected when going uphill.

▼ To Cancel


To turn off the system, use **one** of these methods:

- Press the CRUISE MAIN switch.
- Slightly depress the brake pedal.
- (Manual transmission) Depress the clutch pedal.

The system is off when the ignition is off.

NOTE

Cruise control will cancel at about 15 km/h (9 mph) below the preset speed or below 40 km/h (25 mph).

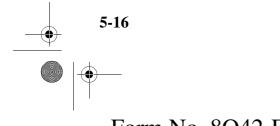




J07L_8Q42-EA-01F.book Page 17 Tuesday, March 5, 2002 3:14 PM


 (\mathbf{e})

Driving Your Mazda Instrument Cluster and Indicators

Meters and Gauges

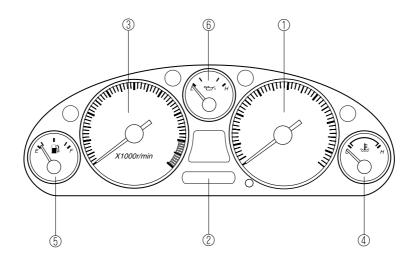

(1)Speedometer	5-18
2 Odometer and Trip Meter	5-18
③Tachometer	5-19
(4) Engine Coolant Temperature Gauge	5-19
⑤Fuel Gauge	5-20
6 Engine Oil Pressure Gauge	5-20

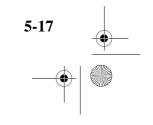

Form No. 8Q42-EA-01F

-(¢

J07L_8Q42-EA-01F.book Page 18 Tuesday, March 5, 2002 3:14 PM

Driving Your Mazda Instrument Cluster and Indicators

▼Speedometer

Odometer

 
ODO

The speedometer indicates the speed of the vehicle.

▼ Odometer and Trip Meter

The ignition switch must be in the ON position.

The display mode can be changed from odometer to trip meter A to trip meter B and then back to odometer by pressing the selector. The selected mode will be displayed.



Selector

B

Odometer

When this mode is selected, ODO will be displayed. The odometer records the total distance the vehicle has been driven.

Trip meter


The trip meter can record the total distance of two trips. One is recorded in trip meter A, and the other is recorded in trip meter B.

For instance, trip meter A can record the distance from the point of origin, and trip meter B can record the distance from where the fuel tank is filled.

When trip meter A is selected, pressing the selector again within one second will change to trip meter B mode.

When trip meter A is selected, TRIP A will be displayed. When trip meter B is selected, TRIP B will be displayed.

The trip meter records the total distance the vehicle is driven until the meter is again reset. Return it to "0.0" by holding the selector depressed for more than 1 second. Use this meter to measure trip distances and to compute fuel consumption.

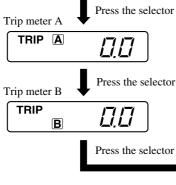



5-18

Form No. 8Q42-EA-01F

J07L_8Q42-EA-01F.book Page 19 Tuesday, March 5, 2002 3:14 PM




Instrument Cluster and Indicators

NOTE

- Only the trip meters record tenths of kilometers (miles).
- The trip record will be erased when;
 - The power supply is interrupted (blown fuse or the battery is disconnected).
 - The vehicle is driven over 999.9 km (mile).

▼ Tachometer

The tachometer shows engine speed in thousands of revolutions per minute (rpm).

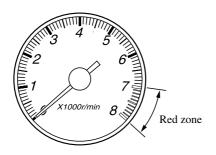


CAUTION

Don't run the engine with the tachometer needle in the RED ZONE. This may cause severe engine damage.

▼ Engine Coolant Temperature Gauge

 
The engine coolant temperature gauge shows the temperature of the engine coolant.



If the needle exceeds normal range toward H, it indicates overheating.

CAUTION

 Driving with an overheated engine can cause serious engine damage (page 7-11).




J07L_8Q42-EA-01F.book Page 20 Tuesday, March 5, 2002 3:14 PM


Driving Your Mazda Instrument Cluster and Indicators

▼Fuel Gauge

 The fuel gauge shows approximately how much fuel is in the tank. We recommend keeping the tank over 1/4 full. When the needle is near E, refuel as soon as possible.



▼Engine Oil Pressure Gauge

 

Engine oil pressure is normal when the engine oil pressure gauge needle points halfway between L and H with the engine running.

If the needle on the gauge doesn't move after starting the engine, follow steps 1 through 3.

If the engine oil pressure gauge moves to L (low) while you are driving, drive to the side of the road and park off the right-of-way. Set the parking brake. Then follow steps 1 through 3.

- 1. Turn off the engine and inspect the engine oil level (page 8-13). If it's low, add oil.
- 2. Start the engine.
- 3. If the needle still doesn't move, get a tow to the nearest service station or to an Authorized Mazda Dealer.

CAUTION

Don't run the engine if the oil pressure is low. It could result in extensive engine damage.


5-20 • • • • • • • • • • • • • • • • • J07L_8Q42-EA-01F.book Page 21 Tuesday, March 5, 2002 3:14 PM




▼ Dashboard Illumination

 $(\mathbf{\Phi})$

When the headlight switch is in the SOFor SDED position, rotate the thumb-wheel to adjust the brightness of the dashboard lights.

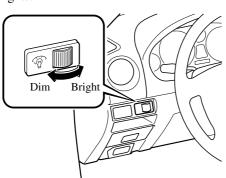

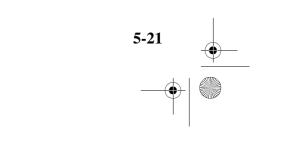

Form No. 8Q42-EA-01F


-(\$

J07L_8Q42-EA-01F.book Page 22 Tuesday, March 5, 2002 3:14 PM

(•

Driving Your Mazda Warning/Indicator Lights and Beeps

Warning/Indicator Lights

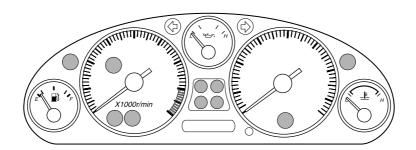

Warning/Indicator lights will appear in any of the highlighted areas

Signal	Warning/Indicator Lights	Page
BRAKE	Brake System Warning Light	5-24
- •	Charging System Warning Light	5-25
КŢ)	Check Engine Light	5-26
(ABS)	ABS Warning Light	5-26
- \ ;	Air Bag/Seat Belt Pretensioner System Warning Light	5-27
×.	Seat Belt Warning Light	5-27
	Immobilizer System Warning Light	5-27

5-22

J07L_8Q42-EA-01F.book Page 23 Tuesday, March 5, 2002 3:14 PM

۲

Driving Your Mazda Warning/Indicator Lights and Beeps

Signal	Warning/Indicator Lights	Page
ΞD	Headlight High-Beam Indicator Light	5-28
O/D Off	O/D OFF Indicator Light	5-28
CRUISE	Cruise Set Indicator Light	5-28



J07L_8Q42-EA-01F.book Page 24 Tuesday, March 5, 2002 3:14 PM

Driving Your Mazda Warning/Indicator Lights and Beeps

▼ Brake System Warning Light



This warning has the following functions:

Parking brake warning

The light comes on when the parking brake is applied with the ignition switch in the START or ON position. It goes off when the parking brake is fully released.

Low brake fluid level warning/ Electronic brake force distribution system warning

If the light stays on after the parking brake is fully released, you may have a brake problem.

Drive to the side of the road and park off the right-of-way.

Low brake fluid level warning

You may notice that the pedal is harder to push or that it may go closer to the floor. In either case, it will take longer to stop the vehicle.

- 1. With the engine stopped, check the brake fluid level immediately and add fluid as required (page 8-17).
- 2. After adding fluid, check the light again.

If the warning light remains on, or if the brakes do not operate properly, do not drive the vehicle. Have it towed to an Authorized Mazda Dealer.

Even if the light goes off, have your brake system inspected as soon as possible.

Electronic brake force distribution system warning

If the electronic brake force distribution control unit determines that some components are operating incorrectly, the control unit may turn the brake system warning light on.

In this case, the ABS warning light comes on at the same time (page 5-26).

5-24

J07L_8Q42-EA-01F.book Page 25 Tuesday, March 5, 2002 3:14 PM

Driving Your Mazda Warning/Indicator Lights and Beeps

∆ WARNING

Brake Warning Light: Driving with the brake system warning light on is dangerous. It indicates that your brakes may not work at all or that they could completely fail at any time. If this light remains on, have the brakes inspected immediately. Don't drive with this light on, and contact an Authorized Mazda Dealer to have the brakes inspected as soon as possible.

ABS Warning Light and Brake Warning Light on at the Same Time: Driving when the brake system warning light and ABS warning light are on at the same time is dangerous. When both lights are on, the rear wheels could lock more quickly in an emergency stop than under normal circumstances.

Don't drive with both lights on, and contact an Authorized Mazda Dealer to have the brakes inspected as soon as possible. ▼ Charging System Warning Light

 


This warning light comes on when the ignition switch is turned to the ON position and goes off when the engine is started.

If the warning light comes on while driving, it indicates a malfunction of the alternator or of the charging system. Drive to the side of the road and park off the right-of-way. Consult an Authorized Mazda Dealer.

CAUTION

Don't continue driving when the charging system warning light is illuminated.



J07L_8Q42-EA-01F.book Page 26 Tuesday, March 5, 2002 3:14 PM

Driving Your Mazda Warning/Indicator Lights and Beeps

▼ Check Engine Light

If this light comes on while driving, the vehicle may have a problem. It is important to note the driving conditions when the light came on and consult an Authorized Mazda Dealer.

The check engine light may come on in the following cases:

- The fuel tank level being very low or approaching empty.
- The engine's electrical system has a problem.
- The emission control system has a problem.
- The fuel-filler cap is missing or not tightened securely.

If the check engine light flashes continuously, decrease your speed and consult an Authorized Mazda Dealer as soon as possible.

Form No. 8Q42-EA-01F

▼ABS Warning Light



The warning light stays on for a few seconds when the ignition switch is turned to the ON position.

If the ABS warning light stays on while you're driving, the ABS control unit has detected a system malfunction. If this occurs, your brakes will function normally as if the vehicle had no ABS. Should this happen, consult an Authorized Mazda Dealer as soon as possible.

 
☆ WARNING

ABS Warning Light and Brake Warning Light on at the Same Time: Driving when the brake system warning light and ABS warning light are on at the same time is dangerous. When both lights are on, the rear wheels could lock more quickly in an emergency stop than under normal circumstances.

Don't drive with both lights on, and contact an Authorized Mazda Dealer to have the brakes inspected as soon as possible.

5-26

J07L_8Q42-EA-01F.book Page 27 Tuesday, March 5, 2002 3:14 PM



Driving Your Mazda Warning/Indicator Lights and Beeps

NOTE

When the engine is jump-started to charge the battery, uneven rpm occurs and the ABS warning light comes on. This is due to a weak battery, not a malfunction. Recharge the battery.

▼Air Bag/Seat Belt Pretensioner System Warning Light



If the air bag/seat belt pretensioner system is OK, the warning light comes on when the ignition switch is turned to the ON position or after the engine is cranked. After about 6 seconds it goes out.

A system malfunction is indicated when the warning light constantly flashes, stays on or doesn't come on at all. If any of these occur, consult an Authorized Mazda Dealer as soon as possible. The system may not work in an accident.

A WARNING

<u>Self-Servicing the Air Bag/</u> <u>Pretensioner Systems:</u>

Self-servicing or tampering with the systems is dangerous. An air bag/ pretensioner could accidentally activate or become disabled. This could cause serious injuries. Never tamper with the systems and always have an Authorized Mazda Dealer perform all servicing and repairs.

▼ Seat Belt Warning Light



If the driver's seat belt is not fastened when the ignition switch is turned to the ON position, the seat belt warning light will remain on until the belt is fastened. If the system does not operate correctly, consult an Authorized Mazda Dealer.

▼Immobilizer System Warning Light



If the immobilizer system is working properly, the light will come on when the ignition switch is turned to the ON or START position. The light will go out when confirmation by the immobilizer system is completed.

If the light flashes rapidly, fails to come on, or comes on and stays on, it indicates a system malfunction. If any of these occur, contact an Authorized Mazda Dealer as soon as possible.



J07L_8Q42-EA-01F.book Page 28 Tuesday, March 5, 2002 3:14 PM

Driving Your Mazda Warning/Indicator Lights and Beeps

▼ Headlight High-Beam Indicator Light



This light indicates one of two things:

- The high-beam headlights are on.
- The turn signal lever is in the flash-topass position.

VO/D OFF Indicator Light



This light comes on when the overdrive has been turned off.

CAUTION

 
If the overdrive-off indicator light flashes, the transaxle has an electrical problem. Continuing to drive your Mazda in this condition could cause damage to your transaxle. Consult an Authorized Mazda Dealer as soon as possible. ▼ Cruise Set Indicator Light

CRUISE

This light comes on when a cruising speed is set.

5-28

J07L_8Q42-EA-01F.book Page 29 Tuesday, March 5, 2002 3:14 PM



Driving Your Mazda Warning/Indicator Lights and Beeps

Beeps

▼Seat Belt Warning Beep


If the driver's seat belt is not fastened when the ignition switch is turned to the ON position, a beep will sound for about 6 seconds.

▼ Ignition Key Reminder

If the ignition switch is in the LOCK or ACC position, a beep will sound when any door is opened.

▼Lights-On Reminder

If lights are on and the key is removed from the ignition switch, a beep will sound when any door is opened.

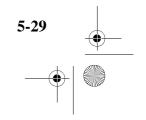


Form No. 8Q42-EA-01F

J07L_8Q42-EA-01F.book Page 30 Tuesday, March 5, 2002 3:14 PM

 Driving Your Mazda Switches and Controls





▼Headlights

To turn on the lights, turn the knob on the end of the control lever.

Lever Position	OFF	ED OE	≣D≣D
Headlights	Off	Off	On
Taillights Parking lights License lights Side-marker lights	Off	On	On

NOTE


To prevent discharging the battery, don't leave the lights on while the engine is off.

▼ Lights-On Reminder

If lights are on and the key is removed from the ignition switch, a beep will sound when any door is opened.


▼ Headlight High-Low Beam

Push the lever forward for high beams. Pull it back for low.

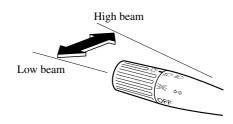

▼ Flashing the Headlights

 To flash the headlights, pull the lever fully toward you. The headlight switch need not be on, and the lever will return to the normal position when released.






J07L_8Q42-EA-01F.book Page 31 Tuesday, March 5, 2002 3:14 PM

Turn and Lane-Change Signals

▼ Turn Signal

Move the signal lever down (for a left turn) or up (for a right turn) to the stop position. The signal will self-cancel after the turn is completed.

If the indicator light continues to flash after a turn, manually return the lever to its original position.

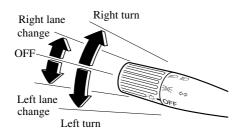

Green indicators on the dashboard show which signal is working.

Lane-change signals

Move the lever slightly toward the direction of the change —until the indicator flashes— and hold it there. It will return to the off position when released.


NOTE

If an indicator light stays on without flashing or if it flashes abnormally, the turn signal bulb may be burned out.

Driving Your Mazda Switches and Controls

Fog Lights

Use this switch to turn on the fog lights. They help you to see as well as to be seen.

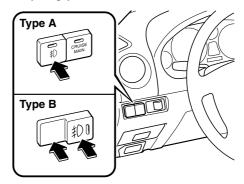

To turn on the fog lights, first turn on the headlight switch. Then press the fog light switch.


To turn the fog lights off:

(Type A)

Press the fog light switch again or turn the headlight switch off.

(Type B)

Press the left part of the fog light switch or turn the headlight switch off.

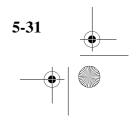

J07L_8Q42-EA-01F.book Page 32 Tuesday, March 5, 2002 3:14 PM

Driving Your Mazda Switches and Controls

Daytime Running Lights

In Canada, vehicles must be driven with the headlights on during daytime operation.

For that reason, the daytime running lights automatically turn on when the ignition switch is turned to the ON position.

NOTE

The running lights go off when the parking brake is applied.

Windshield Wipers and Washer

The ignition switch must be in the ON position.

A WARNING

<u>Frozen Washer Fluid:</u> Using windshield washer fluid in freezing temperatures is dangerous. The washer fluid could freeze on the windshield and block your vision. You could have an accident. Don't use the washer without first warming the windshield.

NOTE

Because heavy ice and snow can jam the wiper blades, the wiper motor is protected by a circuit breaker. This mechanism will automatically stop operation of the blades, but only for about 5 minutes.

 
If this happens, turn off the wiper switch and park off the right-of-way, and remove the snow and ice. After 5 minutes, turn on the switch and the blades should operate normally. If they don't resume functioning, consult an Authorized Mazda Dealer as soon as possible.



Form No. 8Q42-EA-01F

J07L_8Q42-EA-01F.book Page 33 Tuesday, March 5, 2002 3:14 PM

▼ Windshield Wipers




Turn the wipers on by pulling the lever down. INT — Intermittent

I - Normal

II — Fast

One-touch wipers

 
For a single wiping cycle, push the lever forward and release it.



Driving Your Mazda Switches and Controls

▼Windshield Washer

 
Pull the lever toward you and hold it to spray washer fluid.



NOTE

In the OFF or INT position, the wipers will be activated until the lever is released.

 If the washer doesn't work, inspect the fluid level (page 8-22). If it's OK, consult an Authorized Mazda Dealer.



Form No. 8Q42-EA-01F

J07L_8Q42-EA-01F.book Page 34 Tuesday, March 5, 2002 3:14 PM

Driving Your Mazda Switches and Controls


Rear Window Defroster

The rear defroster clears frost, fog, and thin ice from the rear window.

The ignition switch must be in the ON position.

Push the switch to turn on the rear window defroster; the indicator light will come on.

Push the switch again to turn it off.

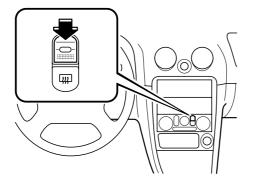

CAUTION

Don't use sharp instruments or window cleaners with abrasives to clean the inside of the rear window surface. They may damage the defroster grid inside the window.

NOTE

This defroster is not designed for melting snow. If there is an accumulation of snow on the rear window, brush it off before using the defroster.

5-34

Horn

To sound the horn, press around the \rightarrow mark of the steering wheel.


J07L_8Q42-EA-01F.book Page 35 Tuesday, March 5, 2002 3:14 PM

Driving Your Mazda Switches and Controls

Hazard Warning Flasher

The hazard warning lights should always be used when you stop on or near a roadway.


The hazard warning lights warn other drivers that your vehicle is a traffic hazard and that they must take extreme caution when near it.

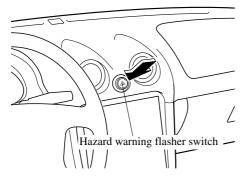

Depress the hazard warning switch and all four turn signals will flash at once.

NOTE

 - The turn signals don't work when the hazard warning lights are on.
- Check local regulations about the use of hazard warning lights while the vehicle is being towed. They may forbid it.



J07L_8Q42-EA-01F.book Page 36 Tuesday, March 5, 2002 3:14 PM

-•

۲



J07L_8Q42-EA-01F.book Page 1 Tuesday, March 5, 2002 3:14 PM

 (ϕ)


6 Inte

Interior Comfort

Use of various features for drive comfort, including air-conditioning and audio system.

Climate Control System	6-2
Operating Tips	
Vent Operation	
Control Panel	
Audio System	6-10
Antenna	
Operating Tips for Audio System	
Audio Set	
Safety Certification	
Interior Fauirment	6 27
Interior Equipment	
Sunvisors	
Interior Light	
Lighter	6-38
Ashtray	
Cup Holders	
Storage Compartments	



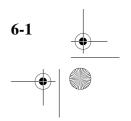

J07L_8Q42-EA-01F.book Page 2 Tuesday, March 5, 2002 3:14 PM

Interior Comfort Climate Control System

Operating Tips

▼ Operating the Climate Control System

Operate the climate control system with the engine running.

▼ Clearing the Air Inlet

Clear all obstructions like leaves, snow and ice from the hood and the air inlet in the cowling grille to improve the system efficiency.

V Foggy Windows

The windows may fog up easily in humid weather. Use the climate control system to defog the windows.

To help defog the windows, operate the air conditioner to dehumidify the air.

▼ Outside/Recirculated Air Position

Use the outside air position in normal conditions. The recirculated air position can be used temporarily when driving on dusty roads or for quick cooling of the interior.

▼ Parking in Direct Sunlight

If the vehicle has been parked in direct sunlight during hot weather, open the windows to let warm air escape, then run the climate control system.

▼Not Using for a Long Period

6-2

Run the air conditioner at least once a month to keep internal parts lubricated.

▼ Check the Refrigerant before Weather Gets Hot


Have the air conditioner checked before the weather gets hot. Lack of refrigerant may make the air conditioner less efficient. Consult an Authorized Mazda Dealer for refrigerant inspection.

The optional air conditioner is filled with R134a, a refrigerant that will not damage the ozone layer. If the air conditioner is low on refrigerant

or has a malfunction, consult an Authorized Mazda Dealer.

J07L_8Q42-EA-01F.book Page 3 Tuesday, March 5, 2002 3:14 PM

Interior Comfort Climate Control System

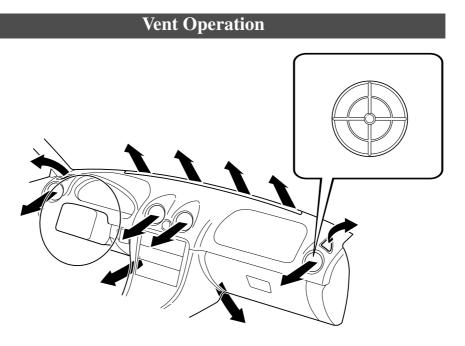


• Adjusting the Vents

Directing airflow

You can direct air flow by moving the adjustment knob.

NOTE

When using the air conditioner, mist may come out from the vents. This is not a sign of trouble but a result of humid air being suddenly cooled.

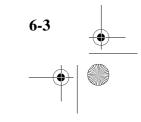

Form No. 8Q42-EA-01F


J07L_8Q42-EA-01F.book Page 4 Tuesday, March 5, 2002 3:14 PM

Interior Comfort Climate Control System

▼ Selecting the Airflow Mode


Dashboard Vents


Ŷ

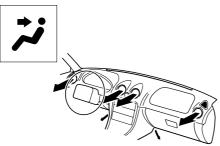


Defroster and Floor Vents

Defroster Vents

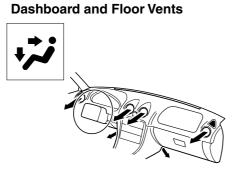

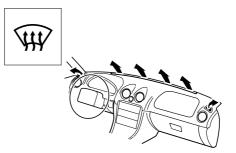



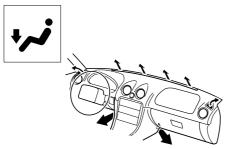




J07L_8Q42-EA-01F.book Page 5 Tuesday, March 5, 2002 3:14 PM


Interior Comfort Climate Control System

Control Panel

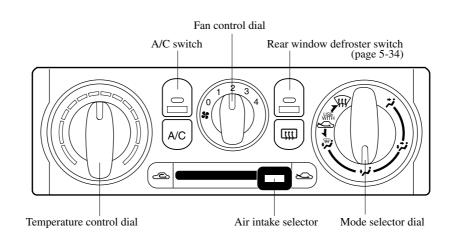


▼ Control Switches

 Temperature control dial




This dial controls temperature. Turn it clockwise for hot and counterclockwise for cold.
 
<u>Fan control dial</u>



This dial allows variable fan speeds. 0—Fan off

- 1—Low speed
- 2—Medium low speed
- 3—Medium high speed
- 4—High speed

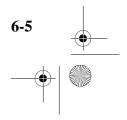

J07L_8Q42-EA-01F.book Page 6 Tuesday, March 5, 2002 3:14 PM

Interior Comfort Climate Control System

Mode selector dial



Turn the mode selector dial to select airflow mode (page 6-4).

A/C switch



Push the switch to turn the air conditioner on. An indicator light on the switch will illuminate when the fan control dial is on.

 
Push the switch once again to turn the air conditioner off.

NOTE

6-6

The air conditioner may not function when the outside temperature approaches 0 $^{\circ}$ C ((32 $^{\circ}$ F).

Air intake selector



This lever controls the source of air entering the vehicle.

It is recommended that under normal conditions the lever be kept in the outside air position.

Outside air position (🗠)

Outside air is taken into the vehicle. Use this position for normal ventilation and heating.

Recirculated air position (


Outside air is shut off. Air within the vehicle is recirculated.

This position can be used when driving on a dusty road or in similar conditions. It also helps to provide quicker cooling of the interior.

WARNING

J07L_8Q42-EA-01F.book Page 7 Tuesday, March 5, 2002 3:14 PM

▼Heating

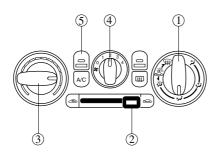


- 1. Set the mode selector dial to the vi position.
- 2. Set the air intake selector to the position.
- 3. Set the temperature control dial to the hot position.
- 4. Set the fan control dial to the desired speed.
- 5. If dehumidified heating is desired, turn on the air conditioner.

NOTE

- If the windshield fogs up easily, set the mode selector dial to the position.
- If cooler air is desired at face level, set the mode selector dial at the vi position and adjust the temperature control dial to maintain maximum comfort.
- The air to the floor is warmer than air to the face (except when the temperature control dial is set at the extreme hot or cold position).

Interior Comfort Climate Control System

▼ Cooling (With Air Conditioner)

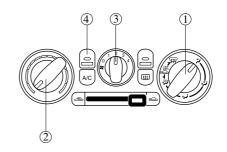

- 1. Set the mode selector dial to the 🕻
- 2. Set the temperature control dial to the desired position.
- 3. Set the fan control dial to the desired speed.
- 4. Turn on the air conditioner.
- 5. Adjust the fan control dial and temperature control dial to maintain maximum comfort.

CAUTION

When using the air conditioner while driving up long hills or in heavy traffic, closely monitor the temperature gauge (page 5-19).

The air conditioner may cause engine overheating. If the gauge indicates overheating, turn the air conditioner off.

6-7


J07L_8Q42-EA-01F.book Page 8 Tuesday, March 5, 2002 3:14 PM

Interior Comfort Climate Control System


NOTE

- When maximum cooling is desired, set the temperature control dial to the extreme cold position and set the air intake selector to the position, then set the fan control dial to the position 4.
- If warmer air is desired at floor level, set the mode selector dial at the 🕫 position and adjust the temperature control dial to maintain maximum comfort.
- The air to the floor is warmer than air to the face (except when the temperature control dial is set at the extreme hot or cold position).


Ventilation

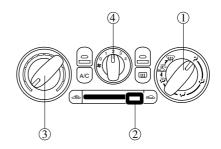

- 1. Set the mode selector dial to the 😕 position.
- 2. Set the air intake selector to the position.
- 3. Set the temperature control dial to the desired position.
- 4. Set the fan control dial to the desired speed.
- ▼ Windshield Defrosting and Defogging

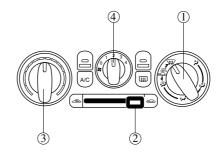

 - 1. Set the mode selector dial to the \mathfrak{W} position.
- 2. Set the air intake selector to the position.



6-8

J07L_8Q42-EA-01F.book Page 9 Tuesday, March 5, 2002 3:14 PM

- 3. Set the temperature control dial to the desired position.
- 4. Set the fan control dial to the desired speed.

WARNING

Foggy Windshield:


Using the \mathfrak{W} position with the temperature control set to the cold position will cause the outside of the glass to fog up. Your vision will be hampered, which could lead to a serious accident. Set the temperature control to the hot or warm position when using the \mathfrak{W} position.

NOTE

- For maximum defrosting, set the temperature control dial to the extreme hot position and the fan control dial to position 4.
- If warm air is desired at the floor, set the mode selector dial to the 🐺 position.

Interior Comfort Climate Control System

▼ Dehumidifying (With Air Conditioner)

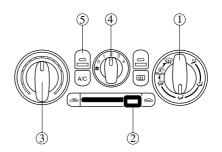

Operate the air conditioner in cool or cold weather to help defog the windshield and side windows.

- 1. Set the mode selector dial to the desired position.
- 2. Set the air intake selector to the position.
- 3. Set the temperature control dial to the desired position.
- 4. Set the fan control dial to the desired speed.
- 5. Turn on the air conditioner.

Form No. 8Q42-EA-01F


J07L_8Q42-EA-01F.book Page 10 Tuesday, March 5, 2002 3:14 PM

Interior Comfort Audio System

Antenna

▼ Power Antenna

The antenna automatically rises when the radio is turned on, and lowers when it is turned off. It does not need to be removed when leaving the vehicle.

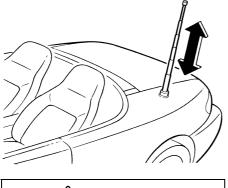

CAUTION

 
- To prevent damaging the antenna, retract it before entering a car wash facility or passing beneath a low overhead clearance.
- Make sure no one is near the antenna before turning on the radio to prevent injury or damage to the antenna.

Operating Tips for Audio System

▼ Radio Reception

AM characteristics

AM signals bend around such things as buildings or mountains and bounce off the ionosphere. Therefore, they can reach longer distances than FM signals. Because of this, two stations may sometimes be picked up on the same frequency at the same time.



FM characteristics

An FM broadcast range is usually about 40—50 km (25—30 miles) from the source. Because of extra coding needed to break the sound into two channels, stereo FM has even less range than monaural (non-stereo) FM.


FM Statio	on
40—50 km (25—30 miles)	



Form No. 8Q42-EA-01F

J07L_8Q42-EA-01F.book Page 11 Tuesday, March 5, 2002 3:14 PM


Signals from an FM transmitter are similar to beams of light because they do not bend around corners, but they do reflect. Unlike AM signals, FM signals cannot travel beyond the horizon. Therefore, FM stations cannot be received at the great distances possible with AM reception.

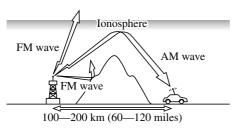

Atmospheric conditions can also affect FM reception. High humidity will cause poor reception. However, cloudy days may provide better reception than clear days.


Multipath noise

Since FM signals can be reflected by obstructions, it is possible to receive both the direct signal and the reflected signal at the same time. This causes a slight delay in reception and may be heard as a broken sound or a distortion. This problem may also be encountered when in close proximity to the transmitter.

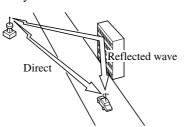

Flutter/Skip noise


Signals from an FM transmitter move in straight lines and become weak in valleys between tall buildings, mountains, and other obstacles. When a vehicle passes through such an area, the reception conditions may change suddenly, resulting in annoying noise.

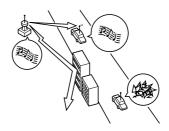

Weak signal noise

In suburban areas, broadcast signals become weak because of distance from the transmitter. Reception in such fringe areas is characterized by sound breakup.



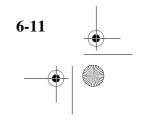


Form No. 8Q42-EA-01F

J07L_8Q42-EA-01F.book Page 12 Tuesday, March 5, 2002 3:14 PM

Interior Comfort Audio System


Strong signal noise

This occurs very close to a transmitter tower. The broadcast signals are extremely strong, so the result is noise and sound breakup at the radio receiver.

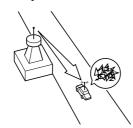

Station drift noise

When a vehicle reaches the area of two strong stations broadcasting at similar frequencies, the original station may be temporarily lost and the second station picked up. At this time there will be some noise from this disturbance.

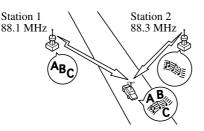

▼ Operating Tips for Cassette Tape Player

Cleaning the cassette tape player

The tape head, capstans, and pinch rollers will gather oxide residue from cassette tapes. This can cause weak or wavering sounds and damage to the cassette tapes and player. Use a good quality headcleaning tape or a liquid cleaner cassette tape to remove it.

Should the unit not operate normally, consult an Authorized Mazda Dealer. Never attempt to repair it or insert a screwdriver or anything else.

Handling the cassette tape player


The following precautions should be observed.

• Do not spill any liquid on the audio system.



• Do not insert any objects, other than cassette tape, into the slot.



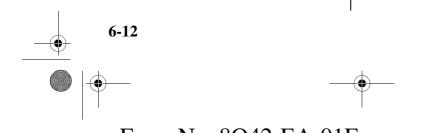

Form No. 8Q42-EA-01F

J07L_8Q42-EA-01F.book Page 13 Tuesday, March 5, 2002 3:14 PM

• If the cassette tape is loose, it may produce poor sound or performance during playback. Use a pencil or something similar to remove any slack.

A State

- Only cassette tapes that play no longer than 90 minutes should be used. Cassette tape exceeding 90 minutes are thin and may easily break.
- Do not leave a cassette tape in the tape player slot when not in use. Remove it completely to permit the slot door to close and to protect the mechanism from dust.
- Store cassette tape away from extreme heat, magnetic fields, and direct sunlight. Protect the exposed cassette tape from dirt and damage. Store cassette tapes in their original cases or other protective cases.
- Insert only cassette tapes into the slot. If objects other than cassette tapes are inserted, they may damage the player.

▼ Operating Tips for Mini Disc (MD) Player

 
Interior Comfort

Audio System

• The MD player has been designed to play MDs bearing the identification logo as shown. No other MDs can be played.




• When inserting the MD, make sure the MD label is facing up, and the MD is oriented to the insertion slot in the direction of the arrow. If not inserted correctly, the MD will be ejected, or may remain stuck in the MD deck.



• Do not touch the internal part of the MD. If the MD shutter is slid open for no reason, it may be broken.



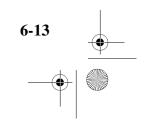

J07L_8Q42-EA-01F.book Page 14 Tuesday, March 5, 2002 3:14 PM

Interior Comfort Audio System

- Store MDs in their cases and away from direct sunlight.
- Do not insert fingers or foreign objects in the MD insertion slot as it could damage the MD deck.
- ▼ Operating Tips for CD Player/In-Dash CD Changer

Condensation phenomenon

Immediately after turning on the heater when the vehicle is cold, the CD or optical components (prism and lens) in the CD player/changer may become clouded with condensation. At this time, the CD will eject immediately when placed in the unit. A clouded CD can be corrected simply by wiping it with a soft cloth. Clouded optical components will clear naturally in about an hour. Wait for normal operation to return before attempting to use the unit.

Handling the CD player/In-dash CD changer

The following precautions should be observed.

• Do not spill any liquid on the audio system.



 
• Do not insert any objects, other than CDs, into the slot.




• The CD revolves at high speed within the unit. Defective (cracked or badly bent) CDs should never be used.



• Do not use non-conventional discs such as heart-shaped, octagonal discs, etc. The CD player/changer could be damaged.



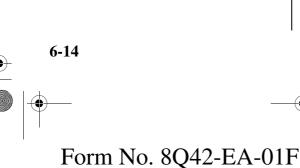


J07L_8Q42-EA-01F.book Page 15 Tuesday, March 5, 2002 3:14 PM

• A new CD may have rough edges on its inner and outer perimeters. If a disc with rough edges is used, proper setting will not be possible and the CD player/changer will not play the CD. Remove the rough edges in advance by using a ball-point pen or pencil as shown below. To remove the rough edges, rub the side of the pen or pencil against the inner and outer perimeter of the CD.



 • When driving over uneven surfaces, the sound will jump.




• The CD player/changer has been designed to play CDs bearing the identification logo as shown. No other discs can be played.




Interior Comfort Audio System

• Be sure never to touch the signal surface when handling the CDs. Pick up a CD by grasping the outer edge or the edge of the hole and the outer edge.

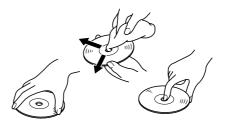

- Do not stick paper or tape on the CD. Avoid scratching the reverse side (the side without a label).
- Dust, finger smudges, and dirt can decrease the amount of light reflected from the signal surface, thus affecting sound quality. If the CD should become soiled, gently wipe it with a soft cloth from the center of the CD to the edge.
- Do not use record sprays, antistatic agents, or household spray cleaners. Volatile chemicals such as benzine and thinner can also damage the surface of the CD and must not be used. Anything that can damage, warp, or fog plastic should never be used to clean CDs.
- CDs, like traditional audio records, are made of plastic. To avoid warping, keep the CDs in their cases and do not store them where they will be exposed to direct sunlight.
- The CD player/changer ejects the CD if the CD is inserted upside down. Also dirty and/or defective CDs may be ejected.

 

J07L_8Q42-EA-01F.book Page 16 Tuesday, March 5, 2002 3:14 PM

Interior Comfort Audio System

 $(\mathbf{0})$

- 8 cm (3 in) CDs and CD accessories (e.g. 8 cm disc adapter) cannot be used in the CD player/changer.
- Do not insert cleaning discs in the CD player/changer.
- Do not insert any disc with a peel-off or seal on it.




J07L_8Q42-EA-01F.book Page 17 Tuesday, March 5, 2002 3:14 PM

۲

Interior Comfort Audio System

Audio Set

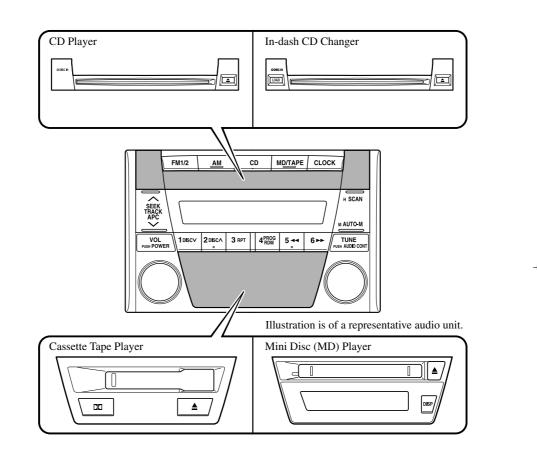


Power/Volume/Sound Controls	
Clock	
Operating the Radio	
Operating the Cassette Tape Player	
Operating the Mini Disc (MD) Player	
Operating the Compact Disc (CD) Player	
Operating the In-Dash CD Changer	
Error Indications	



J07L_8Q42-EA-01F.book Page 18 Tuesday, March 5, 2002 3:14 PM

Interior Comfort Audio System

▼ Power/Volume/Sound Controls

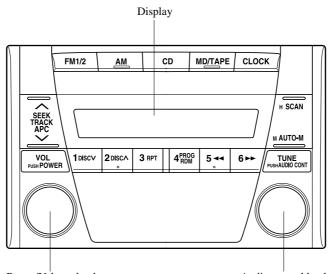

Power/Volume knob

Audio control knob

Power ON/OFF

Turn the ignition switch to the ACC or ON position.

Press the power/volume knob to turn the audio system on. Press the power/volume knob again to turn the audio system off.

NOTE

To prevent the battery from being discharged, do not leave the audio system on for a long period when the engine is not running.

Volume adjustment

To adjust the volume, turn the power/ volume knob.

Turn the power/volume knob to the right to increase volume, to the left to decrease it.

Audio sound adjustment


- 1. Press the audio control knob to select automatic level control, bass, midrange, treble or balance control. The selected function will be indicated.
- 2. Turn the audio control knob to adjust the selected functions as follows:

6-18

● J07L_8Q42-EA-01F.book Page 19 Tuesday, March 5, 2002 3:14 PM

With automatic level control


(•

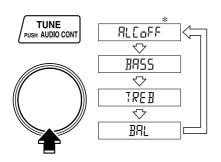

*Depending on the mode selected, the indication changes.

Indication	Turn Left	Turn Right
ALCoff	Select mode	Select mode
BASS	Decrease bass	Increase bass
TREB	Decrease treble	Increase treble
BAF	Shift the sound to the left	Shift the sound to the right

Without automatic level control

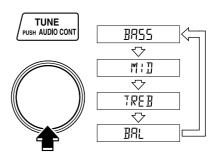

Interior Comfort

Audio System

Indication	Turn Left	Turn Right
BASS	Decrease bass	Increase bass
	Decrease mid-range	Increase mid-range
7RE B	Decrease treble	Increase treble
BAF	Shift the sound to the left	Shift the sound to the right

NOTE

About 5 seconds after selecting any mode, the volume function will be automatically selected. To reset automatic level control, bass, midrange, treble and balance, press the audio control knob for 2 seconds. The unit will beep and "CL" will be displayed.



● J07L_8Q42-EA-01F.book Page 20 Tuesday, March 5, 2002 3:14 PM

Interior Comfort Audio System

Automatic Level Control (ALC)


The automatic level control is a feature that automatically adjusts audio volume and sound quality according to the vehicle speed.


The volume increases in accordance with the increase in vehicle speed, and decreases as vehicle speed decreases.

The following seven modes are available. Select the desired mode according to use.

Mode	Use	Volume change
ALCOLL	ALC does not operate.	No change
TOPda l	Use when the convertible top is up. Three levels are available.	Minimum
TOPdn2		Medium
TOPdn3		Maximum
TOPUP. (Use when the convertible top is down. Three levels are available.	Minimum
T 0PuP2		Medium
ТОРыРЗ		Maximum

 Turn the audio control knob to select the desired mode. The selected mode will be indicated.

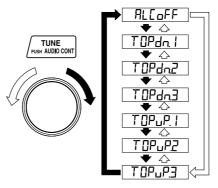



Form No. 8Q42-EA-01F

J07L_8Q42-EA-01F.book Page 21 Tuesday, March 5, 2002 3:14 PM

•






● J07L_8Q42-EA-01F.book Page 22 Tuesday, March 5, 2002 3:14 PM

Interior Comfort Audio System

▼ Clock

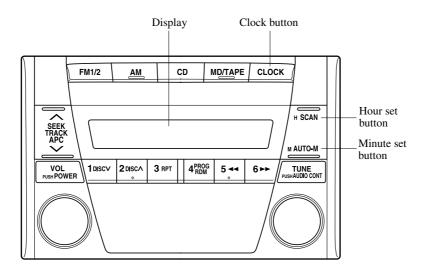

Setting the time

The clock can be set at any time when the ignition switch is in the ACC or ON position.

- To adjust the time, press the clock button (CLOCK) for about 2 seconds until a beep is heard. The clock's current time will flash.
- To advance the hours, press the hour set button (H). To advance the minutes, press the minute set button (M) while the time is flashing.
- 3. Press the clock button (**CLOCK**) again to start the clock.

Exact hour adjustment

- To set the exact hour, press the clock button (CLOCK) for about 2 seconds until a beep is heard. The clock's current time will flash.
- 2. Press the clock button (**CLOCK**) again and the time will be adjusted as follows: (Example) $12:01-12:29\rightarrow 12:00$ $12:30-12:59\rightarrow 1:00$

NOTE

If the power supply to the unit is interrupted (if the fuse blows or the vehicle's battery is disconnected), the clock will need to be reset.

6-22

● J07L_8Q42-EA-01F.book Page 23 Tuesday, March 5, 2002 3:14 PM




Changing the display mode

The display on the unit can be changed by pressing the clock button (**CLOCK**). This alternates the display between time and audio. When the clock mode has been selected, the time will be displayed.

NOTE

If audio operation is selected while the time mode is on, the selected audio mode will be displayed for ten seconds, then the display will revert to the time mode.

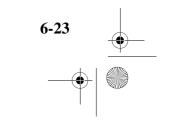


Form No. 8Q42-EA-01F

J07L_8Q42-EA-01F.book Page 24 Tuesday, March 5, 2002 3:14 PM

Interior Comfort Audio System

▼ Operating the Radio

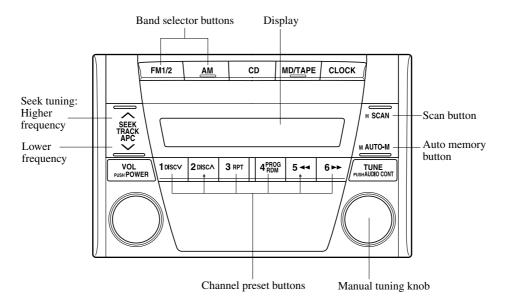

Radio ON

Press a band selector button (AM or FM1/2) to turn the radio on.

Band selection

Choose AM by pressing the AM button (AM) and FM by pressing the FM1/2 button (FM1/2).

The selected mode will be indicated. If FM stereo is being received, "ST" will be displayed.

NOTE

If the FM broadcast signal becomes weak, reception automatically changes from STEREO to MONO for reduced noise, and the "ST" indicator will go out.

6-24

Tuning

The radio has the following tuning methods: Manual, Seek, Scan, Preset channel, and Auto memory tuning. The easiest way to tune stations is to set them on preset channels.

NOTE

If the power supply is interrupted (fuse blows or the battery is disconnected), the preset channels will be canceled.

Manual tuning

Turning the manual tuning knob will change the frequency higher or lower.

J07L_8Q42-EA-01F.book Page 25 Tuesday, March 5, 2002 3:14 PM

Interior Comfort Audio System

Seek tuning

Pressing the seek tuning button (\checkmark, \checkmark) will cause the tuner to seek a higher or lower frequency automatically.

NOTE

If you continue to press and hold the button, the frequency will continue changing without stopping.

Scan tuning

Press the scan button (**SCAN**) to automatically sample strong stations. Scanning stops at each station for about 5 seconds. To hold a station, merely press the scan button (**SCAN**) again during this interval.

Preset channel tuning

The six preset channels can be used to store 6 AM and 12 FM stations.

- 1. To set a channel first select AM, FM1, or FM2. Tune to the station you want.
- 2. Depress a channel preset button for about 2 seconds until a beep is heard. The preset channel number and station frequency will be displayed. The station is now held in the memory.
- 3. Repeat this operation for the other stations and bands you want to store. To tune one in the memory, select AM, FM1, or FM2 and then press its channel preset button. The station frequency and the channel number will be displayed.

NOTE

If the power supply is interrupted (fuse blows or the battery is disconnected), the preset channels will be canceled.

Auto memory tuning

This is especially useful when driving in an area where the local stations are not known. Additional AM/FM stations can be stored without disturbing the previously set channels.

Press and hold the auto memory button (AUTO-M) for about 2 seconds until a beep is heard; the system will automatically scan and temporarily store up to 6 stations with the strongest frequencies in each selected band in that area.

After scanning is completed, the station with the strongest frequency will be tuned and its frequency displayed. Press and release the auto memory button (AUTO-M) to recall stations from the autostored stations. One stored station will be selected each time; its frequency and channel number will be displayed.

NOTE


If no stations can be tuned after scanning operations, "A" will be displayed.

6-25

J07L_8Q42-EA-01F.book Page 26 Tuesday, March 5, 2002 3:14 PM

Interior Comfort Audio System

▼ Operating the Cassette Tape Player

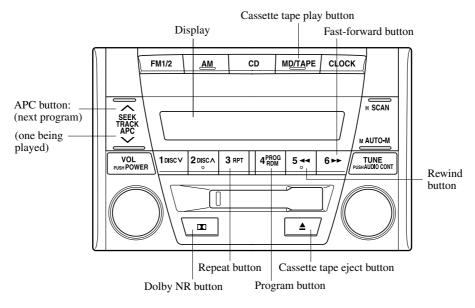

Cassette tape insert

Insert the cassette tape into the slot, open edge to the right and cassette tape will begin play and "TAPE" will be displayed. At the end of the cassette tape, the unit automatically reverses cassette tape play. When \blacktriangle is lit, the cassette tape's top side is playing. When \blacktriangledown is lit, the bottom side is on.

NOTE

When a metal tape is inserted, the player will automatically compensate for it and "MTL" will be displayed.

Playing

Press the cassette tape play button (MD/TAPE) to start playing when a cassette tape is in the unit. If there isn't a cassette tape in the unit when the cassette tape play button (MD/TAPE) is pressed, "NO TAPE" will flash on and off in sequence.

Dolby noise reduction

When using a tape with Dolby NR*, push the Dolby NR button (DD). The DD symbol will be displayed. To play a tape without Dolby NR, push the button once again.

6-26

J07L_8Q42-EA-01F.book Page 27 Tuesday, March 5, 2002 3:14 PM

* Noise reduction system manufactured under license from Dolby Laboratories Licensing Corporation. Dolby and the double-D symbol II are trademarks of Dolby Laboratories

Ejecting the cassette tape

Licensing Corporation.

Press the cassette tape eject button (\triangle) to eject the cassette tape.

NOTE

The cassette tape can be ejected when the ignition switch is in the OFF position.

Fast forward/Rewind

Press the fast-forward button ($\blacktriangleright \triangleright$) to fast-forward.

Press the rewind button ($\triangleleft \triangleleft$) to rewind. To stop this operation and play the cassette tape, press the button again.

NOTE

When the cassette tape ends during fast forward or rewind, it automatically stops and starts playing.

Reversing

Press the program button (**PROG**) to change cassette tape-playing direction.

NOTE

When the cassette tape ends, the unit automatically reverses play.

Automatic program control (APC)

APC is used to find the beginning of either the next program or the one being played.

Press the APC button (\checkmark) to the beginning of the next selection. Press the APC button (\checkmark) to the beginning of the one being played. To stop this operation and play the cassette tape, press the button again.

If APC detects 15 seconds of blank space it will automatically advance the tape to the next selection.

NOTE

APC may not operate properly if

- A tape was recorded at a low level.
- A tape has long, silent intervals.
- A tape is a live recording.
- A tape has very short intervals of less than 3 seconds.

Repeat play

This operation makes it possible to listen to a selection repeatedly.

Press the repeat button (**RPT**) during play. The current selection playing will be repeated ("RPT" will be displayed). Press the repeat button (**RPT**) once again to cancel repeat play.

NOTE

RPT may not operate properly if

- A tape was recorded at a low level.
- A tape has long, silent intervals.
- A tape is a live recording.
- A tape has very short intervals of less than 3 seconds.




Form No. 8Q42-EA-01F

J07L_8Q42-EA-01F.book Page 28 Tuesday, March 5, 2002 3:14 PM

Interior Comfort Audio System

▼ Operating the Mini Disc (MD) Player

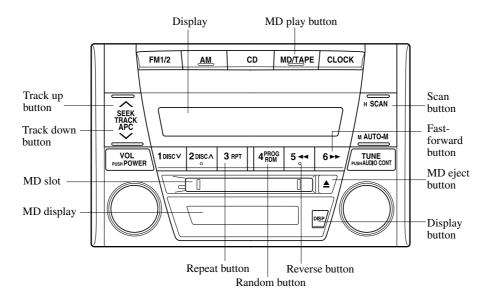

Inserting the MD

Insert the MD, label-side up with the arrow pointed to the slot. The autoloading mechanism will set the MD and begin play. There will be a short lapse before play begins while the player reads the digital signals on the MD.

<u>Playing</u>

Press the MD play button (**MD/TAPE**) to start playing when a MD is in the unit.

Ejecting the MD

Press the MD eject button (\triangleq) to eject the MD.

Fast-forward/Reverse

Press and hold the fast-forward button $(\blacktriangleright \blacktriangleright)$ to advance through a track at high speed.

Press and hold the reverse button (\triangleleft) to reverse through a track at high speed.

Track search

Press the track up button (\frown) once to skip forward to the beginning of the next track.

Press the track down button (\checkmark) once to skip back to the beginning of the current track.



J07L_8Q42-EA-01F.book Page 29 Tuesday, March 5, 2002 3:14 PM



<u>Music scan</u>

This feature helps to find a program by playing about the first 10 seconds of each track.

Press the scan button (**SCAN**) during play to start scan play operation (the track number will flash).

Press the scan button (**SCAN**) once again to cancel scan play.

NOTE

If the unit is left in scan, normal play will resume where scan was selected.

Repeat play

This feature makes it possible to listen to a selection repeatedly.

Press the repeat button (**RPT**) during play. The current selection will be repeated ("RPT" will be displayed). Press the repeat button (**RPT**) once again to cancel repeat play.

Random play

This feature allows the MD player to randomly select the order of the songs.

Press the random button (**RDM**) during play. The next selection will be randomly selected ("RDM" will be displayed). Press the random button (**RDM**) once again to cancel random play.

Changing the MD display

To change the MD display during MD play, press and hold the display button (**DISP**) for about half a second to advance through each of the following displays:

 
 \rightarrow Song title \longrightarrow Disc title \longrightarrow No display -

NOTE

If there is no song or disc title recorded on the MD, "NO TITLE" will be displayed.

Long disc or song titles


When disc or song titles exceed 10 letters or numerals, press the display button (**DISP**) to display the remaining part of the title.



J07L_8Q42-EA-01F.book Page 30 Tuesday, March 5, 2002 3:14 PM

Interior Comfort Audio System

▼ Operating the Compact Disc (CD) Player

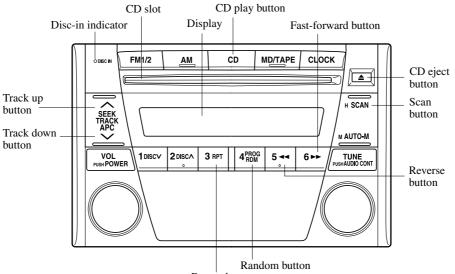

Repeat button

Inserting the CD

Insert the CD into the slot, label-side up. The auto-loading mechanism will set the CD and begin play. There will be a short lapse before play begins while the player reads the digital signals on the CD. The disc-in indicator will illuminate and the track number will be displayed.

Playing

Press the CD play button (**CD**) to start playing when a CD is in the unit.

Ejecting the CD

Press the CD eject button (\triangle) to eject the CD.

Fast-forward/Reverse

Press and hold the fast-forward button (\blacktriangleright) to advance through a track at high speed.

Press and hold the reverse button (\triangleleft) to reverse through a track at high speed.

Track search

Press the track up button (\frown) once to skip forward to the beginning of the next track.

Press the track down button (\checkmark) once to skip back to the beginning of the current track.



J07L_8Q42-EA-01F.book Page 31 Tuesday, March 5, 2002 3:14 PM

Interior Comfort Audio System

<u>Music scan</u>

This feature helps to find a program by playing about the first 10 seconds of each track.

Press the scan button (**SCAN**) during play to start scan play operation (the track number will flash). Press the scan button (**SCAN**) once again

NOTE

to cancel scan play.

If the unit is left in scan, normal play will resume where scan was selected.

Repeat play

 
This feature makes it possible to listen to a selection repeatedly.

Press the repeat button (**RPT**) during play. The current selection will be repeated ("RPT" will be displayed). Press the repeat button (**RPT**) once again to cancel repeat play.

<u>Random play</u>

This feature allows the CD player to randomly select the order of the songs.

Press the random button (**RDM**) during play. The next selection will be randomly selected ("RDM" will be displayed). Press the random button (**RDM**) once again to cancel random play.




Form No. 8Q42-EA-01F

J07L_8Q42-EA-01F.book Page 32 Tuesday, March 5, 2002 3:14 PM

Interior Comfort Audio System

▼ Operating the In-Dash CD Changer

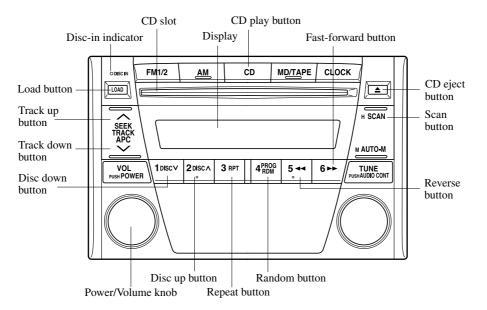

Inserting the CD

The CD must be label-side up when inserting. The auto-loading mechanism will set the CD and begin play. There will be a short lapse before play begins while the player reads the digital signals on the CD.

The disc number and the track number will be displayed.

NOTE

A CD cannot be inserted while the display reads "WAIT". A beeping sound can be heard during this waiting time. Simultaneously pressing the power/volume knob and the load button (LOAD) for about 2 seconds will turn this beeping sound ON or OFF.

Normal insertion

- 1. Press the load button (LOAD).
- 2. When "In" is displayed, insert the CD.

Inserting CDs into desired tray number

- 1. Press and hold the load button (LOAD) for about 2 seconds until a beep is heard.
- 2. Press the channel preset button for the desired tray number within 5 seconds after the beep is heard.
- 3. When "In" is displayed, insert the CD.

NOTE

The CD cannot be inserted to the desired tray number if the number is already occupied.

6-32

J07L_8Q42-EA-01F.book Page 33 Tuesday, March 5, 2002 3:14 PM

Multiple insertion

- 1. Press and hold the load button (LOAD) for about 2 seconds until a beep is heard.
- 2. When "In" is displayed, insert the CD.
- 3. When "In" is displayed again, insert the next CD.

NOTE

The first-inserted CD will be played automatically when:

- No CD is inserted within 15 seconds after "In" is displayed.
- The CD trays are full.

Ejecting the CD

Normal ejection

- Press the CD eject button (▲). The disc number and "OUT" will be displayed.
- 2. Pull out the CD.

NOTE

When the CD is ejected during play, the next CD will be played automatically.

Ejecting CDs from desired tray number

- Press and hold the CD eject button (▲) for about 2 seconds until a beep is heard.
- 2. Press the channel preset button for the desired CD number within 5 seconds after the beep is heard.
- 3. Pull out the CD.

Multiple ejection

- Press and hold the CD eject button (▲) for about 2 seconds until a beep is heard.
- Wait 5 seconds or press the CD eject button (▲) again within 5 seconds after the beep is heard.
- 3. Pull out the CD, then the next CD will be ejected.

NOTE

- CDs will be ejected starting with the one with the lowest number.
- All CDs in the tray will be ejected continuously.
- CDs can be ejected when the ignition switch is off. Press and hold the CD eject button (▲) for about 2 seconds and all CDs will eject.

 
Playing

Press the CD play button (${\tt CD}$) to start playing when a CD is in the unit.

Fast-forward/Reverse

Press and hold the fast-forward button $(\blacktriangleright \blacktriangleright)$ to advance through a track at high speed.

Press and hold the reverse button (\triangleleft) to reverse through a track at high speed.



J07L_8Q42-EA-01F.book Page 34 Tuesday, March 5, 2002 3:14 PM

Interior Comfort Audio System

Track search

Press the track up button (\checkmark) once to skip forward to the beginning of the next track.

Press the track down button (\checkmark) once to skip back to the beginning of the current track.

Disc search

Press the disc up button (**DISCA**) to skip forward to the beginning of the next CD. Press the disc down button (**DISCV**) to skip back to the beginning of the previous CD.

Music scan

This feature helps to find a program by playing about the first 10 seconds of each track.

Press the scan button (SCAN) during play to start scan play operation (the track number will flash). Press the scan button (SCAN) once again to cancel scan play.

NOTE

If the unit is left in scan, normal play will resume where scan was selected.

Repeat play

This feature makes it possible to listen to a selection repeatedly.

Press the repeat button (**RPT**) during play. The current selection will be repeated ("RPT" will be displayed). Press the repeat button (**RPT**) once again to cancel repeat play.

Random play

This feature allows the CD player to randomly select the order of the songs.

Press the random button (**RDM**) during play. The next selection will be randomly selected ("RDM" will be displayed). Press the random button (**RDM**) once again to cancel random play.

6-34

J07L_8Q42-EA-01F.book Page 35 Tuesday, March 5, 2002 3:14 PM



VError Indications

 $(\mathbf{\Phi})$

If you see an error indication on the display, find the cause in the chart. If you cannot clear the error indication, take the vehicle to an Authorized Mazda Dealer.

Indication	Cause	Solution
CHECK MD	MD is inserted upside down	Insert the MD properly. If the error indication does not disappear, consult an Authorized Mazda Dealer
CHECK MD	MD is defective	Insert another MD properly. If the error indication does not disappear, consult an Authorized Mazda Dealer
CHECK CD	CD is inserted upside down	Insert the CD properly. If the error indication does not disappear, consult an Authorized Mazda Dealer
CHECK CD	CD is defective	Check the CD for scratches or soiling



J07L_8Q42-EA-01F.book Page 36 Tuesday, March 5, 2002 3:14 PM

Interior Comfort Audio System

Safety Certification

This CD player is made and tested to meet exacting safety standards. It meets FCC requirements and complies with safety performance standards of the U.S. Department of Health and Human Services.

• This CD player should not be adjusted or repaired by anyone except qualified service personnel.

If servicing is required, contact an Authorized Mazda Dealer.

- Use of controls or adjustments or performance of procedures other than those specified herein may result in hazardous laser exposure. Never operate the CD player with the top case of the unit removed.
- Changes or modifications not expressly approved by Mazda may void the user's authority to operate this equipment.

NOTE

For CD player section:

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

NOTE

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation.


6-36

J07L_8Q42-EA-01F.book Page 37 Tuesday, March 5, 2002 3:14 PM

Interior Comfort Interior Equipment

Sunvisors

When you need a sunvisor, lower it for use in front or swing it to the side.

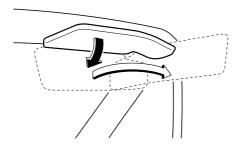

▼ Vanity Mirror


To use the vanity mirror, lower the sunvisor on the passenger's side.

Interior Light

▼ Overhead Light



OFF	Light off
Center	Light on when any door is open
ON	Light on

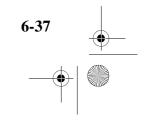


J07L_8Q42-EA-01F.book Page 38 Tuesday, March 5, 2002 3:14 PM

Interior Comfort Interior Equipment

Lighter

The ignition switch must be in the ACC or ON position.

Press the lighter in and release it. When ready for use, it automatically pops out.

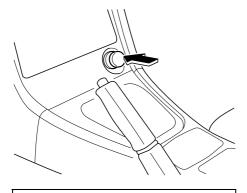

CAUTION


- Don't touch the metal part of the lighter, you may burn yourself.
- Don't hold the lighter in because it will overheat.
- Don't use the lighter socket for plug-in accessories such as shavers and coffee pots. They may damage it or cause electrical failure. Use only a genuine Mazda lighter or the equivalent.
- If the lighter doesn't pop out within 30 seconds, remove it to prevent overheating.

Ashtray

CAUTION

Don't use the ashtray for trash. You might start a fire.

To remove, open and pull up the ashtray.

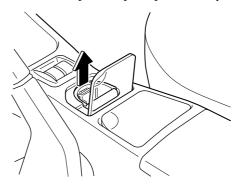

6-38


J07L_8Q42-EA-01F.book Page 39 Tuesday, March 5, 2002 3:14 PM

Cup Holders

WARNING

<u>Using the Cup Holder:</u> Using the cup holder to hold hot liquids while the vehicle is moving is dangerous. If the contents spill, you could be scalded. Never use the cup holder to hold hot liquids while the vehicle is moving.

To use, open the cover.

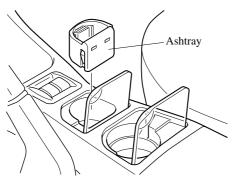

Pull the ashtray out and use the hole for an additional cup holder.

CAUTION

If your arm or elbow bumps into the cup while shifting, don't use the hole for an additional cup holder.

Interior Comfort

Storage Compartments

WARNING

<u>Open Storage Boxes:</u> Driving with the storage boxes open is dangerous. To reduce the possibility of injury in an accident or a sudden stop, keep the storage boxes closed when driving.


CAUTION

 
In hot weather, don't leave combustible materials or objects which will deform in extreme heat such as lighters and glasses in the vehicle.

▼ Glove Box

To open the glove box, pull the latch toward you. The door has a lock, insert the key and

turn it clockwise to lock, counterclockwise to unlock.

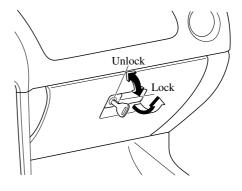




Form No. 8Q42-EA-01F

J07L_8Q42-EA-01F.book Page 40 Tuesday, March 5, 2002 3:14 PM


Interior Comfort Interior Equipment

▼ Center Console

To open, pull the release catch.

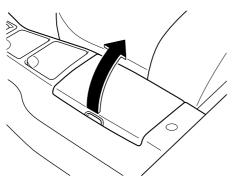


The center console has a lockable lid, insert the key into the slot; then turn the key clockwise to lock, counterclockwise to unlock.

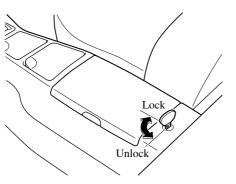

▼ Mesh Pocket

Maps or pamphlets can be placed in the mesh pocket. Press the center fastener to release it.

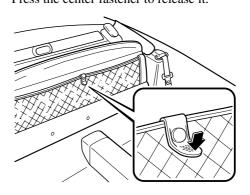

CAUTION

Make sure the fastener is securely fastened when the top is open; otherwise, objects placed in the mesh pocket could be blown away by the wind.




6-40

J07L_8Q42-EA-01F.book Page 41 Tuesday, March 5, 2002 3:14 PM

 $(\mathbf{\Phi})$



Windblocker This windblocker prevents the wind from coming into the cabin from behind when driving with the top opened.

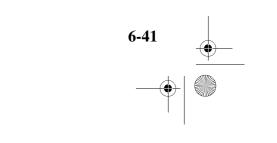

Form No. 8Q42-EA-01F

-(\$

J07L_8Q42-EA-01F.book Page 42 Tuesday, March 5, 2002 3:14 PM

-•

٠



Form No. 8Q42-EA-01F


J07L_8Q42-EA-01F.book Page 1 Tuesday, March 5, 2002 3:14 PM


۲

In Case of an Emergency

Helpful information on what to do in an emergency.

Parking in an Emergency	7-2	
Parking in an Emergency	7-2	
Flat Tire	7-3	
Spare Tire and Tool Storage	7-3	
Changing a Flat Tire	7-5	
Overheating	7-11	
Overheating		
Emergency Starting	7-13	
Starting a Flooded Engine		
Jump-Starting	7-13	
Push-Starting		
Emergency Towing	7-16	
Towing Description	7-16	
Tiedown Hooks		
Recreational Towing		

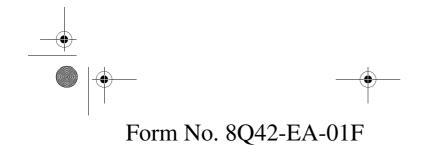

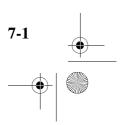


J07L_8Q42-EA-01F.book Page 2 Tuesday, March 5, 2002 3:14 PM

In Case of an Emergency Parking in an Emergency

Parking in an Emergency

The hazard warning lights should always be used when you stop on or near a roadway.

The hazard warning lights warn other drivers that your vehicle is a traffic hazard and that they must take extreme caution when near it.

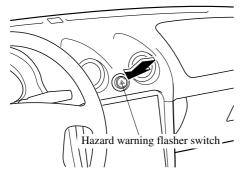

Depress the hazard warning switch and all four turn signals will flash at once.


NOTE

- The turn signals don't work when the hazard warning lights are on.
- Check local regulations about the use of hazard warning lights while the vehicle is being towed. They may forbid it.

7-2


J07L_8Q42-EA-01F.book Page 3 Tuesday, March 5, 2002 3:14 PM

(•

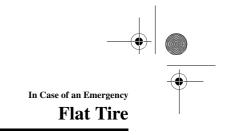

Spare Tire and Tool Storage

Spare tire and tools are stored in the locations illustrated in the diagram.

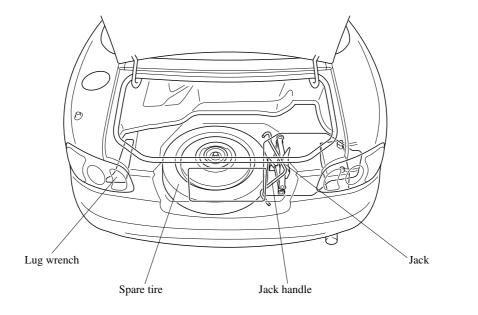




J07L_8Q42-EA-01F.book Page 4 Tuesday, March 5, 2002 3:14 PM

In Case of an Emergency Flat Tire

▼ Jack

To remove the jack

Turn the wing bolt counterclockwise.

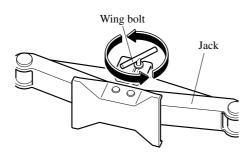

To secure the jack

Perform the removal procedure in reverse.

▼ Spare Tire

7-4

Your Mazda has a temporary spare tire. It's lighter and smaller than a conventional tire, and is designed only for emergency use and should be used only for VERY short periods. Temporary spares should NEVER be used for long drives or extended periods.

A WARNING

Driving with a Temporary Spare Tire on Ice or Snow:

Driving with a spare tire on the rear (driving) wheels on ice or snow is dangerous. Handling will be affected. You could lose control of the vehicle and have an accident. Put the spare tire on the front axle and move a regular tire to the rear.

CAUTION

To avoid damage to the temporary spare or to the vehicle, observe the following precautions:

- Don't exceed 80 km/h (50 mph).
- Avoid driving over obstacles. Also, don't drive through an automatic car wash. This tire's diameter is smaller than a conventional tire's, so the ground clearance is reduced about 25 mm (1 in).
- Don't use a tire chain on this tire because it won't fit properly.
- Don't use your temporary spare on any other vehicle; it has been designed only for your Mazda.
- Use only one temporary spare tire on your vehicle at the same time.

(With limited slip differential)


When using the temporary spare tire on the rear axle, replace it with a standard tire as soon as possible. The size difference between the spare and the standard tire will cause the limited slip differential to malfunction.



J07L_8Q42-EA-01F.book Page 5 Tuesday, March 5, 2002 3:14 PM

To remove the spare tire

Turn the tire hold-down bolt counterclockwise with the lug wrench.

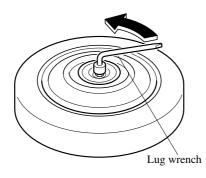

Changing a Flat Tire

NOTE

If the following occurs while driving, it could indicate a flat tire.

- Steering becomes difficult.
- The vehicle begins to vibrate excessively.
- The vehicle pulls in one direction.

If you have a flat tire, drive slowly to a level spot that is well off the road and out of the way of traffic to change the tire. Stopping in traffic or on the shoulder of a busy road is dangerous.

WARNING

Jacking a Vehicle:

Changing a tire is dangerous if not done properly. The vehicle can slip off the jack and seriously injure someone.

Be sure to follow the directions for changing a tire, and never get under a vehicle that is supported only by a jack.

Passenger in Vehicle Supported by a Jack:

Allowing someone to remain in a vehicle supported by a jack is dangerous. The occupant could cause the vehicle to fall resulting in serious injury. Never allow anyone inside a vehicle supported by a jack.




J07L_8Q42-EA-01F.book Page 6 Tuesday, March 5, 2002 3:14 PM

In Case of an Emergency Flat Tire

NOTE


Make sure the jack is well lubricated before using it.

- 1. Park on a level surface off the right-ofway and firmly set the parking brake.
- 2. Put a vehicle with an automatic transmission in Park (P), a manual transmission in Reverse (R) or 1, and turn off the engine.
- 3. Turn on the hazard warning flasher.
- 4. Have everyone get out of the vehicle and away from the vehicle and traffic.
- 5. Remove the jack, tool, and spare tire (page 7-3).
- 6. Block the wheel diagonally opposite the flat tire. When blocking a front wheel, place the block in front of the tire. When blocking a rear wheel, place the block behind the tire.

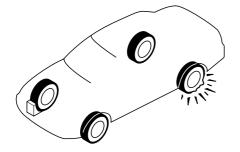


VRemoving a Flat Tire

1. Loosen the lug nuts by turning them counterclockwise one turn each, but don't remove any until the tire has been raised off the ground.

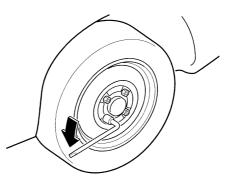

2. Place the jack under the jacking position closest to the tire being changed.

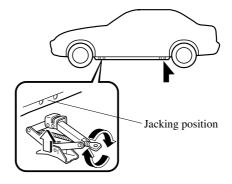

Form No. 8Q42-EA-01F

7-6

J07L_8Q42-EA-01F.book Page 7 Tuesday, March 5, 2002 3:14 PM

In Case of an Emergency Flat Tire

A WARNING

Incorrect Jacking Position: Attempting to jack the vehicle in positions other than those recommended in this manual is dangerous. The vehicle could slip off the jack and seriously injure or even kill someone. Use only the front and rear jacking positions recommended in this manual.


Improper Jack:

Using a jack that isn't designed for your Mazda is dangerous. The vehicle could slip off the jack and seriously injure someone. Use only the jack provided with your Mazda.


<u>Placing Objects Under the Jack:</u> Jacking the vehicle with an object under the jack is dangerous. The jack could slip and someone could be seriously injured by the jack or the falling vehicle. Never place objects under the jack.

3. Insert the jack handle into the jack.

4. Turn the jack handle clockwise and raise the vehicle high enough so that the spare tire can be installed. Before removing the lug nuts, make sure your Mazda is firmly in position and that it cannot slip or move.

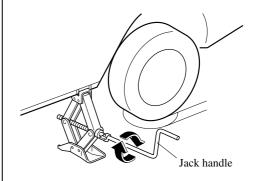

5. Remove the lug nuts by turning them counterclockwise; then remove the wheel.

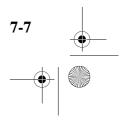


Form No. 8Q42-EA-01F

J07L_8Q42-EA-01F.book Page 8 Tuesday, March 5, 2002 3:14 PM

In Case of an Emergency Flat Tire

▼ Locking Lug Nuts

 If your vehicle has optional antitheft wheel lug nuts, one on each wheel will lock the tires and you must use a special key to unlock them. This key is attached to the lug wrench and is stored with the spare tire. Register them with the lock manufacturer by filling out the card provided in the glove box and mailing it in the accompanying envelope. If you lose your key, consult an Authorized Mazda Dealer or use the lock manufacturer's order form, which is with the registration card.



To remove an antitheft lug nut

- 1. Get the key for the locking lug nut.
- 2. Place it on top of the nut, and be sure to hold the key square to it. If you hold the key at an angle, you may damage both key and nut. Don't use a power impact wrench.
- 3. Place the lug wrench on top of the key and apply pressure. Turn the wrench counterclockwise.


To replace the nut

7-8

- 1. Place the key on top of the nut.
- 2. Place the lug wrench on top of the key, apply pressure, and turn it clockwise.

▼ Mounting the Spare Tire

1. Remove dirt and grime from the mounting surfaces of the wheel and hub, including the hub bolts, with a cloth.

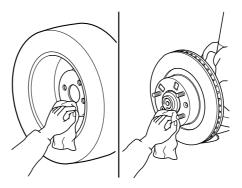

A WARNING


<u>Removing Dirt and Grime from</u> <u>Wheels, Hubs and Hub Bolts:</u> When changing or replacing a tire, not removing dirt and grime from the mounting surfaces of the wheel, hub and hub bolts is dangerous. The lug nuts could loosen while driving and cause the tire to come off, resulting in an accident. Make sure the mounting surfaces of the wheel, hub and lug nuts are clean before changing or replacing tires.

2. Mount the spare tire.

J07L_8Q42-EA-01F.book Page 9 Tuesday, March 5, 2002 3:14 PM

In Case of an Emergency Flat Tire


3. Install the lug nuts with the beveled edge inward; tighten them by hand.

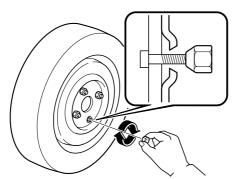

A WARNING

<u>Applying Oil and Grease to Lug Nuts,</u> <u>Bolts:</u>


Applying oil or grease to lug nuts and bolts is dangerous. The lug nuts could loosen while driving and cause the tire to come off, resulting in an accident. In addition, lug nuts and bolts could be damaged if tightened more than necessary. Do not apply oil or grease to lug nuts and bolts and do not tighten the lug nuts beyond the recommended tightening torque. 4. Turn the jack handle counterclockwise and lower the vehicle. Use the lug wrench to tighten the nuts in the order shown.

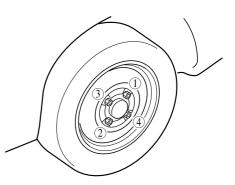

If you're unsure of how tight the nuts should be, have them inspected at a service station.

Nut tightening torque:

N·m (kgf·m, ft·lbf) 88—118 (9—12, 65—87)

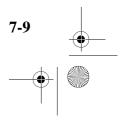

Form No. 8Q42-EA-01F

J07L_8Q42-EA-01F.book Page 10 Tuesday, March 5, 2002 3:14 PM

In Case of an Emergency Flat Tire

A WARNING

Loose Lug Nuts:

Improperly or loosely tightened lug nuts are dangerous. The wheel could wobble or come off. This could result in loss of vehicle control and cause a serious accident. Always securely and correctly tighten the lug nuts.

Metric Studs and Lug Nuts:

Because the wheel studs and lug nuts on your Mazda have metric threads, using a non-metric nut is dangerous. On a metric stud, it would not secure the wheel and would damage the stud, which could cause the wheel to slip off and cause an accident. Be sure to reinstall the same nuts you removed or replace them with metric nuts of the same configuration.

<u>Incorrect Tire Air Pressure:</u> Driving on tires with incorrect air pressure is dangerous. Tires with incorrect pressure could affect

handling and result in an accident. Don't drive with any tires that have incorrect air pressure. When you check the regular tires' air pressure, check the spare tire, too.

5. Store the damaged tire in the trunk. Have the damaged tire repaired as soon as possible.

NOTE

To prevent the jack and tool from rattling, store them properly.



J07L_8Q42-EA-01F.book Page 11 Tuesday, March 5, 2002 3:14 PM



Overheating

If the temperature gauge indicates overheating, you experience power loss, or you hear a loud knocking or pinging noise, the engine is probably too hot.

If this happens:

- 1. Drive safely to the side of the road and park off the right-of-way.
- 2. Put a vehicle with an automatic transmission in park (P), a manual transmission in neutral. Apply the parking brake.
- 3. Turn off the air conditioner.

A WARNING

<u>Steam from Overheated Engine:</u> Steam from an overheated engine is dangerous. The escaping steam could seriously burn you. Open the hood ONLY after steam is no longer escaping from the engine. 4. Check whether coolant or steam is escaping from under the hood or from the engine compartment.


If steam is coming from the engine compartment:

Don't go near the front of the vehicle. Stop the engine. Then turn the ignition switch to the ON position without starting the engine. The radiator cooling fans will start to cool the engine.

If neither coolant nor steam is escaping:

Open the hood and idle the engine until it cools. If this doesn't lower the temperature, stop the engine and let it cool.

- 5. Visually inspect the alternator/water pump drive belt for looseness and breakage and all cooling hose connections for leaks. If the belt is broken or coolant is leaking, call an Authorized Mazda Dealer for assistance.
- 6. If the drive belt is OK, the engine is cool, and no coolant leaks are obvious, inspect the coolant level. Carefully add coolant as required (page 8-15).

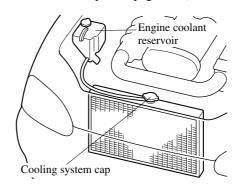



J07L_8Q42-EA-01F.book Page 12 Tuesday, March 5, 2002 3:14 PM


In Case of an Emergency **Overheating**

 
WARNING

<u>Cooling System Cap:</u> When the engine and radiator are hot, scalding coolant and steam may shoot out under pressure and cause serious injury. Don't remove the cooling system cap when the engine and radiator are hot.

CAUTION

If the engine continues to overheat or frequently overheats, have the cooling system inspected. The engine could be seriously damaged unless repairs are made.

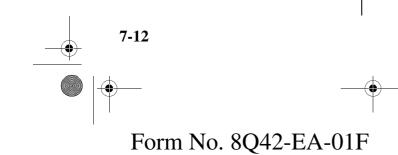



J07L_8Q42-EA-01F.book Page 13 Tuesday, March 5, 2002 3:14 PM

Starting a Flooded Engine

If the engine fails to start, it may be flooded (excessive fuel in the engine).

Follow this procedure:

- 1. Depress the accelerator all the way and hold it there.
- 2. Turn the ignition switch to the START position and hold it there—for up to 10 seconds. If the engine starts, release the key and accelerator immediately because the engine will suddenly rev up.
- 3. If the engine fails to start, crank it without using the accelerator—for up to 10 seconds.

In Case of an Emergency Emergency Starting

Jump-Starting

The battery is in the trunk. Jump-starting is dangerous if done incorrectly. So follow the procedure carefully. If you feel unsure about jumpstarting, we strongly recommend that you have a competent service technician do the work.

A WARNING

Battery-Related Explosion: Flames and sparks near open battery cells are dangerous. Hydrogen gas, produced during normal battery operation, could ignite and cause the battery to explode. An exploding battery can cause serious burns and injuries. Keep all flames, including cigarettes, and sparks away from open battery cells.

Frozen Battery:

Jump-starting a frozen battery is dangerous. It may rupture or explode, causing serious injury. Don't jump-start a frozen battery.

CAUTION

Use only a 12 V booster system. You can damage a 12 V starter, ignition system, and other electrical parts beyond repair with a 24 V power supply (two 12 V batteries in series or a 24 V motor generator set).




Form No. 8Q42-EA-01F

J07L_8Q42-EA-01F.book Page 14 Tuesday, March 5, 2002 3:14 PM

In Case of an Emergency Emergency Starting

- 1. Make sure the booster battery is 12 V and that its negative terminal is grounded.
- 2. If the booster battery is in another vehicle, don't allow the vehicles to touch. Turn off the engine of the vehicle with the booster battery and all unnecessary electrical loads in both vehicles.
- 3. Connect the jumper cables in the exact sequence as in the illustration.
 - Connect one end of a cable to the positive terminal on the discharged battery (1).
 - Attach the other end to the positive terminal on the booster battery (2).
 - Connect one end of the other cable to the negative terminal of the booster battery (3).
 - Connect the other end to a solid, stationary, exposed metallic point (for example, the trunk latch catch) away from the discharged battery (4).

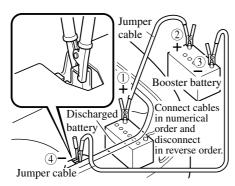

A WARNING

<u>Connecting to Negative Terminal:</u> Connecting the end of the second cable to the negative (-) terminal of the discharged battery is dangerous. A spark could cause the gas around the battery to explode and injure someone. Connect the cable to a point away from the battery.

- 4. Start the engine of the booster vehicle and run it a few minutes. Then start the engine of the other vehicle.
- 5. When finished, carefully disconnect the cables in the reverse order described in Step 3.



7-14

J07L_8Q42-EA-01F.book Page 15 Tuesday, March 5, 2002 3:14 PM



Push-Starting

 
WARNING

<u>Towing a Vehicle to Start It:</u> Towing a vehicle to start it is dangerous. The vehicle being towed could surge forward when its engine starts, causing the two vehicles to collide. The occupants could be injured. Never tow a vehicle to start it.

You can't start a vehicle with an automatic transmission by pushing it.

CAUTION

You shouldn't push-start a vehicle that has a manual transmission. It can damage the emission control system.



J07L_8Q42-EA-01F.book Page 16 Tuesday, March 5, 2002 3:14 PM


In Case of an Emergency Emergency Towing

Towing Description

We recommend that towing be done only by an Authorized Mazda Dealer or a commercial tow-truck service.

Proper lifting and towing are necessary to prevent damage to the vehicle. Government and local laws must be followed.


A towed vehicle usually should have its rear wheels off the ground. If excessive damage or other conditions prevent this, use wheel dollies.

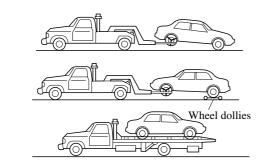

If the transmission, rear axle, and steering system are not damaged, the vehicle may be towed on all four wheels. If any of these components are damaged, use wheel dollies or flatbed equipment.


CAUTION


Don't tow the vehicle pointed forward with driving wheels on the ground. This may cause internal damage to the transmission.

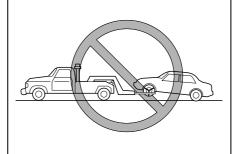

CAUTION

 Don't tow with sling-type equipment. This could damage your vehicle. Use wheel-lift or flatbed equipment.

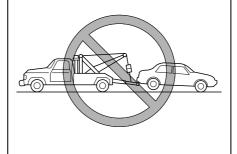



Form No. 8Q42-EA-01F


J07L_8Q42-EA-01F.book Page 17 Tuesday, March 5, 2002 3:14 PM

Tiedown Hooks


CAUTION

Don't use the tiedown hooks under the front and rear for towing. They are designed ONLY for tying down the vehicle when it's being transported. Using them for towing will damage the bumper.

▼ Tiedown Hooks-Front

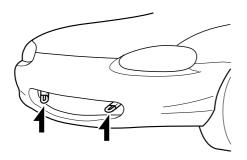

▼ Tiedown Hooks-Rear

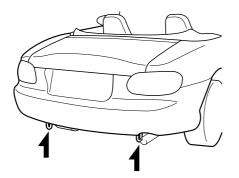


In Case of an Emergency **Emergency Towing**

Recreational Towing

An example of "recreational towing" is towing your vehicle behind a motorhome. The transaxle is not designed for towing this vehicle on all 4 wheels.

When doing recreational towing refer to

 "Towing Description " (page 7-16) and "Tiedown Hooks " (page 7-17) and carefully follow the instructions.



Form No. 8Q42-EA-01F

J07L_8Q42-EA-01F.book Page 18 Tuesday, March 5, 2002 3:14 PM

-•





J07L_8Q42-EA-01F.book Page 1 Tuesday, March 5, 2002 3:14 PM


8

۲

Maintenance and Care

How to keep your Mazda in top condition.

Introduction	- 2
Introduction	- 2
Scheduled Maintenance	- 3
Scheduled Maintenance (North America)	- 3
Scheduled Maintenance (Except North America)	- 7
Owner Maintenance	-10
Owner Maintenance Schedule8	-10
Owner Maintenance Precautions8	-11
Engine Compartment Overview8	-12
Engine Oil8	-13
Engine Coolant8	-15
Brake Fluid8	-17
Clutch Fluid8	-18
Power Steering Fluid8	-19
Automatic Transmission Fluid (ATF)8	-20
Washer Fluid8	-22
Body Lubrication8	-23
Air Filter	-23
Wiper Blades	-24
Battery8	-26
Tires	-27
Light Bulbs8	-31
Fuses	-37
Appearance Care	
How to Minimize Environmental Paint Damage8	-41
Exterior Care	-43
Interior Care	-48

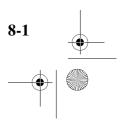

Form No. 8Q42-EA-01F

-(•

J07L_8Q42-EA-01F.book Page 2 Tuesday, March 5, 2002 3:14 PM

Maintenance and Care Introduction

Introduction

Be extremely careful and prevent injury to yourself and others or damage to your vehicle when using this manual for inspection and maintenance.

If you're unsure about any procedure it describes, we strongly urge you to have a reliable and qualified service shop perform the work, preferably an Authorized Mazda Dealer.

Factory-trained Mazda technicians and genuine Mazda parts are best for your vehicle. Without this expertise and the parts that have been designed and made especially for your Mazda, inadequate, incomplete, and insufficient servicing may result in problems. This could lead to vehicle damage or an accident and injuries.

For expert advice and quality service, consult an Authorized Mazda Dealer.

The owner should retain evidence that proper maintenance has been performed as prescribed.

Claims against the warranty resulting from lack of maintenance, as opposed to defective materials or authorized Mazda workmanship, will not be honored.

Any auto repair shop using parts equivalent to your Mazda's original equipment may perform maintenance. But we recommend that it always be done by an Authorized Mazda Dealer using genuine Mazda parts.



J07L_8Q42-EA-01F.book Page 3 Tuesday, March 5, 2002 3:14 PM

Maintenance and Care Scheduled Maintenance

Scheduled Maintenance (North America)


Follow Schedule 1 if the vehicle is operated mainly where none of the following conditions apply.

If any do apply, follow Schedule 2 (Canada and Puerto Rico residents follow Schedule 2).

- Repeated short-distance driving
- Driving in dusty conditions
- Driving with extended use of brakes
- Driving in areas where salt or other corrosive materials are being used
- · Driving on rough or muddy roads
- Extended periods of idling or low-speed operation
- Driving for long periods in cold temperatures or extremely humid climates

NOTE

After the described period, continue to follow the described maintenance at the recommended intervals.

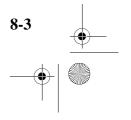

٢ J07L_8Q42-EA-01F.book Page 4 Tuesday, March 5, 2002 3:14 PM

Maintenance and Care **Scheduled Maintenance**

▼Schedule 1

- I : Inspect and repair, clean, adjust, or replace if necessary. (Oil-permeated air filter cannot be cleaned using the air-blow method.)
 R : Replace
 L : Lubricate

Maintenance				1.11	4			e .	
Interval	N							omes first	40
		6	12	18	24	30	36	42	48
	1000 Km	12	24	36	48	60	72	84	96
Maintenance Item	000 Miles)	(7.5)	(15)	(22.5)	(30)	(37.5)	(45)	(52.5)	(60)
Engine valve clearance									Ι
Engine timing belt			ŀ	Replace ev	very 96,0	00km (60	,000mile	es)	
Drive belt (tension)					Ι				Ι
Engine oil		R	R	R	R	R	R	R	R
Engine oil filter		R	R	R	R	R	R	R	R
Cooling system					I				Ι
Engine coolant								6 months 24 months	
Idle speed					Ι				Ι
Air filter					R				R
Fuel lines and hoses [*]					Ι				Ι
Hoses and tubes for emiss	sion [*]								Ι
Spark plugs					R				R
Brake lines, hoses and co	nnections				Ι				Ι
Disc brakes					Ι				Ι
Steering operation and lir	nkages				Ι				Ι
Manual transmission oil									R
Rear differential oil									R
Front suspension ball joir	nts				Ι				Ι
Driveshaft dust boots					Ι				Ι
Bolts and nuts on chassis	and body				Ι				Ι
Exhaust system heat shiel	lds				Ι				Ι
All locks and hinges		L	L	L	L	L	L	L	L
Refrigerant amount (if ins	stalled)		Ι		Ι		Ι		Ι
Compressor operation (if	installed)		I		Ι		Ι		Ι

*: According to state and federal regulations, failure to perform maintenance on these items will not void your emissions warranties. However, Mazda recommends that all maintenance services be performed at the recommended time or kilometrage (mileage) period to ensure long-term reliability.



8-4

€ J07L_8Q42-EA-01F.book Page 5 Tuesday, March 5, 2002 3:14 PM


Maintenance and Care **Scheduled Maintenance**

▼Schedule 2

 $I \ :$ Inspect: Inspect and repair, clean, adjust, or replace if necessary. (Oil-permeated air filter cannot be cleaned using the air-blow method.) $R \ :$ Replace

			ubricat	e									
Maintenance		mber	of mo	onths o	or kilo	meter	s (mil	es), wl	hichev	er co	nes fii	rst	
Interval	Months	4	8	12	16	20	24	28	32	36	40	44	48
	×1000 Km	8	16	24	32	40	48	56	64	72	80	88	96
Maintenance Item	(×1000 Miles)	(5)	(10)	(15)	(20)	(25)	(30)	(35)	(40)	(45)	(50)	(55)	(60)
Engine valve clearar	nce												Ι
Engine timing belt		Replace every 96,000km (60,000miles)											
Drive belts (tension))						Ι						Ι
Engine oil	Puerto Rico	Replace every 5,000km (3,000miles) or 3 months											
	others	R	R	R	R	R	R	R	R	R	R	R	R
Engine oil filter		R	R	R	R	R	R	R	R	R	R	R	R
Cooling system							Ι						Ι
Engine coolant		Replace at first 72,000km (45,000miles) or 36 months ; after that, every 48,000km (30,000miles) or 24 months											
Engine coolant level		Ι	Ι	Ι	Ι	Ι	Ι	Ι	Ι	Ι	Ι	Ι	Ι
Idle speed							Ι						Ι
Air filter				Ι*			R			I *			R
Fuel lines and hoses	*						Ι						Ι
Hoses and tubes for	emission*												Ι
Spark plugs							R						R
Function of all light	s	Ι	Ι	Ι	Ι	Ι	Ι	Ι	Ι	Ι	Ι	Ι	Ι
Brake lines, hoses an	nd connections						Ι						Ι
Brake and clutch flu	id level	Ι	Ι	Ι	Ι	Ι	Ι	Ι	Ι	Ι	Ι	Ι	Ι
Disc brakes				Ι			Ι			Ι			Ι
Tire inflation pressu	re and tire wear	Ι	Ι	Ι	Ι	Ι	Ι	Ι	Ι	Ι	Ι	Ι	Ι
Steering operation a	nd linkages						Ι						Ι
Power steering fluid	level	Ι	Ι	Ι	Ι	Ι	Ι	Ι	Ι	Ι	Ι	Ι	Ι
Manual transmission	n oil						R						R
Rear differential oil							R						R
Front suspension ball joints							Ι						Ι
Driveshaft dust boot	Driveshaft dust boots						Ι						Ι
Bolts and nuts on ch	assis and body			Ι			Ι			Ι			Ι
Exhaust system heat	t shields						Ι						Ι
All locks and hinges	8	L	L	L	L	L	L	L	L	L	L	L	L
Washer fluid level		Ι	Ι	Ι	Ι	Ι	Ι	Ι	Ι	Ι	Ι	Ι	Ι

 *: According to state and federal regulations, failure to perform maintenance on these items will not void your emissions warranties. However, Mazda recommends that all maintenance services be performed at the recommended time or kilometrage (mileage) period to ensure long-term reliability.



۲ J07L_8Q42-EA-01F.book Page 6 Tuesday, March 5, 2002 3:14 PM

Maintenance and Care **Scheduled Maintenance**

 (ϕ)

- I : Inspect: Inspect and repair, clean, adjust, or replace if necessary. (Oil-permeated air filter cannot be cleaned using the air-blow method.)
 R : Replace
 T : Tighten
 L : Lubricate

Maintenance	Number of months or kilometers (miles), whichever comes first												
Interval	Months	4	8	12	16	20	24	28	32	36	40	44	48
	×1000 Km	8	16	24	32	40	48	56	64	72	80	88	96
Maintenance Item	(×1000 Miles)	(5)	(10)	(15)	(20)	(25)	(30)	(35)	(40)	(45)	(50)	(55)	(60)
Refrigerant amount (if installed)				Ι			Ι			Ι			Ι
Compressor operation (if installed)				Ι			Ι			Ι			Ι



J07L_8Q42-EA-01F.book Page 7 Tuesday, March 5, 2002 3:14 PM

Scheduled Maintenance (Except North America)

NOTE


- After the described period, continue to follow the described maintenance at the recommended intervals.
- As the result of visual examination or functional measurement of a system's operation (performance), correct, clean, or replace as required. (Inspect, and if necessary replace the air filter)

Emission control and related systems

The ignition and fuel systems are highly important to the emission control system and to efficient engine operation. Don't tamper with them.

All inspections and adjustments must be made by a qualified technician. We strongly recommend that all servicing related to these systems be done by an Authorized Mazda Dealer.



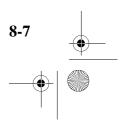

|♥:

J07L_8Q42-EA-01F.book Page 8 Tuesday, March 5, 2002 3:14 PM

Maintenance and Care **Scheduled Maintenance**

I : Inspect: Inspect and clean, repair, adjust, or replace if necessary.

- (Oil-permeated air filter cannot be cleaned using the air-blow method.)
- **R** : Replace
- T : Tighten L : Lubricate

Maintenance																	
Interval	Months	6	12	18	24	30	36	42	48	54	60	66	72	78	84	90	96
	×1000 Km	10	20	30	40	50	60	70	80	90	100	110	120	130	140	150	160
Maintenance Item	(×1000 Miles)	(6)	(12)	(18)	(24)	(30)	(36)	(42)	(48)	(54)	(60)	(66)	(72)	(78)	(84)	(90)	(96)
Engine valve cle	arance			Insp	oect o	every	100,	000	km (60,0()0 mi	iles)	or 6() mo	nths		
Drive belts ^{*1}		Ι	Ι	Ι	Ι	Ι	Ι	Ι	Ι	Ι	Ι	Ι	Ι	Ι	Ι	Ι	Ι
Engine timing be	elt ^{*2}				R	eplac	e eve	ery 1	00,00)0 kr	n (60	,000	mile	es)			
Engine oil ^{*3}		R	R	R	R	R	R	R	R	R	R	R	R	R	R	R	R
Engine oil filter*	3	R	R	R	R	R	R	R	R	R	R	R	R	R	R	R	R
Cooling system			Ι		Ι		Ι		Ι		Ι		Ι		Ι		Ι
Engine coolant							Re	eplac	e ev	ery 2	2 yea	rs					
Idle speed			Ι		Ι		Ι		Ι		Ι		Ι		Ι		Ι
Air filter ^{*4}			Ι		R		Ι		R		Ι		R		Ι		R
Fuel filter					R				R				R				R
Fuel lines and ho	ses		Ι		Ι		Ι		Ι		Ι		Ι		Ι		Ι
Spark plugs				R			R			R			R			R	
Evaporative systematics and the systematic systematics of the systematic systematic systematics and the systematic systematics and the systematic systematics are systematic systematics and the systematic systematics are systematic systematics and the systematic systematics are systematic systematic systematic systematics are systematics are systematics are systematics are systematics are systematics are systematic systematics are systematic systematics are systematics are systematics are systematics are systematics are systematics are systematic systematics are systematic	em		Ι		Ι		Ι		Ι		Ι		Ι		Ι		Ι
E.G.R. system			Ι		Ι		Ι		Ι		Ι		Ι		Ι		Ι
All electrical sys	tem ^{*6}		Ι		Ι		Ι		Ι		Ι		Ι		Ι		Ι
Head light align				Ι			Ι			Ι			Ι			Ι	
Brake pedals and	1	Ι	Ι	Ι	Ι	Ι	Ι	Ι	Ι	Ι	Ι	Ι	Ι	Ι	Ι	Ι	Ι
Brake lines, hose connections	es and		Ι		I		I		I		Ι		I		I		Ι
Clutch fluid		Ι	Ι	Ι	Ι	Ι	Ι	Ι	Ι	Ι	Ι	Ι	Ι	Ι	Ι	Ι	Ι
Brake fluid ^{*5}		Ι	Ι	Ι	R	Ι	Ι	Ι	R	Ι	Ι	Ι	R	Ι	Ι	Ι	R
Parking brake		Ι	Ι	Ι	Ι	Ι	Ι	Ι	Ι	Ι	Ι	Ι	Ι	Ι	Ι	Ι	Ι
Power brake unit	and hoses		Ι		Ι		Ι		Ι		Ι		Ι		Ι		Ι
Disc brakes		Ι	Ι	Ι	Ι	Ι	Ι	Ι	Ι	Ι	Ι	Ι	Ι	Ι	Ι	Ι	Ι

*1: Also inspect and adjust the power steering and air conditioner drive belts, if installed.
*2: Replacement of the timing belt is required at every 100,000 km {60,000 miles}. Failure to replace the timing belt may result in damage to the engine.

*3: If the vehicle is operated under any of the following conditions, change the engine oil and oil filter more often than recommended intervals. a) Driving in dusty conditions.

8-8

c) Driving for long period in cold temperatures or driving regularly at short distance only.

*4: If the vehicle is operated in very dusty or sandy areas, inspect and if necessary, clean or

replace the air filter more often than the recommended intervals.

*5: If the brakes are used extensively (for example, continuous hard driving or mountain driving) or if the vehicle is operated in extremely humid climates, change the brake fluid annually.
*6: This is a full function check of electrical systems such as lights, wiper and washer systems (including wiper blades), and power windows.

۲ J07L_8Q42-EA-01F.book Page 9 Tuesday, March 5, 2002 3:14 PM


()



Scheduled Maintenance

- I : Inspect: Inspect and clean, repair, adjust, or replace if necessary. (Oil-permeated air filter cannot be cleaned using the air-blow method.)
 R : Replace
 T : Tighten
 L : Lubricate

Maintenance																	
Interval	Months	6	12	18	24	30	36	42	48	54	60	66	72	78	84	90	96
	×1000 Km	10	20	30	40	50	60	70	80	90	100	110	120	130	140	150	160
Maintenance Item	(×1000 Miles)	(6)	(12)	(18)	(24)	(30)	(36)	(42)	(48)	(54)	(60)	(66)	(72)	(78)	(84)	(90)	(96)
Power steering flu	uid and lines	Ι	Ι	Ι	Ι	Ι	Ι	Ι	Ι	Ι	Ι	Ι	Ι	Ι	Ι	Ι	Ι
Steering operation and gear housing			Ι		Ι		Ι		Ι		Ι		Ι		Ι		Ι
Steering linkages, tie rod ends and arms			Ι		I		I		I		I		Ι		I		Ι
Manual transmission oil									R								R
Rear differential	oil								R								R
Front and rear sus ball joints	spension and				I				I				I				I
Automatic transm level	nission fluid		I		I		I		I				Ι		Ι		I
Automatic transm	Automatic transmission fluid					R					R					R	
Wheel nuts			Т		Т		Т		Т		Т		Т		Т		Т
Drive shaft dust b	oots				Ι				Ι				Ι				Ι
Bolts and nuts on chassis and body			Т		Т		Т		Т		Т		Т		Т		Т
Exhaust system h	eat shields				Ι				Ι				Ι				Ι
Tire (including sp inflation pressure			I		I		I		I		I		Ι		Ι		I
Hinges and catches			L		L		L		L		L		L		L		L
Road test		Ι	Ι	Ι	Ι	Ι	Ι	Ι	Ι	Ι	Ι	Ι	Ι	Ι	Ι	Ι	Ι

 

Form No. 8Q42-EA-01F

-(\$

J07L_8Q42-EA-01F.book Page 10 Tuesday, March 5, 2002 3:14 PM

Maintenance and Care Owner Maintenance

Owner Maintenance Schedule

The owner or a qualified service technician should make these vehicle inspections at the indicated intervals to ensure safe and dependable operation.

Bring any problem to the attention of an Authorized Mazda Dealer or qualified service technician as soon as possible.

When Refueling

- Brake and clutch fluid level (page 8-17)
- Engine coolant level (page 8-15)
- Engine oil level (page 8-13)
- Washer fluid level (page 8-22)

▼At Least Monthly

• Tire inflation pressures (page 8-28)

▼ At Least Twice a Year (For Example, Every Spring and Fall)

- Automatic transmission fluid level (page 8-20)
- Power steering fluid level (page 8-19)

You can do the following scheduled maintenance items if you have some mechanical ability and a few basic tools and if you closely follow the directions in this manual.

- Air filter (page 8-23)
- Engine coolant (page 8-15)
- Engine oil (page 8-14)



J07L_8Q42-EA-01F.book Page 11 Tuesday, March 5, 2002 3:14 PM

Maintenance and Care Owner Maintenance

Owner Maintenance Precautions

Improper or incomplete service may result in problems. This section gives instructions only for items easy to perform.

As explained in the Introduction (page 8-2), several procedure can be done only by a qualified service technician with special tools.

Improper owner maintenance during the warranty period may affect warranty coverage. For details, read the separate Mazda Warranty statement provided with the vehicle. If you're unsure about any servicing or maintenance procedure, have it done by an Authorized Mazda Dealer.

There are strict environmental laws regarding the disposal of waste oil and fluids. Please dispose of your waste carefully and with due regard to the environment.

We recommend that you entrust the oil and fluid changes of your vehicle to an Authorized Mazda Dealer.

A WARNING

Maintenance Procedures:

Performing maintenance work on a vehicle is dangerous if not done properly. You can be seriously injured while performing some maintenance procedure. If you lack sufficient knowledge and experience or the proper tools and equipment to do the work, have it done by a qualified technician.

Running the Engine:

Working under the hood with the engine running is dangerous. It becomes even more dangerous when you wear jewelry or loose clothing.

Either can become entangled in moving parts and result in injury.

Therefore, if you must run the engine while working under the hood, make certain that you remove all jewelry (especially rings, bracelets, watches, and necklaces) and all neckties, scarves, and similar loose clothing before getting near the engine or cooling fan.

Electrical Fan and Engine Inspection:


Inspecting the engine with the ignition switch in the ON position is dangerous. The cooling fan could come on unexpectedly even when the engine isn't running. You could be seriously injured by the fan. Turn the ignition switch off and remove the key from the ignition switch when you inspect the engine.

8-11

J07L_8Q42-EA-01F.book Page 12 Tuesday, March 5, 2002 3:14 PM

Maintenance and Care Owner Maintenance

Engine Compartment Overview

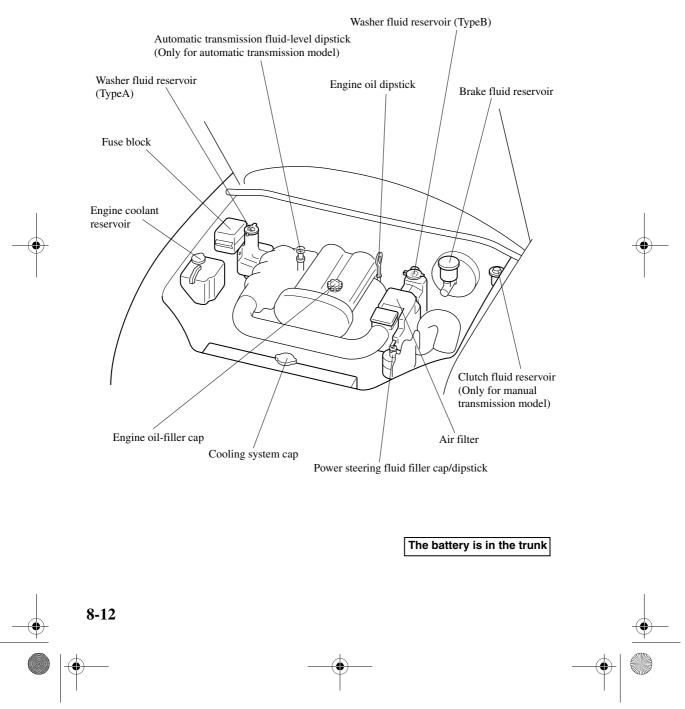

Form No. 8Q42-EA-01F

J07L_8Q42-EA-01F.book Page 13 Tuesday, March 5, 2002 3:14 PM

Maintenance and Care Owner Maintenance

Engine Oil

Recommended Oil

Oil container labels provide important information.




(ILSAC)

The quality designation SG, SH, SJ, SL, or ILSAC must be on the label.

Engine oil viscosity, or thickness, has an effect on fuel economy and cold-weather operation (starting and oil flow). Low-viscosity engine oils can provide improved fuel economy and cold-weather performance.

But high-temperature weather conditions require higher-viscosity engine oils for satisfactory lubrication.

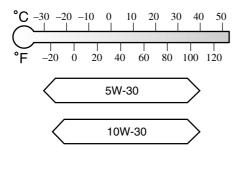

When choosing an oil, consider the temperature range your vehicle will operate in before the next oil change. Then select the recommended viscosity from this chart.


CAUTION

 
Using oils of viscosity besides those recommended for specific temperature ranges could result in engine damage.

Energy conserving oils are recommended. A chief contribution they make to fuel economy is reducing the amount of fuel necessary to overcome engine friction.

▼ Inspecting Engine Oil Level

- 1. Be sure the vehicle is on a level surface.
- 2. Warm up the engine to normal operating temperature.
- 3. Turn it off and wait 5 minutes for the oil to return to the oil pan.
- 4. Pull out the dipstick, wipe it clean, and reinsert it fully.

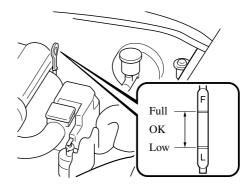



Form No. 8Q42-EA-01F

J07L_8Q42-EA-01F.book Page 14 Tuesday, March 5, 2002 3:14 PM

Maintenance and Care Owner Maintenance

 Pull it out again and examine the level. It's OK between L and F. But if it's near at or below L, add enough oil to bring the level to F.

CAUTION

Don't add engine oil over F. This may cause engine damage.

6. Make sure the O-ring is positioned properly before reinserting the dipstick.

The distance between L and F on the dipstick represents the following:

L (US qt, Imp qt) 0.8 (0.85, 0.70)

▼ Changing Engine Oil and Filter

Change engine oil and filter according to Scheduled Maintenance (page 8-3).

Please act responsibly—protect the environment and take used oil to a recycling facility. Ask your dealer or a service station for information.


A WARNING

<u>Handling Used Engine Oil:</u> Continuous contact with used engine oil is dangerous. It could cause skin cancer. Always wash with soap and water immediately after changing oil and filter.

Changing engine oil

☆ WARNING

<u>Checking or Changing Engine Oil:</u> Hot engine oil is dangerous. If the engine has been running, the engine oil becomes very hot. You could be seriously burned. Don't check or change the engine oil when the engine is hot.

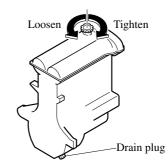

- 1. Warm up the engine for a few minutes and turn it off. Remove the oil-filler cap.
- 2. Remove the drain plug and drain the oil into a suitable container.
- 3. Replace the plug tightly after the oil has thoroughly drained.
- 4. Fill the engine with new oil to the F mark on the dipstick.
- 5. Securely replace the oil-filler cap.
- 6. Start the engine and inspect around the drain plug for leaks.
- 7. Turn it off and wait 5 minutes for the oil to return to the oil pan.

8-14

J07L_8Q42-EA-01F.book Page 15 Tuesday, March 5, 2002 3:14 PM

Check the oil level and fill to the F mark if necessary.

Oil capacity (General reference only, refer to Specifications section for capacities.)

NOTE

- The indicated engine oil capacities are for general reference purposes only. When adding or changing oil, verify the engine oil level with the oil dipstick.
- Use only specified engine oil (page 10-4).

Changing oil filter

Because you need a special tool to retighten the filter, an Authorized Mazda Dealer should do the work.

Maintenance and Care Owner Maintenance

Engine Coolant

▼ Inspecting Coolant Level

WARNING


Hot Engine:

A hot engine is dangerous. If the engine has been running, parts of the engine compartment can become very hot. You could be burned. Don't inspect the coolant system or add coolant when the engine is hot.

Inspect the antifreeze protection and coolant level in the coolant reservoir at least once a year—at the beginning of the winter season—and before traveling where temperatures may drop below freezing.

Inspect the condition and connections of all cooling system and heater hoses. Replace any that are swollen or deteriorated.

The coolant should be at full in the radiator and between the FULL and LOW marks on the coolant reservoir when the engine is cool.

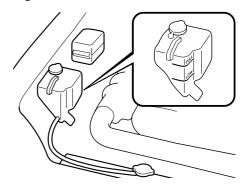

8-15

J07L_8Q42-EA-01F.book Page 16 Tuesday, March 5, 2002 3:14 PM

Maintenance and Care Owner Maintenance

If it's at or near LOW, add enough coolant to the coolant reservoir to provide freezing and corrosion protection and to bring the level to FULL.

CAUTION

Radiator coolant will damage paint. Rinse it off quickly.

Do not overfill.

If new coolant is required frequently, consult an Authorized Mazda Dealer.

▼ Changing Coolant

Change coolant according to Scheduled Maintenance (page 8-3).

CAUTION

- Use only soft (demineralized) water in the coolant mixture. Water that contains minerals will cut down on the coolant's effectiveness.
- Don't add only water. Always add a proper coolant mixture.
- The engine has aluminum parts and must be protected by an ethyleneglycol-based coolant to prevent corrosion and freezing.
- DO NOT USE alcohol or methanol antifreeze. DO NOT MIX alcohol or methanol with the coolant. This could damage the cooling system.
- Don't use a solution that contains more than 60 % antifreeze. This would reduce effectiveness.

For mixture percentage:

	Volume						
Protection	Antifreeze solution	Water					
Above –16°C (3°F)	35%	65%					
Above -26°C (-15°F)	45	55					
Above -40°C (-40°F)	55	45					


To change coolant

WARNING

Removing the Cooling System Cap: Removing the cooling system cap or drain plug while the engine is running or hot is dangerous. This might lead to cooling system and engine damage and could result in serious injury from escaping hot coolant or steam. Turn off the engine and wait until it's cool. Even then, be very careful when removing the cap or drain plug. Wrap a thick cloth around it and slowly turn it counterclockwise to the first stop. Step back while the pressure escapes. When you're sure all the pressure is gone, press down on the cap — still using a cloth — turn the cap, and remove it.

8-16

1. Remove the cooling system cap.

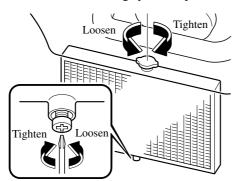


- 2. Only when the engine is cool, remove the radiator drain plug and drain the coolant into a suitable container.
- 3. Flush out the system with running water.
- 4. Drain the system completely. Insert and tighten the plug. Add as much ethylene-glycol-based coolant and water as necessary to provide freezing and corrosion protection.
- 5. In extremely cold climates, add the amount recommended in the coolant manufacturer's instructions.
- 6. Run the engine at idle with the cooling system cap off. Slowly add additional coolant if necessary.
- 7. At this point, wait until the engine reaches normal operating temperature; then depress the accelerator two or three times. Add more coolant, if necessary, until the system is full.
- 8. Install the cooling system cap. Inspect all connections for leaks. Inspect the level in the coolant reservoir one more time.


Maintenance and Care Owner Maintenance

Brake Fluid

▼ Inspecting Brake Fluid Level

Inspect the fluid level in the reservoir regularly. It should be kept at MAX. The level normally drops with accumulated distance, a condition associated with wear of brake linings. If it is excessively low, have the brake system inspected by an Authorized Mazda Dealer.

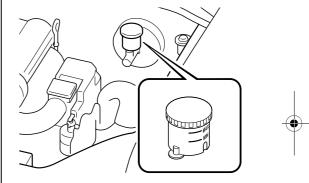

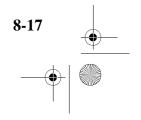

J07L_8Q42-EA-01F.book Page 18 Tuesday, March 5, 2002 3:14 PM

Maintenance and Care Owner Maintenance

▼Adding Brake Fluid

WARNING

Spilled Brake Fluid:

Spilled brake fluid is dangerous. If it gets in your eyes, they could be seriously injured. If this happens, immediately flush your eyes with water and get medical attention. Brake fluid spilled on a hot engine could cause a fire. Be careful not to spill brake fluid on yourself or on the engine.

Low Brake Fluid Levels: Low brake fluid levels are dangerous. Low levels could signal brake lining wear or a brake system leak. Your brakes could fail and cause an accident. If you find a low fluid level, have the brakes inspected.

If the fluid level is low, add fluid until it reaches MAX. Before adding fluid, thoroughly clean the area around the cap.

CAUTION


- Brake fluid will damage painted surfaces. If brake fluid does get on a painted surface, wipe it off immediately.
- Using nonspecified brake fluids (page 10-4) will damage the system. Mixing different fluids will also damage it.

If the brake system frequently requires new fluid, consult an Authorized Mazda Dealer.

Clutch Fluid

▼ Inspecting Clutch Fluid Level

Inspect the level in the clutch fluid reservoir regularly. It should be kept at MAX.

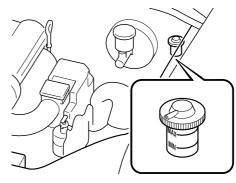

▼Adding Clutch Fluid

WARNING

Spilled Clutch Fluid:

Spilled clutch fluid is dangerous. If it gets in your eyes, they could be seriously injured. If this happens, immediately flush your eyes with water and get medical attention. Clutch fluid spilled on a hot engine could cause a fire. Be careful not to spill clutch fluid on yourself or on the engine.

If the fluid level is low, add fluid until it reaches MAX. Before adding fluid, thoroughly clean the area around the cap.

8-18

J07L_8Q42-EA-01F.book Page 19 Tuesday, March 5, 2002 3:14 PM

Maintenance and Care Owner Maintenance

CAUTION

- Clutch fluid will damage painted surfaces. If clutch fluid does get on a painted surface, wipe it off immediately.
- Using nonspecified clutch fluids (page 10-4) will damage the system. Mixing different fluids will also damage it. If the clutch system frequently requires new fluid, it should be inspected. Consult an Authorized Mazda Dealer immediately.

NOTE

Low clutch fluid level may signal a fluid leak. If you find a low fluid level, have the clutch inspected.

Power Steering Fluid


▼ Inspecting Power Steering Fluid Level

To avoid damage to the power steering pump, don't operate the vehicle for long periods when the power steering fluid level is low.

NOTE

Use specified power steering fluid (page 10-4).

Inspect the fluid level at each engine oil change. Add fluid if necessary; it does not require periodic changing.

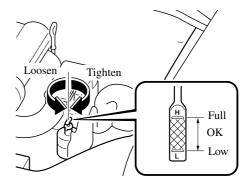

The level must be kept between the H and L marks.

Visually examine the lines and hoses for leaks and damage.

- 1. Park on a level surface, well off the right-of-way, and set the parking brake firmly.
- 2. Turn off the engine and allow it to cool.



J07L_8Q42-EA-01F.book Page 20 Tuesday, March 5, 2002 3:14 PM

Maintenance and Care Owner Maintenance

- 3. Remove the filler cap and attached dipstick.
- 4. Wipe them clean and put them back.
- 5. Remove again and inspect the level.
- 6. It must be between H and L. Add fluid if necessary.

Don't overfill.

If new fluid is required frequently, consult an Authorized Mazda Dealer.


Automatic Transmission Fluid (ATF)

▼ Inspecting Automatic Transmission Fluid Level

The automatic transmission fluid level should be inspected regularly. Measure it as described below.

The volume of fluid changes with the temperature. For that reason, it is best to examine the level after having driven the vehicle for 15 minutes. If necessary, however, it can also be inspected without driving when the outside temperature is above 20° C (70° F).

- Low fluid level causes transmission slippage. Overfilling can cause foaming, loss of fluid, and transmission malfunction.
- Use specified fluid (page 10-4). A nonspecified fluid could result in transmission malfunction and failure.
- The vehicle should not be driven if the fluid level is below the bottom of the dipstick and the outside temperature is above 20°C (70°F), or if evident automatic transmission fluid leaks are found.
- 1. Park on a level surface and set the parking brake firmly.
- 2. Idle the engine. Push down on the brake pedal.
- 3. Move the shift lever through all ranges and set it at P.

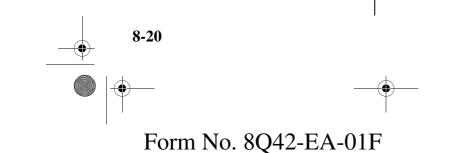


● J07L_8Q42-EA-01F.book Page 21 Tuesday, March 5, 2002 3:14 PM

WARNING

<u>Sudden Vehicle Movement:</u> Shifting the shift lever without first depressing the brake pedal is dangerous. The vehicle could move suddenly and cause an accident. Make sure the brake pedal is applied before shifting the shift lever.

- 4. With the engine still idling, pull out the dipstick, wipe it clean.
- 5. Put the dipstick back into the filler tube and make sure it is fully seated.
- 6. Pull the dipstick out and read the fluid level.

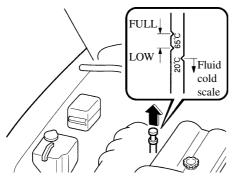

The proper fluid level is marked on the dipstick as follows.

Fluid hot scale

When checking the fluid level at normal operating temperature, the fluid level should be within the FULL and LOW marks on the dipstick.

Maintenance and Care Owner Maintenance

Fluid cold scale

When the vehicle has not been driven but the engine is idling, and the outside temperature is above 20°C (70°F), the fluid level should be close to, but not above, the bottom notch on the dipstick.

 
NOTE

Use the cold scale as a reference.

Fully insert the dipstick. When adding fluid, inspect with the dipstick to make sure it doesn't pass full.

NOTE

Inspect both sides of the dipstick for accurate reading.



● J07L_8Q42-EA-01F.book Page 22 Tuesday, March 5, 2002 3:14 PM

Maintenance and Care Owner Maintenance


Washer Fluid

▼Inspecting Washer Fluid Level


A WARNING

<u>Substitute Washer Fluid:</u> Using radiator antifreeze as washer fluid is dangerous. If sprayed on the windshield, it will dirty the windshield, affect your visibility, and could result in an accident. Use only windshield washer fluid or plain water in the reservoir.

Inspect fluid level in the washer fluid reservoir; add fluid if necessary.

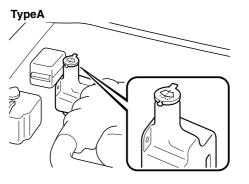

ТуреВ

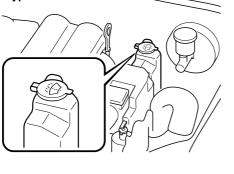

Form No. 8Q42-EA-01F

8-22

Use plain water if washer fluid is unavailable. But use only washer fluid in cold weather to prevent it from freezing. J07L_8Q42-EA-01F.book Page 23 Tuesday, March 5, 2002 3:14 PM

Body Lubrication

All moving points of the body, such as door and hood hinges and locks, should be lubricated each time the engine oil is changed. Use a nonfreezing lubricant on locks during cold weather.

Make sure the engine hood's secondary latch keeps the hood from opening when the primary latch is released.

Maintenance and Care Owner Maintenance

Air Filter

CAUTION

Don't drive without an air filter. This could result in excessive engine wear.


A viscous paper air filter fits inside the air cleaner housing, as shown. It's been specially treated and should not be cleaned and reused. Replace it when necessary.

 
VReplacing the Air Filter

NOTE

If the vehicle is operated in very dusty or sandy areas, replace the filter more often than recommended intervals.

1. Unfasten the clamps.

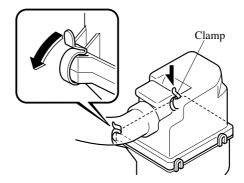




J07L_8Q42-EA-01F.book Page 24 Tuesday, March 5, 2002 3:14 PM

Maintenance and Care **Owner Maintenance**

2. Lift off the air filter cover and remove the filter.

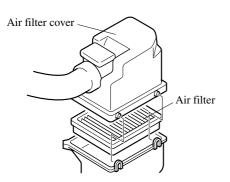

- 3. Wipe inside the air cleaner housing with a damp cloth.
- 4. Replace the filter.
- 5. Install in the reverse order of removal.
- Replace the filter according to Scheduled Maintenance (page 8-3).

Wiper Blades

 
CAUTION

Hot waxes applied by automatic car washes have been known to affect the cleanability of windows.

Contamination of either the windshield or the blades with foreign matter can reduce wiper effectiveness. Common sources are insects, tree sap, and hot wax treatments used by some commercial car washes.

If the blades are not wiping properly, clean the window and blades with a good cleaner or mild detergent; then rinse thoroughly with clean water. Repeat if necessary.

To prevent damage to the wiper blades, don't use gasoline, kerosene, paint thinner, or other solvents on or near them.



J07L_8Q42-EA-01F.book Page 25 Tuesday, March 5, 2002 3:14 PM

▼ Replacing Windshield Wiper Blades


When the wipers no longer clean well, the blades are probably worn or cracked. Replace them.

CAUTION

To prevent damage to the wiper arms and other components, don't move the wipers by hand.

1. Raise the wiper arm and turn the blade assembly to expose the plastic locking clip.

Compress the clip and slide the assembly downward; then lift it off the arm.

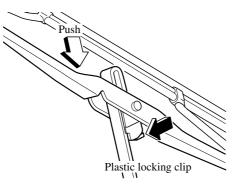


CAUTION


To prevent damage to the windshield, don't let the wiper arm fall on it.


Maintenance and Care Owner Maintenance

2. Hold the end of the rubber and pull until the tabs are free of the metal support.

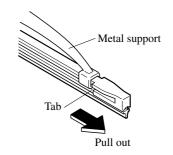

 3. Remove the metal stiffeners from the blade rubber and install them in new blades.

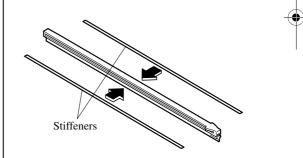



Form No. 8Q42-EA-01F

J07L_8Q42-EA-01F.book Page 26 Tuesday, March 5, 2002 3:14 PM


Maintenance and Care Owner Maintenance

CAUTION

- Don't bend the stiffeners. You need to use them again.
- If the metal stiffeners are switched, the blade's wiping efficiency could be reduced.

So don't use the driver's side metal stiffeners on the passenger's side, or vice versa.

- Be sure to reinstall the metal stiffeners in the new blade rubber so that the curve is the same as it was in the old blade rubber.
- 4. Carefully insert the new blade rubber. Then install the blade assembly in the reverse older of removal.

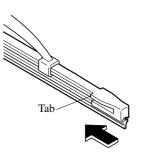

NOTE

Install the blade so that the tabs are toward the bottom of the wiper arm.

Battery

A WARNING

Battery-Related Lead Materials: Battery posts, terminals and related accessories contain lead and lead compounds, chemicals known to the State of California to cause cancer and reproductive harm. Wash hands after handling.

Battery-Related Explosion:

Flames and sparks near open battery cells are dangerous. Hydrogen gas, produced during normal battery operation, could ignite and cause the battery to explode. An exploding battery can cause serious burns and injuries. Keep all flames, including cigarettes, and sparks away from open battery cells.

Children and Batteries:

Allowing children to play near batteries is dangerous. Battery fluid could cause serious injuries if it gets in the eyes or on the skin. Always keep batteries out of the reach of children.


NOTE

The battery in this vehicle is unique and should only be replaced with the appropriate Mazda battery. For more details, contact your Authorized Mazda Dealer.

8-26

J07L_8Q42-EA-01F.book Page 27 Tuesday, March 5, 2002 3:14 PM

The battery is in the trunk.

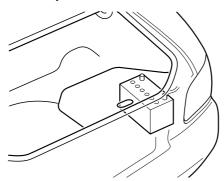

▼ Battery Maintenance

To get the best service from a battery:

- Keep it securely mounted.
- Keep the top clean and dry.
- Keep terminals and connections clean, tight, and coated with petroleum jelly or terminal grease.
- Rinse off spilled electrolyte immediately with a solution of water and baking soda.
- If the vehicle will not be used for an extended time, disconnect the battery cables.

Maintenance and Care Owner Maintenance

Tires

For reasons of proper performance, safety, and better fuel economy, always maintain recommended tire inflation pressures and stay within the recommended load limits and weight distribution.

WARNING

<u>Using Different Tire Types:</u> Driving your vehicle with different types of tires is dangerous. It could cause poor handling and poor braking; leading to loss of control. Except when using the temporary spare tire, use only the same type tires (radial, bias-belted, bias-type) on all four wheels.

Using Wrong-Sized Tires:

Using any other tire size than what is specified for your Mazda (page 10-6) is dangerous. It could seriously affect ride, handling, ground clearance, tire clearance, and speedometer calibration. This could cause you to have an accident. Use only tires that are the correct size specified for your Mazda.

8-27

Form No. 8Q42-EA-01F

J07L_8Q42-EA-01F.book Page 28 Tuesday, March 5, 2002 3:14 PM


Maintenance and Care Owner Maintenance

▼ Tire Inflation Pressure

WARNING

<u>Incorrect Tire Inflation:</u> Overinflation or underinflation of tires is dangerous. Adverse handling or unexpected tire failure could result in a serious accident. Always inflate the tires to the correct pressure (page 10-6).

Inspect all tire pressures monthly (including the spare) when the tires are cold. Maintain recommended pressures for the best ride, top handling, and minimum tire wear.

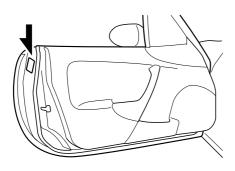


Refer to the specification charts (page 10-6).

NOTE


- Warm tires normally exceed recommended pressures. Don't release air from warm tires to adjust the pressure.
- Underinflation can cause reduced fuel economy and poor sealing of the tire bead, which will deform the wheel and cause separation of tire from rim.
- Overinflation can produce a harsh ride and a greater possibility of damage from road hazards. Keep your tire pressure at the correct levels. If one frequently needs inflating, have it inspected.

▼ Tire Rotation

To equalize tread wear, rotate the tires every 6,000 km (3,750 miles)/12,000 km*(7,500 miles) or sooner if irregular wear develops. During rotation, inspect them for correct balance. *Canada

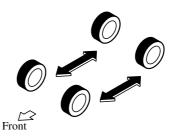

 Do not include (TEMPORARY USE ONLY) spare tire in rotation.



8-28

Form No. 8Q42-EA-01F

J07L_8Q42-EA-01F.book Page 29 Tuesday, March 5, 2002 3:14 PM

Also, inspect them for uneven wear and damage. Abnormal wear is usually caused by one or a combination of the following:

- Incorrect tire pressure
- · Improper wheel alignment
- Out-of-balance wheel
- Severe braking

After rotation, inflate all tire pressures to specification (page 10-6) and inspect the lug nuts for tightness.

CAUTION

Rotate unidirectional tires and radial tires that have an asymmetrical tread pattern or studs only from front to rear, not from side to side. Tire performance will be weakened if rotated from side to side.

CAUTION

Limited-Slip Differential system; don't use the following:

- Tires not of the designated size
- Tires of different sizes or types at the same time
- Tires not sufficiently inflated

If these instructions aren't followed, the rotation of the left and right wheels will be different and will thus apply a constant load on the limited-slip differential. This will cause a malfunction.

Maintenance and Care Owner Maintenance

▼ Replacing a Tire

☆ WARNING

Worn Tires:

Driving with worn tires is dangerous. Reduced braking, steering, and traction could result in an accident. Always use tires that are in good condition.

If a tire wears evenly, a wear indicator will appear as a solid band across the tread. Replace the tire when this happens.






New tread

Worn tread

You may need to replace it before the band is across the entire tread.

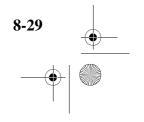

J07L_8Q42-EA-01F.book Page 30 Tuesday, March 5, 2002 3:14 PM

Maintenance and Care Owner Maintenance

▼ Temporary Spare Tire

Inspect the temporary spare tire at least monthly to make sure it's properly inflated and stored.

The temporary spare tire is easier to handle because of its construction. It is lighter and smaller than a conventional tire and should be used only for an emergency and only for a short distance.

Use the temporary only until the conventional tire is repaired, which should be as soon as possible.

Maintain its pressure at 420 kPa (60 psi).

CAUTION

- Don't use your temporary spare tire rim with a snow tire or a conventional tire. Neither will properly fit and could damage both tire and rim.
- The temporary spare tire has a tread life of up to 5,000 km (3,000 miles), depending on road conditions and driving habits.
- When the tread wear solid-band indicator appears, replace the tire with the same type of temporary spare.

▼ Replacing a Wheel

When replacing a wheel, make sure the new one is the same as the original factory wheel in diameter, rim width, and offset.

Proper tire balancing provides the best riding comfort and helps reduce tread wear. Out-of-balance tires can cause vibration and uneven wear, such as cupping and flat spots.

☆ WARNING

<u>Using a Wrong-Sized Wheel:</u> Using a wrong-sized wheel is dangerous. Braking and handling could be affected, leading to loss of control and an accident. Always use wheels of the correct size on your vehicle.

CAUTION


A wrong-sized wheel may adversely affect

- Tire fit
- · Wheel and bearing life
- Ground clearance
- Snow-chain clearance
- Speedometer calibration
- Headlight aim
- Bumper height



J07L_8Q42-EA-01F.book Page 31 Tuesday, March 5, 2002 3:14 PM

Maintenance and Care **Owner Maintenance**

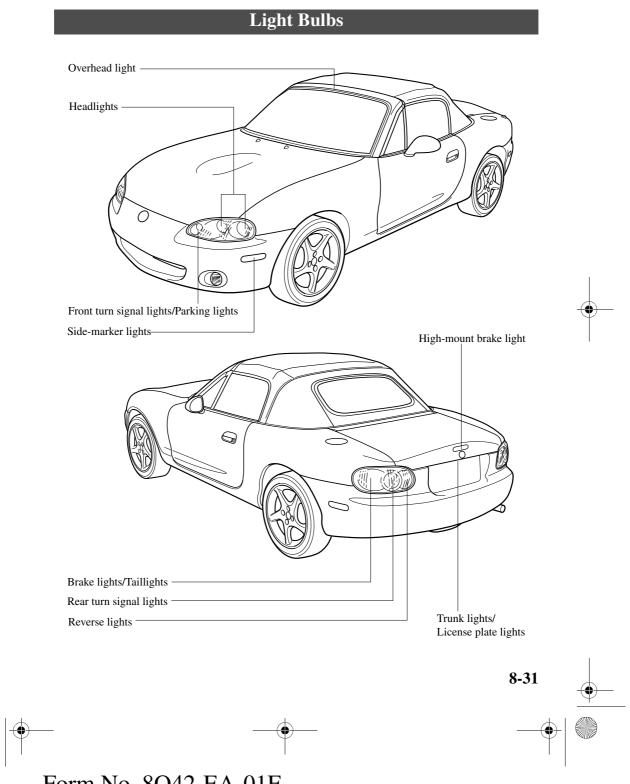

J07L_8Q42-EA-01F.book Page 32 Tuesday, March 5, 2002 3:14 PM

Maintenance and Care Owner Maintenance

Your Mazda's headlights have replaceable halogen bulbs.

WARNING

<u>Handling Halogen Bulbs:</u> When a halogen bulb breaks, it is dangerous. These bulbs contain pressurized gas. If one is broken, it will explode and serious injuries could be caused by the flying glass. If the glass portion is touched with bare hands, body oil could cause the bulb to overheat and explode when lit. Never touch the glass portion of the bulb with your bare hands and always wear eye protection when handling or working around halogen bulbs.




Do not touch the glass surface

<u>Children and Halogen Bulbs:</u> Playing with a halogen bulb is dangerous. Serious injuries could be caused by dropping a halogen bulb or breaking it some other way. Always keep halogen bulbs out of the reach of children.

8-32

▼ Replacing a Headlight Bulb

- 1. Make sure the headlight switch is off.
- 2. Lift the hood and find the bulb in the rear of the headlight body.
- 3. Turn the socket and bulb assembly counterclockwise and remove it while holding the rubber socket cover in place. Carefully remove the headlight bulb from its socket in the reflector by gently pulling it straight backward out of the socket.
- 4. Remove the bulb from the electrical connector by pressing the tab on the connector with your finger and pulling the bulb upward.

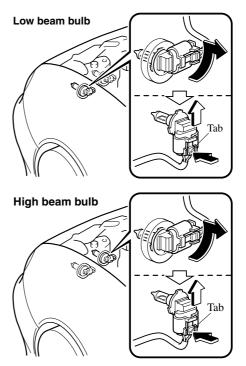

5. Install the new bulb in the reverse order of removal.


(J07L_8Q42-EA-01F.book Page 33 Tuesday, March 5, 2002 3:14 PM



NOTE

 (ϕ)

Use the protective cover and carton to dispose of the old bulb promptly out of the reach of children.

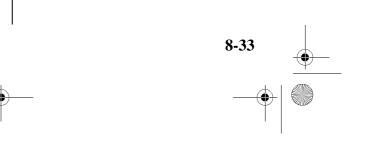


J07L_8Q42-EA-01F.book Page 34 Tuesday, March 5, 2002 3:14 PM

Maintenance and Care **Owner Maintenance**


•


▼ Replacing a Bulb (Front)

 To replace the fog light bulbs, contact an Authorized Mazda Dealer.



Side-marker lights

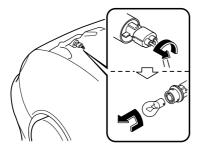

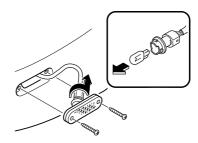





J07L_8Q42-EA-01F.book Page 35 Tuesday, March 5, 2002 3:14 PM





▼ Replacing a Bulb (Rear)

Rear bulb access

 (\bullet)

To replace the turn signal light, brake light/taillight or reverse light bulb, pull the center section of the plastic retainer and remove the retainers and trunk end trim.

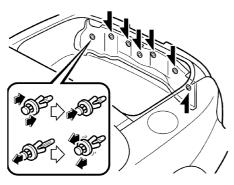

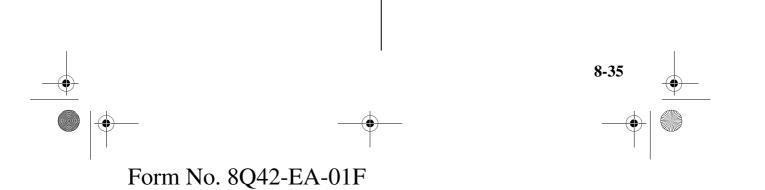


J07L_8Q42-EA-01F.book Page 36 Tuesday, March 5, 2002 3:14 PM


Maintenance and Care **Owner Maintenance**

 $(\mathbf{\bullet})$


Rear turn signal lights
 Brake lights/Taillights
 Reverse lights

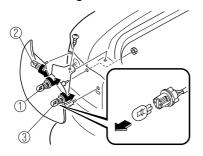

Trunk lights/License plate lights

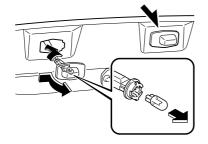

High-mount brake light

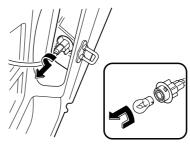



J07L_8Q42-EA-01F.book Page 37 Tuesday, March 5, 2002 3:14 PM

Fuses

Your vehicle's electrical system is protected by fuses.


If any lights, accessories, or controls don't work, inspect the appropriate circuit protector. If a fuse has blown, the inside element will be melted.

If the same fuse blows again, avoid using that system and consult an Authorized Mazda Dealer as soon as possible.

▼ Fuse Replacement


If the electrical system doesn't work, first inspect fuses on the driver's side.

- 1. Turn off the ignition switch and other switches.
- 2. Open the fuse panel cover.

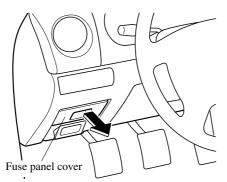

Maintenance and Care **Owner Maintenance**

 3. Pull the fuse straight out with the fuse puller provided on the fuse panel.



Fuse puller

4. Inspect it and replace if it's blown.





Normal

Blown

5. Push in a new fuse of the same rating, and make sure it fits tightly. If it doesn't, have an Authorized Mazda Dealer install it. If you have no spare fuses, borrow one

of the same rating from a circuit not essential to vehicle operation, such as the RADIO circuit.

CAUTION

Always replace a fuse with one of the same rating. Otherwise you may damage the electric system.




J07L_8Q42-EA-01F.book Page 38 Tuesday, March 5, 2002 3:14 PM

Maintenance and Care Owner Maintenance

If the headlights or other electrical components don't work and the fuses in the cabin are OK, inspect the fuse block under the hood. If a fuse is blown, it must be replaced. Follow these steps:


- 1. Turn off the ignition switch and all other switches.
- 2. Remove the fuse block cover.

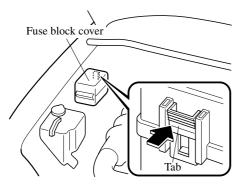

3. If a fuse is blown, replace it with a new one of the same rating.

When replacing the 100A fuse:

- 1. Turn off the ignition switch.
- 2. Remove the negative battery terminal.
- 3. Remove the A nuts.
- 4. Lift the fuse block and remove the B bolts.

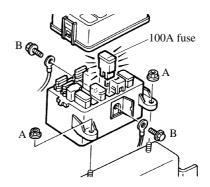

- 5. Replace the fuse with a new one of the same rating.
- 6. Install in the reverse order of removal.



Normal



al

Blown


* 8-38 Form No. 8Q42-EA-01F J07L_8Q42-EA-01F.book Page 39 Tuesday, March 5, 2002 3:14 PM




▼ Fuse Panel Description

۲

Fuse block (Engine compartment)

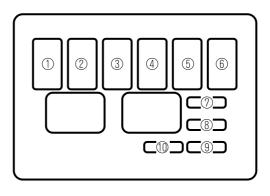

	DESCRIPTION	FUSE RATING	PROTECTED COMPONENT
1	HEAD	40A	Headlights, Rear defroster, Auto antenna
2	FUEL INJ	30A	Fuel injection
3	MAIN	100A	For protection of all circuits
4	IG KEY	60A	All ignition related circuits
5	BLOWER	30A	Blower motor
6	FAN	30A	Cooling fan, Additional fan (air conditioner)
7	BTN 1	30A	Taillights, Dashboard illumination
8	BTN 2	20A	Audio amp, Turn signal lights
9	ABS	20A	Antilock brake system
10	STOP	15A	Brake lights, Horn, Shift lock

 

Form No. 8Q42-EA-01F


-(•

DJ07L_8Q42-EA-01F.book Page 40 Tuesday, March 5, 2002 3:14 PM

Maintenance and Care Owner Maintenance

۲

Fuse panel (Driver's side)

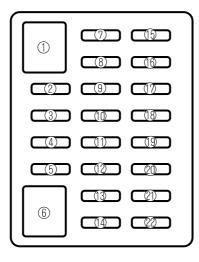

DES	SCRIPTION	FUSE RATING	PROTECTED COMPONENT			
1	ADD FAN	20A	Add fan motor, Magnet clutch			
2	HEAD.LH	15A	Headlights (LH)			
3	HEAD.RH	15A	Headlights (RH)			
4	_		—			
5	ST.SIG	7.5A	Instrument cluster, Cruise control			
6	—					
7	CIGAR	20A	Cigar lighter			
8	RADIO	10A	Audio			
9	F.FOG	15A	Fog lights			
10	TAIL	15A	Taillights, Front parking lights, Side-marker lights			
11	ENGINE	15A	Engine control system			
12	METER	15A	Instrument cluster			

DES	CRIPTION	FUSE RATING	PROTECTED COMPONENT					
13	TURN	7.5A	Turn signal lights					
14	A/B	10A	Supplemental restraint system, Antilock brake system					
15	WIPER	20A	Windshield wipers and washer					
16	P.WIND	30A	Power windows					
17	A/C	7.5A	Air conditioner					
18	HAZARD	10A	Turn signal lights					
19	D.LOCK	10A	Power door lock					
20	AUDIO	20A	Audio amp					
21	DEFOG	15A	Rear defroster					
22	ROOM	10A	Interior light, Auto antenna, Warning buzzers					



Form No. 8Q42-EA-01F

J07L_8Q42-EA-01F.book Page 41 Tuesday, March 5, 2002 3:14 PM

Maintenance and Care

How to Minimize Environmental Paint Damage

The paintwork on your Mazda represents the latest technical developments in composition and methods of application.

Environmental hazards, however, can harm the paint's protective properties, if proper care is not taken.

Here are some examples of possible damage, with tips on how to prevent them.

▼ Etching Caused by Acid Rain or Industrial Fallout

Occurrence

Industrial pollutants and vehicle emissions drift into the air and mix with rain or dew to form acids. These acids can settle on a vehicle's finish. As the water evaporates, the acid becomes concentrated and can damage the finish. And the longer the acid remains on the surface, the greater the chance is for damage.

Prevention

It is necessary to wash and wax your vehicle to preserve its finish according to the instructions in this section. These steps should be taken immediately after you suspect that acid rain has settled on your vehicle's finish.

▼ Damage Caused by Bird Dropping, Insects, or Tree Sap

Occurrence

Bird droppings contain acids. If these aren't removed they can eat away the clear and color base coat of the vehicle's paintwork.

When insects stick to the paint surface and decompose, corrosive compounds form. These can erode the clear and color base coat of the vehicle's paintwork if they are not removed.

 
Tree sap will harden and adhere permanently to the paint finish. If you scratch the sap off while it is hard, some vehicle paint could come off with it.

Prevention

It is necessary to have your Mazda washed and waxed to preserve its finish according to the instructions in this section. This should be done as soon as possible.

Bird droppings can be removed with a soft sponge and water. If you are traveling and these are not available, a moistened tissue may also take care of the problem. The cleaned area should be waxed according to the instructions in this section. Insects and tree sap are best removed with a soft sponge and water or a commercially available chemical cleaner.

Another method is to cover the affected area with dampened newspaper for one to two hours. After removing the newspaper, rinse off the loosened debris with water.



Form No. 8Q42-EA-01F

J07L_8Q42-EA-01F.book Page 42 Tuesday, March 5, 2002 3:14 PM

Maintenance and Care Appearance Care

▼ Water Marks

Occurrence

Rain, fog, dew, and even tap water can contain harmful minerals such as salt and lime. If moisture containing these minerals settles on the vehicle and evaporates, the minerals will concentrate and harden to form white rings. The rings can damage your vehicle's finish.

Prevention

It is necessary to wash and wax your vehicle to preserve its finish according to the instructions in this section. These steps should be taken immediately after you find water marks on your vehicle's finish.

▼ Paint Chipping

Occurrence

Paint chipping occurs when gravel thrown in the air by another vehicle's tires hits your vehicle.

How to avoid paint chipping

Keeping a safe distance between you and the vehicle ahead reduces the chances of having your paint chipped by flying gravel.

NOTE

- The paint chipping zone varies with the speed of the vehicle. For example, when traveling at 90 km/h (56 mph), the paint chipping zone is 50 m (164 ft).
- In low temperatures a vehicle's finish hardens. This increases the chance of paint chipping.
- Chipped paint can lead to rust forming on your Mazda. Before this happens, repair the damage by using Mazda touch-up paint according to the instructions in this section. Failure to repair the affected area could lead to serious rusting and expensive repairs.

8-42

J07L_8Q42-EA-01F.book Page 43 Tuesday, March 5, 2002 3:14 PM

Exterior Care

Follow **all** label and container directions when using a chemical cleaner or polish. Read all warnings and cautions.

▼ Maintaining the Finish

<u>Washing</u>

To help protect the finish from rust and deterioration, wash your Mazda thoroughly and frequently, at least once a month, with lukewarm or cold water.

If the vehicle is washed improperly, the paint surface could be scratched. Here are some examples of how scratching could occur.

Scratches occur on the paint surface when:

- The vehicle is washed without first rinsing off dirt and other foreign matter.
- The vehicle is washed with a rough, dry, or dirty cloth.
- The vehicle is washed at a car wash that uses brushes that are dirty or too stiff.
- Cleansers or wax containing abrasives are used.

NOTE

- Mazda is not responsible for scratches caused by automatic car washes or improper washing.
- Scratches are more noticeable on vehicles with darker paint finishes.

 
Maintenance and Care
Appearance Care

To minimize scratches on the vehicle's paint finish:

- Rinse off any dirt or other foreign matter using lukewarm or cold water before washing.
- Use plenty of lukewarm or cold water and a soft cloth when washing the vehicle. Do not use a nylon cloth.
- Rub gently when washing or drying the vehicle.
- Take your vehicle only to a car wash that keeps its brushes well maintained.
- Don't use abrasive cleansers or wax that contain abrasives.

CAUTION

- Don't use steel wool, abrasive cleaners, or strong detergents containing highly alkaline or caustic agents on chrome-plated or anodized aluminum parts. This may damage the protective coating; also, cleaners and detergents may discolor or deteriorate the paint.
- To prevent damaging the antenna, retract it before entering a car wash facility or passing beneath a low overhead clearance.



J07L_8Q42-EA-01F.book Page 44 Tuesday, March 5, 2002 3:14 PM

Maintenance and Care Appearance Care

Pay special attention to removing salt, dirt, mud, and other foreign material from the underside of the wings, and make sure the drain holes in the lower edges of the doors and rocker panels are clean.

Insects, tar, tree sap, bird droppings, industrial fallout, and similar deposits can damage the finish if not removed immediately. When prompt washing with plain water is ineffective, use a mild soap made for use on vehicles.

Thoroughly rinse off all soap with lukewarm or cold water. Don't allow soap to dry on the finish.

After washing the vehicle, dry it with a clean chamois to prevent water spots from forming.

WARNING

Driving with Wet Brakes: Driving with wet brakes is dangerous. Increased stopping distance or the vehicle pulling to one side when braking could result in a serious accident. Light braking will indicate whether the brakes have been affected. Dry the brakes by driving very slowly and applying the brakes lightly until brake performance is normal.

Waxing

Your vehicle needs to be waxed when water no longer beads on the finish. Always wash and dry the vehicle before waxing it. In addition to the vehicle body, wax the metal trim to maintain its luster.

- 1. Use wax which contains no abrasives. Waxes containing abrasive will remove paint and could damage bright metal parts.
- 2. Use a good grade of natural wax for metallic, mica, and solid colors.
- 3. When waxing, coat evenly with the sponge supplied or a soft cloth.
- 4. Wipe off the wax with a soft cloth.

NOTE

A spot remover to remove oil, tar, and similar materials will usually also take off the wax. Rewax these areas even if the rest of the vehicle doesn't need it.

VRepairing Damage to the Finish

Deep scratches or chips on the finish should be repaired promptly. Exposed metal quickly rusts and can lead to major repairs.

If your Mazda is damaged and needs metal parts repaired or replaced, make sure the body shop applies anticorrosion materials to all parts, both repaired and new. This will prevent them from rusting.

8-44

J07L_8Q42-EA-01F.book Page 45 Tuesday, March 5, 2002 3:14 PM

▼ Bright-Metal Maintenance

- Use tar remover to remove road tar and insects. Never do this with a knife or similar tool.
- To prevent corrosion on bright-metal surfaces, apply wax or chrome preservative and rub it to a high luster.
- During cold weather or in coastal areas, cover bright-metal parts with a coating of wax or preservative heavier than usual. It would also help to coat them with noncorrosive petroleum jelly or some other protective compound.

CAUTION

Don't use steel wool, abrasive cleaners, or strong detergents containing highly alkaline or caustic agents on chrome-plated or anodized aluminum parts. This may result in damage to the protective coating and cause discoloration or paint deterioration.

Maintenance and Care Appearance Care

▼ Underbody Maintenance

Road chemicals and salt used for ice and snow removal and solvents used for dust control may collect on the underbody. If not removed, they will speed up rusting and deterioration of such underbody parts as fuel lines, frame, floor pan, and exhaust system, even though these parts may be coated with anti-corrosive material.

Thoroughly flush the underbody and wheel housings with lukewarm or cold water at the end of each winter. Try also to do this every month.

Pay special attention to these areas because they easily hide mud and dirt. It will do more harm than good to wet down the road grime without removing it.

The lower edges of doors, rocker panels, and frame members have drain holes that should not be clogged. Water trapped there will cause rusting.

A WARNING

Driving with Wet Brakes: Driving with wet brakes is dangerous. Increased stopping distance or the vehicle pulling to one side when braking could result in a serious accident. Light braking will indicate whether the brakes have been affected. Dry the brakes by driving very slowly and applying the brakes lightly until brake performance is normal.



J07L_8Q42-EA-01F.book Page 46 Tuesday, March 5, 2002 3:14 PM

Maintenance and Care Appearance Care

▼Aluminum Wheel Maintenance

A protective coating is provided over the aluminum wheels. Special care is needed to protect this coating.

NOTE

8-46

- Don't use a wire brush or any abrasive cleaner, polishing compound, or solvent on aluminum wheels. They may damage the coating.
- Only use a mild soap or neutral detergent and always use a sponge or soft cloth to clean the wheels. Rinse thoroughly with lukewarm or cold water. Also, be sure to clean the wheels after driving on dusty or salted roads. This helps prevent corrosion.
- Avoid washing your vehicle in an automatic car wash that uses high-speed or hard brushes.
- If your aluminum wheels lose luster, wax the wheels.

▼ Convertible Top Maintenance

The convertible top is made of a special high-grade material, but if it's not taken good care of, hardening, staining, and loss of luster will result. Maintain it under these guidelines.

Washing

Don't wait until the top gets really dirty before cleaning it. Dirt that's there too long will cause deterioration.

- 1. Gently clean the top with a synthetic neutral detergent, lots of water, and a soft brush.
- 2. Rinse it thoroughly with clean water to remove all the soap.
- 3. Wipe it as dry as you can before the water dries on it.
- 4. Then allow it to dry completely before lowering it.

- Automatic and high-pressure car washes are harmful to a convertible top. Avoid them.
- Don't spray water directly on the area where the window glass and the top meet. This would probably cause water to enter the cabin.

J07L_8Q42-EA-01F.book Page 47 Tuesday, March 5, 2002 3:14 PM

<u>Appearance</u>

Dress the top once a month after washing and drying it well. For best results, use a water-based leather treatment or vinyl top dressing.

CAUTION

- Some leather treatment products can ruin the top's gloss. Be careful of the one you choose.
- Don't get any car wax on the top. If you do, remove it with a good leather cleaner.
- Too much treatment on the top can be as damaging as too little. Follow the manufacturer's directions. Don't overdo it!
- Let the top dry completely before lowering after applying treatment or dressing.

▼ Detachable Hardtop Maintenance

Washing

To help protect the hardtop's finish, use a soft cloth or sponge to wash it. Insects, tar, tree sap, bird droppings, industrial fallout, and similar deposits can damage the finish if they are not removed immediately. When prompt washing with plain water is ineffective use a mild soap made for use on vehicles.

Maintenance and Care Appearance Care

CAUTION

- Don't use an automatic car wash.
- Don't use strong soap, chemical detergents, or hot water, and don't wash the hardtop in direct sunlight or when the surface is warm.

Thoroughly rinse with lukewarm or cold water. Don't allow soap to dry on the finish.

Waxing

Wax the hardtop when water no longer beads on the paint. Always wash and dry it before waxing.

CAUTION

- Wiping off dust or dirt with a dry cloth will scratch the finish.
- Don't use abrasive wax. This may damage the protective coating and discolor or deteriorate the paint.

NOTE

A spot remover to remove oil, tar, and similar materials will usually also take off the wax. Rewax these areas.

8-47

J07L_8Q42-EA-01F.book Page 48 Tuesday, March 5, 2002 3:14 PM

Maintenance and Care Appearance Care

Interior Care

▼ Dashboard Precautions

Prevent caustic solutions such as perfume and cosmetic oils from contacting the dashboard. They'll damage and discolor it. If these solutions get on the dashboard, wipe them off immediately.

Do not use glazing agents. Glazing agents contain ingredients which may cause discoloration, wrinkling, cracks and peeling.

▼ Cleaning the Upholstery and Interior Trim

Vinyl

Remove dust and loose dirt from vinyl with a whisk broom or vacuum cleaner. Clean vinyl with a leather-and-vinyl cleaner.

Leather

Real leather isn't uniform and may have scars, scratches, and wrinkles. Clean it with a leather cleaner or mild soap. If the leather gets wet from rain, remove the moisture as soon as possible and dry in a shaded area.

If the seats get wet, promptly remove moisture with a dry cloth and allow it to further dry in a shaded area.

If moisture is not removed, it will cause hardening and shrinkage of the leather. Do not leave vinyl products on the seats for long periods as they may affect the leather quality and coloring.

<u>Fabric</u>

Remove dust and loose dirt from fabric with a whisk broom or vacuum cleaner. Clean it with a mild soap solution good for upholstery and carpets. Remove fresh spots immediately with a fabric spot cleaner.

To keep the fabric looking clean and fresh, take care of it. Otherwise its color will be affected, it can be stained easily, and its fire-resistance may be reduced.

Use only recommended cleaners and procedures. Others may affect appearance and fire-resistance.

▼ Cleaning the Lap/Shoulder Belt Webbing

Clean the webbing with a mild soap solution recommended for upholstery or carpets. Follow instructions. Don't bleach or dye the webbing; this may weaken it.

After cleaning the belts, thoroughly dry the belt webbing and make sure there is no remaining moisture before retracting them.

⚠ WARNING

<u>Damaged Seat Belt:</u>

Using damaged seat belts is dangerous. In a collision, damaged belts cannot provide adequate protection. Have your Authorized Mazda Dealer replace damaged belts immediately.

8-48

J07L_8Q42-EA-01F.book Page 49 Tuesday, March 5, 2002 3:14 PM

 $(\mathbf{0})$




▼ Cleaning the Window Interiors

If the windows become covered with an oily, greasy, or waxy film, clean them with glass cleaner. Follow the directions on the container.

CAUTION

Don't scrape or scratch the inside of the rear window. You may damage the rear window defroster grid.

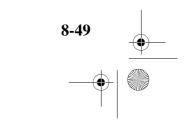


Form No. 8Q42-EA-01F

J07L_8Q42-EA-01F.book Page 50 Tuesday, March 5, 2002 3:14 PM

 -•





J07L_8Q42-EA-01F.book Page 1 Tuesday, March 5, 2002 3:14 PM

9

۲

Customer Information

Important consumer information including warranties and add-on equipment.

Customer Assistance
Customer Assistance (U.S.A.)
Customer Assistance (Canada)
Customer Assistance (Puerto Rico)
Mazda Importer/Distributors
Importer/Distributor9- 7
Distributor in Each Area9- 7
Warranty
Warranties for Your Mazda9- 8
Outside the United States and Canada9- 9
Add-On Non-Genuine Parts and Accessories9-10
Cell Phones9-11
Uniform Tire Quality Grading System (UTQGS)9-12
Uniform Tire Quality Grading System (UTQGS)9-12
Reporting Safety Defects
Reporting Safety Defects
Service Publications
Service Publications9-15

9-1



J07L_8Q42-EA-01F.book Page 2 Tuesday, March 5, 2002 3:14 PM

Customer Information Customer Assistance

Customer Assistance (U.S.A.)

Your complete and permanent satisfaction is our business. We are here to serve you. All Authorized Mazda Dealers have the knowledge and the tools to keep your Mazda vehicle in top condition.

If you have any questions or recommendations for improvement regarding the service of your Mazda vehicle or servicing by Mazda Dealer personnel, we recommend that you take the following steps:

▼STEP 1: Contact Your Mazda Dealer

Discuss the matter with an Authorized Mazda Dealer. This is the quickest and best way to address the issue. If your concern has not been resolved by the CUSTOMER RELATIONS, SALES, SERVICE, or PARTS MANAGER, then please contact the GENERAL MANAGER of the dealership or the OWNER.

▼STEP 2: Call the Mazda National Customer Assistance Center #800

If for any reason you feel the need for further assistance after contacting your dealership management, call Mazda North American Operations' Customer Assistance Center toll-free at: 1 (800) 222-5500.


In order to serve you efficiently and effectively, please help us by providing the following information:

- 1. Your name, address, and telephone number
- 2. Year and model of vehicle
- 3. Vehicle Identification Number (17 digits, noted on your registration or title or located on the upper driver's side corner of the dash)
- 4. Purchase date and current mileage
- 5. Your dealer's name and location
- 6. Your question(s)

If you would like to write a letter, please address it to the following, Attn: Customer Assistance, which corresponds with your state:

REGIONAL OFFICE	AREAS COVERED
Mazda North American Operations	
7755 Irvine Center Drive	
Irvine, CA 92618-2922	All states
P.O. Box 19734	
Irvine, CA 92623-9734	

 This way, we can be sure to respond to you as efficiently as possible. That is our goal. If you live outside the U.S.A., please contact your nearest Mazda Distributor.



J07L_8Q42-EA-01F.book Page 3 Tuesday, March 5, 2002 3:14 PM

Customer Information

9_3

Customer Assistance (Canada)

▼ Satisfaction Review Process

Your complete and permanent satisfaction is of primary concern to Mazda. All Authorized Mazda Dealers have both the knowledge and tools to keep your Mazda in top condition. In our experience, any questions, problems, or complaints regarding the operation of your Mazda or any other general service transactions are most effectively resolved by your dealer. If the cause of your dissatisfaction cannot adequately be addressed by normal dealership procedures, we recommend that you take the following steps:

▼STEP 1 Contact the Mazda Dealer

Discuss the matter with a member of dealership management. If the Service Manager has already reviewed your concerns, contact the owner of the dealership or its General Manager.

▼STEP 2 Contact the Mazda Regional Office

If you feel that you still require assistance, ask the dealer Service Manager to arrange for you to meet the local Mazda Service Representative. If more expedient, contact Mazda Canada Inc.Regional Office nearest you for such arrangements. Regional Office address and phone numbers are shown (page 9-5).

▼STEP 3 Contact the Mazda Customer Relations Department

If still not substantially satisfied, contact the Customer Relations Department, Mazda Canada Inc., 305 Milner Avenue, Suite 400 Scarborough, Ontario M1B 3V4 Canada TEL:1 (800) 263-4680.

Provide the Department with the following information:

- 1. Your name, address and telephone number
- 2. Year and model of vehicle
- 3. Vehicle Identification Number (VIN). Refer to the "Vehicle Identification Labels" page of section 10 of this manual for the location of the VIN.
- 4. Purchase date
- 5. Present odometer reading
- 6. Your dealer's name and location
- 7. The nature of your problem and/or cause of dissatisfaction

The Department, in cooperation with the local Mazda Service Representative, will review the case to determine if everything possible has been done to ensure your satisfaction.

J07L_8Q42-EA-01F.book Page 4 Tuesday, March 5, 2002 3:14 PM

Customer Information Customer Assistance

Please recognize that the resolution of service problems in most cases requires the use of your Mazda dealer's service facilities, personnel and equipment. We urge you to follow the above three steps in sequence therefore for most effective results.

▼ Mediation/Arbitration Program

Occasionally a customer concern cannot be resolved through Mazda's Customer Satisfaction Program. If after exhausting the procedures in this manual your concern is still not resolved, you have another option.

Mazda Canada Inc. participates in an arbitration program administered by the Canadian Motor Vehicle Arbitration Plan (CAMVAP). CAMVAP will advise you about how your concern may be reviewed and resolved by an independent third party through binding arbitration.

Your complete satisfaction is the goal of Mazda Canada Inc. and our dealers. Mazda's participation in CAMVAP makes a valuable contribution to our achieving that goal. There is no charge for using CAMVAP. CAMVAP results are fast, fair and final as the award is binding on both you and Mazda Canada Inc.


▼ Canadian Motor Vehicle Arbitration Plan (CAMVAP)

If a specific item of concern arises, where a solution cannot be reached between an owner, Mazda, and/or one of it's dealers (that all parties cannot agree upon), the owner may wish to use the services offered by the Canadian Motor Vehicle Arbitration Plan (CAMVAP).

CAMVAP uses the services of Provincial Administrators to assist consumers in scheduling and preparing for their arbitration hearings. However, before you can proceed with CAMVAP you must follow your Mazda dispute resolution process as outlined previously.

CAMVAP is fully implemented in all provinces and territories. Consumers wishing to obtain further information about the Program can obtain an information booklet from your dealer, the Provincial Administrator or the Canadian Motor Vehicle Arbitration Plan Office at the following address or telephone number.

Canadian Motor Vehicle Arbitration Office 235 Yorkland Boulevard, suite 300 North York, Ontario M2J 4Y8 1 (800) 207-0685

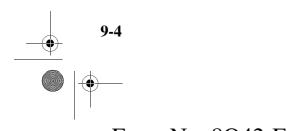

J07L_8Q42-EA-01F.book Page 5 Tuesday, March 5, 2002 3:14 PM




Provincial Administrators may be reached locally as listed below:

Province/Territory	CAMVAP Number
British Columbia & Yukon Territories	(604) 681-0312
Alberta & Northwest Territories	(403) 426-0650
Saskatchewan	(306) 352-9259
Manitoba	(204) 942-7166
Ontario	(416) 596-8824
Atlantic Canada	(902) 422-5413
Quebec	(418) 649-1330

VRegional Offices

 (\blacklozenge)

REGIONAL OFFICES	AREAS COVERED
MAZDA CANADA INC.	
WESTERN REGION	ALBERTA,
8171 ACKROYD ROAD	BRITISH COLUMBIA,
SUITE 2000	MANITOBA,
RICHMOND B.C.	SASKATCHEWAN,
V6X 3K1	YUKON
(604) 303-5670	
MAZDA CANADA INC.	
CENTRAL/ATLANTIC REGION	ONTARIO,
305 MILNER AVENUE	NEW BRUNSWICK,
SUITE 400	NOVA SCOTIA,
SCARBOROUGH, ONTARIO	PRINCE EDWARD ISLAND,
M1B 3V4	NEWFOUNDLAND
1 (800) 263-4680	
MAZDA CANADA INC.	
QUEBEC REGION	
6111 ROUTE TRANS	
CANADIENNE	QUEBEC
POINTE CLAIRE, QUEBEC	
H9R 5A5	
(514) 694-6390	

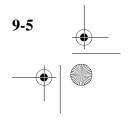

Form No. 8Q42-EA-01F

-(\$

J07L_8Q42-EA-01F.book Page 6 Tuesday, March 5, 2002 3:14 PM

Customer Information Customer Assistance

Customer Assistance (Puerto Rico)

Your complete and permanent satisfaction is our business. That is why all Authorized Mazda Dealers have the knowledge and the tools to keep your Mazda vehicle in top condition.

If you have any questions or recommendations for improvement regarding the service of your Mazda vehicle or servicing by Mazda Dealer personnel, we recommend that you take the following steps:

▼STEP 1


Discuss the matter with an Authorized Mazda Dealer. This is the quickest and best way to address the issue. If your concern has not been resolved by the CUSTOMER RELATIONS, SALES, SERVICE, or PARTS MANAGER, then please contact the GENERAL MANAGER of the dealership or the OWNER.

▼STEP 2

If, after following STEP 1, you feel the need for further assistance, please contact your area's Mazda representative (Indicated on the next page).

Please help us by providing the following information:

- 1. Your name, address, and telephone number
- 2. Year and model of vehicle
- 3. Vehicle Identification Number (17 digits, noted on your registration or title or located on the upper driver's side corner of the dash)
- 4. Purchase date and current mileage
- 5. Your dealer's name and location
- 6. Your question(s)

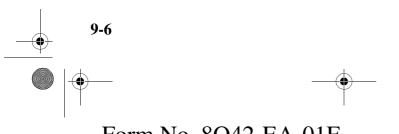

J07L_8Q42-EA-01F.book Page 7 Tuesday, March 5, 2002 3:14 PM

Customer Information
Mazda Importer/Distributors

Importer/Distributor

▼U.S.A.

Mazda North American Operations 7755 Irvine Center Drive Irvine, CA 92618-2922 U.S.A.

P.O. Box 19734 Irvine, CA 92623-9734 U.S.A. TEL:1 (800) 222-5500 (in U.S.A.) (949) 727-1990 (outside U.S.A.)

Distributor in Each Area

VCANADA

Mazda Canada Inc. 305 Milner Avenue, Suite 400 Scarborough, Ontario M1B 3V4 Canada TEL: 1 (800) 263-4680 (in Canada) (416) 609-9909 (outside Canada)

VPUERTO RICO

Plaza Motors Corp. (Mazda de Puerto Rico) P.O. Box 362722, San Juan, Puerto Rico 00936-2722 TEL: (787) 788-9300

▼GUAM

Triple J Motors 157 South Marine Drive, Tamuning, GUAM 96911 USA P.O. Box 6066 Tamuning, Guam 96931 TEL: (671) 649-6555

 
▼ SAIPAN

Pacific International Marianas, Inc. (**d.b.a. Midway Motors**) P.O. Box 887 Saipan, MP 96950 TEL: (670) 234-7524

Triple J Saipan, Inc. (**d.b.a. Triple J Motors**) P.O. Box 500487 Saipan, MP 96950-0487 TEL: (670) 234-7133/3051

▼AMERICAN SAMOA

Polynesia Motors, Inc. P.O. Box 1120, Pago Pago, American Samoa 96799 TEL: (684) 699-9347



Form No. 8Q42-EA-01F

9

J07L_8Q42-EA-01F.book Page 8 Tuesday, March 5, 2002 3:14 PM

Customer Information Warranty

Warranties for Your Mazda

- New Vehicle Limited Warranty
- Distributor Major Component Limited Warranty (Canada only)
- Safety Restraint System Limited Warranty
- Anti-perforation Limited Warranty
- Federal Emission Control Warranty (U.S.A. only)
 - Emission Defect Warranty
 - Emission Performance Warranty
- California Emission Control Warranty (U.S.A. only)
- Emission Control Warranty (Canada only)
- Replacement Parts and Accessories Limited Warranty
- Tire Warranty

NOTE

Detailed warranty information is provided with your Mazda.



J07L_8Q42-EA-01F.book Page 9 Tuesday, March 5, 2002 3:14 PM



Outside the United States and Canada

Government regulations in the United States and Canada require that automobiles meet specific emission regulations and safety standards. Therefore, vehicles built for use in the United States, its territories, and Canada may differ from those sold in other countries.

 
The differences may make it difficult or even impossible for your vehicle to receive satisfactory servicing in other countries. We strongly recommend that you NOT take your Mazda outside these areas.

You may have these problems if you do:

- Recommended fuel may be unavailable. Any kind of leaded fuel or low-octane fuel will affect vehicle performance and damage the emission controls and engine.
- Proper repair facilities, tools, testing equipment, and replacement parts may not be available.

The Mazda warranty applies only to Mazda vehicles registered and normally operated in the United States, its territories, and Canada.





J07L_8Q42-EA-01F.book Page 10 Tuesday, March 5, 2002 3:14 PM

Customer Information Warranty

Add-On Non-Genuine Parts and Accessories

Non-genuine parts and accessories for Mazda vehicles can be found in stores. These may fit your vehicle, but they are not approved by the Mazda for use with Mazda vehicles. When you install non-genuine parts or accessories, they could affect your vehicle's performance or safety system; the Mazda warranty doesn't cover this. Before you install any non-genuine parts or accessories, consult an Authorized Mazda Dealer.

A WARNING


Installation of Non-Genuine Parts or Accessories:

Installation of non-genuine parts or accessories is dangerous. Improperly designed parts or accessories could seriously affect your vehicle's performance or safety system. This could cause you to have an accident or increase your chances of injuries in an accident. Always consult an Authorized Mazda Dealer before you install non-genuine parts or accessories.

Add-On Electrical and Electronic Equipment:

Incorrectly choosing or installing improper add-on equipment or choosing an improper installer is dangerous. Essential systems could damaged, causing engine stalling, air-bag (SRS) activation, ABS inactivation, or a fire in the vehicle. Be very careful in choosing and installing add-on electrical equipment, such as mobile telephones, two-way radios, stereo systems, and car alarm systems.

Mazda assumes no responsibility for death, injury, or expenses that may result from the installation of add-on non-genuine parts or accessories.

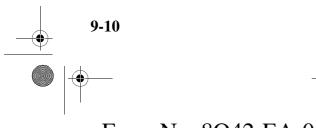

Form No. 8Q42-EA-01F

J07L_8Q42-EA-01F.book Page 11 Tuesday, March 5, 2002 3:14 PM


Cell Phones

Customer Information Warranty

WARNING

<u>Use of Cell Phones and Other Devices by Driver:</u>

Although not Mazda products, use of any electrical devices such as cell phones, computers, portable radios, vehicle navigation or other devices by the driver while the vehicle is moving is dangerous. Dialing a number on a cell phone while driving also ties-up the driver's hands. Use of these devices will cause the driver to be distracted and could lead to a serious accident. If a passenger is unable to use the device, pull off the right-of-way to a safe area before use. If use of a cell phone is necessary despite this warning, use a hands-free system to at least leave the hands free to drive the vehicle. Never use a cell phone or other electrical device while the vehicle is moving and, instead, concentrate on the full-time job of driving.

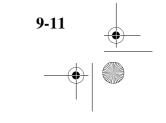



J07L_8Q42-EA-01F.book Page 12 Tuesday, March 5, 2002 3:14 PM

Customer Information Uniform Tire Quality Grading System (UTQGS)

Uniform Tire Quality Grading System (UTQGS)

This information relates to the tire grading system developed by the U.S. National Highway Traffic Safety Administration for grading tires by tread wear, traction, and temperature performance.

▼ Tread Wear

The tread wear grade is a comparative rating based on the wear rate of the tire when tested under controlled conditions on a specified government test course.

For example, a tire graded 150 would wear one-and-a-half times as well on the government course as a tire graded 100.

The relative performance of tires depends upon the actual conditions of their use, however, and may depart significantly from the norm because of variations in driving habits, service practices and differences in road characteristics and climate.

▼Traction-AA, A, B, C

The traction grades, from highest to lowest, are AA, A, B, and C. These grades represent the tire's ability to stop on wet pavement as measured under controlled conditions on specified government test surfaces of asphalt and concrete. A tire marked C may have poor traction performance.

∆ WARNING

The traction grade assigned to this tire is based on braking (straight ahead) traction tests and does not include acceleration cornering (turning), hydroplaning, or peak traction characteristics.

▼ Temperature-A, B, C

The temperature grades are A (the highest), B, and C, represent the tire's resistance to the generation of heat and its ability to dissipate heat when tested under controlled conditions on a specified indoor laboratory test wheel.

Sustained high temperature can cause the material of the tire to degenerate and reduce tire life, and excessive temperatures can lead to sudden tire failure.

Grade C corresponds to a level of performance which all passenger vehicle tires must meet under the Federal Motor Vehicle Safety Standard No. 109. Grades B and A represent higher levels of performance on the laboratory test wheel than the minimum required by law.

9-12

J07L_8Q42-EA-01F.book Page 13 Tuesday, March 5, 2002 3:14 PM

Customer Information Uniform Tire Quality Grading System (UTQGS)

A WARNING

The temperature grade for this tire is established for a tire that is properly inflated and not overloaded. Excessive speed, underinflation, or excessive loading, either separately or in combination, can cause heat buildup and possible tire failure.

These grades will be added to the sidewalls of passenger vehicle tires over the next several years according to a schedule established by the NHTSA and the tire manufacturers.

The grade of tires available as standard or optional equipment on Mazda vehicle may vary with respect to grade.

ALL PASSENGER VEHICLE TIRES MUST CONFORM TO THESE GRADES AND TO ALL OTHER FEDERAL TIRE-SAFETY REQUIREMENTS.


▼ Uniform Tire Quality Grading


Quality grades can be found where applicable on the tire sidewall between tread shoulder and maximum section width.

For example:

Treadwear 200 Traction AA Temperature A

UTQGS MARK (example)

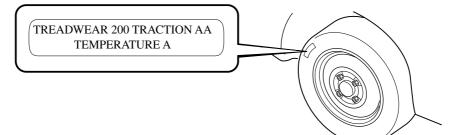

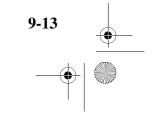

Form No. 8Q42-EA-01F

J07L_8Q42-EA-01F.book Page 14 Tuesday, March 5, 2002 3:14 PM

Customer Information Reporting Safety Defects

Reporting Safety Defects

If you believe that your vehicle has a defect which could cause a crash or could cause injury or death, you should immediately inform the National Highway Traffic Safety Administration (NHTSA) in addition to notifying Mazda Motor Corporation (Your Mazda Importer/Distributor).

If NHTSA receives similar complaints, it may open an investigation, and if it finds that a safety defect exists in a group of vehicles, it may order a recall and remedy campaign. However, NHTSA cannot become involved in individual problems between you, your dealer, or Mazda Motor Corporation (Your Mazda Importer/Distributor).


To contact NHTSA, you may either call the Auto Safety Hotline toll-free at 1 (800) 424-9393 (or 366-0123 in Washington, D.C. area) or write to: NHTSA, U.S. Department of Transportation. Washington, D.C. 20590. You can also obtain other information about motor vehicle safety from the Hotline.

NOTE

If you live in the U.S.A., all correspondence to Mazda Motor Corporation should be forwarded to:

Mazda North American Operations 7755, Irvine Center Drive Irvine, California 92618-2922 P.O. Box 19734 Irvine, CA 92623-9734 Customer Assistance Center or toll free at 1 (800) 222-5500

If you live outside of the U.S.A., please contact the nearest Mazda Distributor shown (page 9-7) in this booklet.

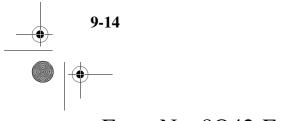

Form No. 8Q42-EA-01F

J07L_8Q42-EA-01F.book Page 15 Tuesday, March 5, 2002 3:14 PM

Customer Information Service Publications

Service Publications

Factory-authorized Mazda service publications are available for owners who wish to do some of their own maintenance and repair.

When requesting any of our publications through an Authorized Mazda Dealer, refer to the chart below.

If they don't have what you need in stock, they can order it for you.

PUBLICATION ORDER NUMBER	PUBLICATION DESCRIPTION
9999-95-042B-02	2002 WORKSHOP MANUAL (English)
9999-95-026G-02	2002 WIRING DIAGRAM (English)
9999-95-031C-02 (U.S.A. only)	2002 OWNER'S MANUAL

▼ WORKSHOP MANUAL:

Covers recommended maintenance and repair procedures of the drive train, body and chassis.

 
▼ WIRING DIAGRAM:

Provides electrical schematics as well as component location for the entire electrical system.

▼OWNER'S MANUAL:

This booklet contains information regarding the proper care and operation of your vehicle. This is not a technician's manual.






J07L_8Q42-EA-01F.book Page 16 Tuesday, March 5, 2002 3:14 PM

 -•






J07L_8Q42-EA-01F.book Page 1 Tuesday, March 5, 2002 3:14 PM


۲

10 Specifications

Technical information about your Mazda.

Identification Numbers	10- 2
Vehicle Information Labels	10- 2
Specifications	10- 4
Specifications	10- 4

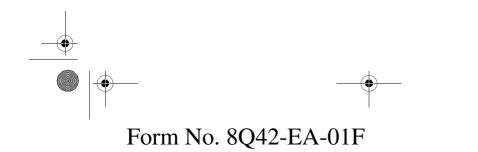

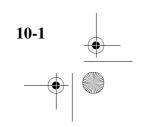


J07L_8Q42-EA-01F.book Page 2 Tuesday, March 5, 2002 3:14 PM

Identification Numbers


Vehicle Information Labels

▼ Vehicle Identification Number


The vehicle identification number legally identifies your vehicle. The number is on a plate attached to the left top side of the dashboard. This plate can easily be seen through the windshield.

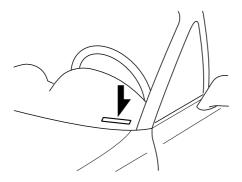

▼ Motor Vehicle Safety Standard Label

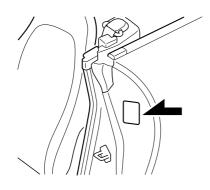


V Chassis Number

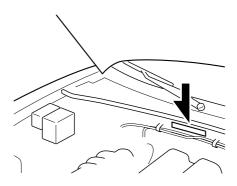

Vehicle Emission Control **Information Label**



▼ Tire Pressure Label

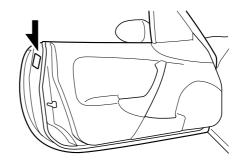




Form No. 8Q42-EA-01F


J07L_8Q42-EA-01F.book Page 3 Tuesday, March 5, 2002 3:14 PM

Identification Numbers

▼Engine Number

۲

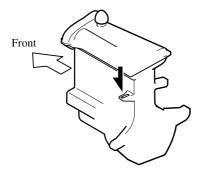

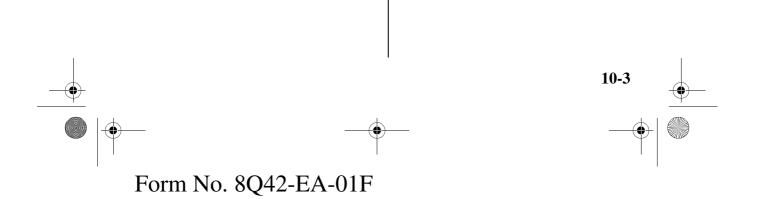

● J07L_8Q42-EA-01F.book Page 4 Tuesday, March 5, 2002 3:14 PM

Specifications

Specifications

▼Engine

 $(\mathbf{\Phi})$

Item	Model
Туре	DOHC-16V in-line, 4-cylinder
Bore×Stroke	83×85mm (3.3×3.4 in)
Displacement	1,840 ml (1,840 cc, 112.2 cu in)
Compression ratio	10.0:1

▼ Electrical System

	Item Model		
Battery		Maintenance-free, 12V-32AH/5HR	
Alternator		12V-80 A	
Starter		12V-1.0 kW	
Smanly mixed mynakon	NGK	BKR5E11, BKR6E11	
Spark-plug number	DENSO	K16PR-U11, K20PR-U11	
Spark-plug gap		1.0—1.1 mm (0.040—0.043 in)	

▼Lubricant Quality

Lubricant	Classification			
Lubricant	API Service ILSA			
	SG (Energy Conserving II)	—		
Engine oil [*]	SH (Energy Conserving II)	GF-I		
	SJ	GF-II		
	SL	GF-III		

*Refer to the recommended SAE viscosity numbers on page 8-13.

Lubricant	Classification		
	A my tomm another	API Service	GL-4 or GL-5
Manual transmission oil	Any temperature	SAE	75W-90
Wanda transmission on	Above 10 °C (50 °F)	API Service	GL-4 or GL-5
	Above 10 C (50 F)	SAE	80W-90
Automatic transmission fluid	ATF M-III or equivalent (e.g. Dexron® III)		
Rear differential oil	API Service GL-5		L-5
Real differential off	SAE	90	
Power steering fluid	ATF M-III or equivalent (e.g. Dexron® III)		
Brake/Clutch fluid	SAE J1703 or FMVSS116 DOT-3		

10-4

Form No. 8Q42-EA-01F

J07L_8Q42-EA-01F.book Page 5 Tuesday, March 5, 2002 3:14 PM

Specifications

▼Capacities

(Approximate Quantities)

Item			Unit		
		L	US qt	Imp qt	
Engine oil	With oil filter	3.8	4.0	3.3	
	Without oil filter	3.6	3.8	3.2	
Coolant		6.0	6.3	5.3	
Manual transmission oil	5-Speed transmission	2.0	2.1	1.8	
	6-Speed transmission	1.8	1.9	1.6	
Automatic transmission fluid		6.7	7.1	5.9	
Rear differential oil		1.0	1.1	0.9	
Fuel tank		48	12.7 (US gal)	10.6 (Imp gal)	

Check oil and fluid levels with dipsticks or reservoir gauges.

▼Dimensions

Item	mm (in)
Overall length	3,945 (155.3), 3,963 (156.0) *
Overall width	1,678 (66.0)
Overall height	1,228 (48.4)
Front tread	1,415 (55.7)
Rear tread	1,440 (56.7)
Wheelbase	2,265 (89.2)

*With license plate holder

▼Weights

Item		Weight
GVWR (Gross Vehicle Weight Rating)		1,335 kg (2,943 lb)
CAWP (Cross Ayle Weight Bating)	Front	685 kg (1,570 lb)
GAWR (Gross Axle Weight Rating)	Rear	670 kg (1,477 lb)

▼Air Conditioner

Gas complies with SAE J639	Maximum operating charge
R-134a	0.4 kg (14.1 oz)



Form No. 8Q42-EA-01F

J07L_8Q42-EA-01F.book Page 6 Tuesday, March 5, 2002 3:14 PM

Specifications

▼Light Bulbs

•

	Light bulb	Wattage
Handlights	High beam (HB3)	60
Headlights	Low beam (HB4)	51
Front turn signal/Parking light	s	27/8
Fog lights		55
Side-marker lights		3.8
Rear turn signal lights		21
Brake lights/Taillights		21/5
High-mount brake lights		21
Reverse lights		21
License plate lights		5
Overhead light		8

▼Tires

Check the tire pressure label for tire size and inflation pressure. Refer to Tire Inflation Pressure on page 8-28.

Standard tire


Tire size	Inflation pressure	
The size	Front	Rear
195/50 R15 82V	$1001D (101 C)^{2} C (1)$	$1001D (101 C)^{2} C (1)$
205/45 R16 83W	180 kPa (1.8 kgf/cm ² , 26 psi)	180 kPa (1.8 kgf/cm ² , 26 psi)


Temporary spare tire


Tire size	Inflation pressure
T115/70 D14	420 kPa (4.2 kgf/cm ² , 60 psi)
T105/70 D15	420 kPa (4.2 kgf/cm ² , 60 psi)

VFuses

Refer to the fuse rating on page 8-37

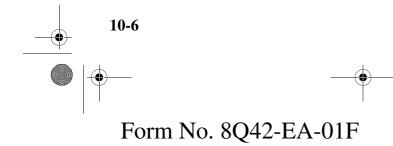

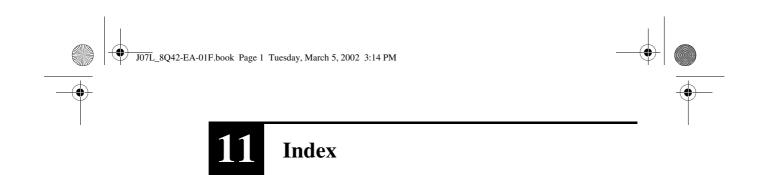

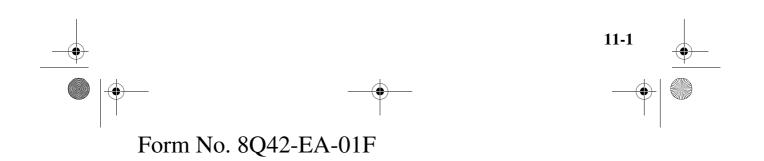

J07L_8Q42-EA-01F.book Page 2 Tuesday, March 5, 2002 3:14 PM

Index

A

Add-On Non-Genuine Parts and	
Accessories	9-10
Air Bag Systems	2-17
Air Filter	8-23
Antenna	6-10
Anti-Lock Brake System (ABS)	5-7
Warning light	5-7
Appearance Care	
Ashtray	6-38
Audio System	
Audio set	6-17
Operating tips for	
audio system	6-10
Safety certification	6-36
Automatic Transmission	
Driving tips	5-12
Fluid	8-20
Overdrive	5-11
Shift-lock override	5-11
Shift-lock system	5-11
Transmission ranges	
-	

B

Battery	
Emergency starting	7-13
Maintenance	8-26
Specifications	10-4
Beeps	
Ignition key reminder	5-29
Lights-on reminder	5-29
Seat belt warning beep	5-29
Before Starting the Engine	
After getting in	
Before getting in	
Body Lubrication	8-23
Brake	
Fluid	8-17

B

Brakes

Anti-lock brake system (ABS)	5-7
Foot brake	5-4
Pad wear indicator	5-8
Parking brake	5-5
Warning light	5-6
Break-In Period	4-6
Bulb Replacement	

С

Capacities	10-5
Carbon Monoxide	4-4
Catalytic Converter	4-3
Cell Phones	9-11
Center Console	6-40
Child Restraint	
Child restraint precautions	2-13
Installing child-restraint	
system	2-16
Cigarette Lighter	
Climate Control System	
Gas specification	10-5
Clutch	
Fluid	8-18
Convertible Top	3-17
Cruise Control	5-13
Cup Holders	6-39
Customer Assistance	

D

Dashboard Illumination	.5-21
Daytime Running Lights	.5-32
Defroster	
Rear window	.5-34
Detachable Hardtop	.3-22
Dimensions	.10-5

11-2

-(\$

J07L_8Q42-EA-01F.book Page 3 Tuesday, March 5, 2002 3:14 PM

D

۲

Door Locks	3-7
Driving In Flooded Area	4-9
Driving Tips	4-6
Automatic transmission	5-12
Break-in period	4-6
Driving in flooded area	4-9
Hazardous driving	4-7
Money-saving suggestions	4-6
Rocking the vehicle	4-7
Trailer towing	4-10
Winter driving	4-8

E

-(0

Emergency Starting	7-13
Flooded engine	7-13
Jump-starting	7-13
Push-starting	7-15
Emergency Towing	7-16
Emission Control System	4-3
Engine	
Coolant	8-15
Exhaust gas	4-4
Hood release	3-15
Oil	8-13
Overheating	7-11
Starting	5-3
Engine Compartment Overview	
Engine Coolant	
Overheating	7-11
Engine Coolant Temperature	
Gauge	5-19
Exhaust Gas	
Exterior Care	8-43

F

Flasher	
Hazard warning	5-35
Headlights	5-30
Flat Tire	
Changing	7-5
Spare tire and tool storage	7-3
Fluids	
Classification	
Owner maintenance	8-10
Fog Lights	5-31
Foot Brake	
Fuel	
Filler lid and cap	
Gauge	
Requirements	
Tank capacity	
Fuses	
Panel description	
Replacement	
1	

G

Gauges	 5-17
Glove Box	 6-39

H

Hazard Warning Flasher	5-35
Hazardous Driving	4-7
Headlights	
Control	5-30
Flashing	5-30
High-low beam	5-30
On reminder	5-30
Hood Release	3-15
Horn	5-34



J07L_8Q42-EA-01F.book Page 4 Tuesday, March 5, 2002 3:14 PM

Index

I

¢

۲

Ignition	
Keys	
Switch	
Immobilizer System	
Indicator Lights	
Cruise set	5-28
Headlight high-beam	
O/D OFF	
Instrument Cluster	
Interior Care	
Interior Light	6-37

J

Jump-Starting	
---------------	--

K

Keyless Entry System	
Keys	

L

Label Information10-2
Lane-Change Signals5-31
Light Bulbs
Replacement8-31
Specifications10-6
Lighter
Lighting Control5-30
Lubricant Quality10-4

Μ

Maintenance	
Introduction	8-2
Owner maintenance	
precautions	8-11
Owner maintenance	
schedule	8-10
Scheduled	8-3
Manual Transmission Operation	5-8
Mesh Pocket	6-40
Meters and Gauges	5-17
Mirrors	
Outside mirrors	3-31
Rearview mirror	3-32
Money-Saving Suggestions	

0

Odometer and Trip Meter	.5-18
Outside Mirrors	.3-31
Overhead Light	.6-37
Overheating	.7-11
Overloading	.4-10

P

Paint Damage	8-41
Parking Brake	5-5
Parking in an Emergency	7-2
Power Door Locks	3-8
Power Steering	5-13
Fluid	8-19
Power Windows	3-13
Push-Starting	7-15

11-4

-(\$

R

 \bigcirc

Rear Window Defroster	5-34
Rearview Mirror	
Recreational Towing	7-17
Rocking the Vehicle	

S

Safety Defects, Reporting9-14
Seat Belt System
3-point type2-7
Automatic locking2-6
Emergency locking2-6
Extender2-10
Pregnant women2-6
Pretensioner and load limiting2-8
Seat belt precautions2-4
Warning beep2-12
Warning light2-11
Seats2-2
Security System
Immobilizer system
Service Publications9-15
Spare Tire and Tool Storage7-3
Specifications10-4
Speedometer
SRS Air Bags
Air bag system description2-23
Passenger-Side air bag
deactivation switch2-20
Supplemental restraint systems
precautions2-17
Warning light2-26
Starting the Engine5-3
Steering Wheel
Steering Wheel Horn5-34
6

Т

Tachometer	5-19
Temporary Spare Tire	
Tiedown	
Hook	7 17
Tires	/-1/
	7.0
Flat tire	
Inflation pressure	
Replacement	8-29
Rotation	8-28
Snow tires	4-8
Spare tire and tool storage .	7-3
Specifications	10-6
Tire chains	
Uniform tire quality grading	5
Uniform tire quality grading system (UTQGS)	
system (UTQGS)	9-12
	9-12
system (UTQGS)	9-12 7-3
system (UTQGS) Tool Towing Description	9-12 7-3 7-16
system (UTQGS) Tool Towing Description Emergency towing	9-12 7-3 7-16 7-16
system (UTQGS) Tool Towing Description Emergency towing Recreational towing	9-12 7-3 7-16 7-16 7-17
system (UTQGS) Tool Towing Description Emergency towing Recreational towing Trailer towing	9-12 7-3 7-16 7-17 4-10
system (UTQGS) Tool Towing Description Emergency towing Recreational towing Trailer towing Trailer Towing	9-12 7-3 7-16 7-16 7-17 4-10 4-10
system (UTQGS) Tool Towing Description Emergency towing Recreational towing Trailer towing Trailer Towing Trip Meter	9-12 7-3 7-16 7-16 7-17 4-10 4-10 5-18
system (UTQGS) Tool Towing Description Emergency towing Recreational towing Trailer towing Trailer Towing Trip Meter Trunk Lid	9-12 7-3 7-16 7-16 7-17 4-10 4-10 5-18 3-9
system (UTQGS) Tool Towing Description Emergency towing Recreational towing Trailer towing Trailer Towing Trip Meter	9-12 7-3 7-16 7-16 7-17 4-10 5-18 3-9 3-11

V



Form No. 8Q42-EA-01F

-(\$

J07L_8Q42-EA-01F.book Page 6 Tuesday, March 5, 2002 3:14 PM


Index

W

•

¢

Warning Lights5-22	2
ABS5-26	,
Air bag system5-27	/
Brake system5-24	ŀ
Charging system5-25	į
Check engine5-26	,
Immobilizer system5-27	/
Seat belt5-27	/
Seat belt pretensioner system 5-27	/
Warranty	5
Washer Fluid	2
Weights	ý
Wheel Replacement)
Windblocker6-41	
Windows	
Power windows	,
Windshield Washer5-33	,
Windshield Wipers5-33	,
Blades replacement	
Winter Driving	,

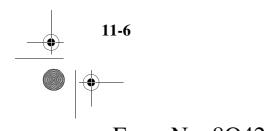

Form No. 8Q42-EA-01F